TK Barina Sedan Owner's Handbook

TK BARINA SEDAN

Vehicle Identification Certificate

Owner's name

Owner's address

Town State Postcode

Vehicle Identification Number (17 character ISOVIN)

Model name

Tyre size fitted Wheel size fitted

Registration number Engine number

Odometer reading

Date of purchase

Selling Retailer's Stamp and Signature

GM Holden Ltd, ABN 84 006 893 232 (hereinafter Holden)

Change of name, address or ownership
In the event of a Safety Recall, or for various reasons, Holden may need to contact you as the owner of this vehicle.

If you have recently changed your address, or name, or purchased this vehicle second-hand, please help us to help you by taking a few minutes to fill in and mail the form on the third page of this handbook.

For information about GM Holden's privacy policy or to update owner details online, please visit Holden's website at www.holden.com.au

Printed in Australia
Part No. 92192788
November 2006 (TK Barina Print 4)

© 2006 GM Holden Ltd
Reproduction in whole or part is prohibited without written approval from GM Holden Ltd, ABN 84 006 893 232

CONTENTS

Layout, gauges, dimmer, clock, security warning indicator lamp, warning lamps, wipers and washers, audio system, horn, headlamps, turn signals, ignition switch, immobiliser, hazard warning, heating and air conditioning, cigarette lighter, ashtray, glovebox and bonnet release. *Dashboard* **1**

Keys and keyless entry, manual operation and child proof locks. *Locks* **2**

Seat adjustment, head restraint adjustment, seat belts, which type of child restraint for your child, child restraints, mirrors, tilt steering, windows, interior lamps, antenna, sun visors, vanity mirror, assist grip, centre console, park brake lever, cupholders and storage. *Know your vehicle* **3**

Safety, engine starting, driving precautions, manual transmission, automatic transmission and Anti-lock Brake System (ABS). *Driving* **4**

Fuel, fuel filling, petrol - emission control and reducing fuel consumption. *Fuel* **5**

Accidents, flat tyre, towing your disabled vehicle, engine overheating, flat battery, airbags, fuses and bulb replacement. *Emergencies* **6**

Miscellaneous checks, check locations, engine coolant level, engine oil level, engine oil consumption, automatic transmission, brake and clutch fluid level, power steering and washer fluid level, tyres and battery. *Weekly checks* **7**

Specifications and identification labels. *Specifications* **8**

Customer Assistance, for New Zealand Holden owners, New Vehicle Warranty Certificate, Parts and Accessories Warranty, Warranty questions and answers. *Customer assistance* **9**

Loading, weights, towing and accessories. *Tow and load* **10**

Interior cleaning, caring for paint, paint polishing, wheels and tyres, exterior glass cleaning and cleaning products. *Cleaning* **11**

Determining service intervals, service intervals, servicing, maintenance schedule, service charges and service coupons. *Servicing* **12**

Index

We thank you for choosing GM Holden. We want to assure you of our continuing interest in your motoring pleasure and satisfaction and compliment you on your choice.

Due to different models and options, you may find reference in this handbook to some equipment not installed in your vehicle.

Please note that all information, illustrations and specifications in this handbook are based on the latest production information available at the time of publication.

Holden reserves the right to make changes at any time without notice and without incurring any obligation.

CHANGE OF ADDRESS OR OWNERSHIP

Please fill in the form below if you have changed your name, address, bought the vehicle second-hand, or have become the new owner. Holden requires these details in order to contact the operator in the event of a safety recall and to keep the Roadside Assistance details up-to-date. For information about Holden's privacy policy, please visit Holden's website at *www.holden.com.au.*
Please mail this form to the address on the back of this page.

Please tick the appropriate box:

☐ Original Owner ☐ Subsequent Owner

Title: (Mr, Mrs, Miss, Ms)

First name in full or initials

Surname or Name of Company/Institution/Government Department

Address

Street/Box

City/Town

State Postcode

1st contact phone no.

2nd contact phone no.

Email address

Vehicle registration number

Holden number (if fitted – refer to Chapter 8)

ISOVIN Number (refer to Chapter 8)

Place in an envelope and mail to:

The Manager - Warranty Administration
Service Department
GM Holden Ltd
Box 548D, G.P.O.
Melbourne
Victoria, 3001

CHANGE OF ADDRESS OR OWNERSHIP

Please fill in the form below if you have changed your name, address, bought the vehicle second-hand, or have become the new owner. Holden requires these details in order to contact the operator in the event of a safety recall and to keep the Roadside Assistance details up-to-date. For information about Holden's privacy policy, please visit Holden's website at *www.holden.com.au.*
Please mail this form to the address on the back of this page.

Please tick the appropriate box:

☐ Original Owner ☐ Subsequent Owner

Title: (Mr, Mrs, Miss, Ms)

First name in full or initials

Surname or Name of Company/Institution/Government Department

Address

Street/Box

City/Town

State Postcode

1st contact phone no.

2nd contact phone no.

Email address

Vehicle registration number

Holden number (if fitted – refer to Chapter 8)

ISOVIN Number (refer to Chapter 8)

Place in an envelope and mail to:

The Manager - Warranty Administration
Service Department
GM Holden Ltd
Box 548D, G.P.O.
Melbourne
Victoria, 3001

CHANGE OF ADDRESS OR OWNERSHIP

Please fill in the form below if you have changed your name, address, bought the vehicle second-hand, or have become the new owner. Holden requires these details in order to contact the operator in the event of a safety recall and to keep the Roadside Assistance details up-to-date. For information about Holden's privacy policy, please visit Holden's website at *www.holden.com.au.*
Please mail this form to the address on the back of this page.

Please tick the appropriate box:

☐ Original Owner ☐ Subsequent Owner

Title: (Mr, Mrs, Miss, Ms)

First name in full or initials

Surname or Name of Company/Institution/Government Department

Address

Street/Box

City/Town

State Postcode

1st contact phone no.

2nd contact phone no.

Email address

Vehicle registration number

Holden number (if fitted – refer to Chapter 8)

ISOVIN Number (refer to Chapter 8)

Place in an envelope and mail to:

The Manager - Warranty Administration
Service Department
GM Holden Ltd
Box 548D, G.P.O.
Melbourne
Victoria, 3001

CHAPTER 1

Dashboard

The following page illustrates the dashboard, identifying and locating each function; page numbers refer you to each item.

Page	
1-2	Layout
1-3	Gauges
1-5	Dimmer, clock and security indicator warning lamp
1-6	Warning lamps
1-9	Wipers and washers
1-10	Audio system and horn
1-11	Headlamps
1-12	Turn signals and ignition switch
1-13	Immobiliser and hazard warning
1-14	Heating and air conditioning
1-18	Cigarette lighter, ashtray and glovebox
1-19	Bonnet release

LAYOUT

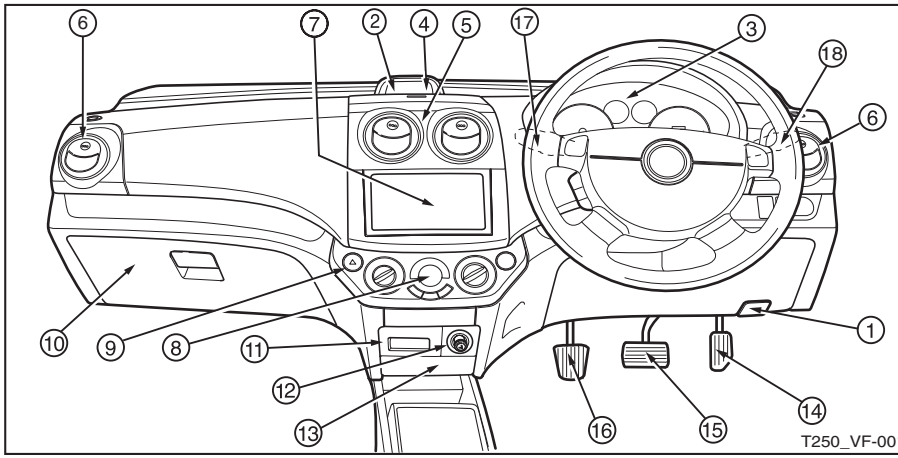

		Page
1	Bonnet release lever	1-19
2	Security warning indicator lamp	1-5
3	Gauges	1-3
4	Digital clock	1-5
5	Centre vents	1-15
6	Side vents	1-15
7	Audio system	1-10
8	Heating and air conditioning	1-14
9	Hazard warning switch	1-13
10	Glovebox	1-18
11	Ashtray	1-18
12	Cigarette lighter	1-18
13	Cup holders	3-17
14	Accelerator pedal	
15	Brake pedal	
16	Clutch pedal	
18	Headlamps and turn signals	1-11
17	Wipers and washers	1-9

GAUGES

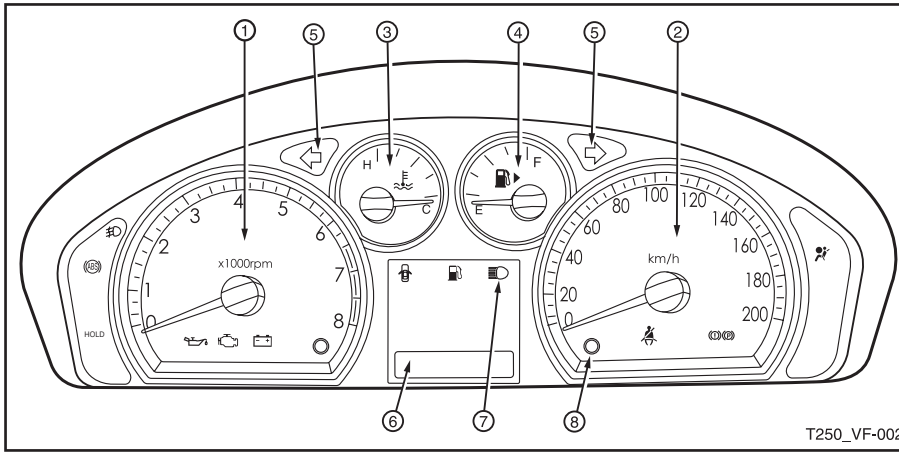

		Page			Page
1	Tachometer	1-4	**5**	Turn signal indicators	1-6
2	Speedometer	1-3	**6**	Odometer and tripmeter	1-3
3	Temperature gauge	1-4	**7**	High beam indicator	1-6
4	Fuel gauge	1-4	**8**	Tripmeter reset button	1-3

Speedometer

The speedometer **(2)** indicates the vehicle's speed in kilometres per hour (km/h).

Odometer and tripmeter

The odometer and tripmeter display is located at the lower middle of gauges **(6)**.

The odometer records the distance travelled since the vehicle was built, and the tripmeter records the distance travelled on a particular journey. The tripmeter can keep a record of two different journeys at the same time. The two tripmeters are distinguished as **TRIP A** and **TRIP B**.

The tripmeter reset button **(8)** is located at the lower left-hand side of the speedometer dial.

With the ignition switched on, push the tripmeter reset button **(8)** to change the display between the **ODOMETER**, **TRIP A** and **TRIP B**. If the tripmeter reset button is pressed for more than one second, the tripmeter resets to zero.

GAUGES cont.

Temperature gauge

The temperature gauge **(3)** indicates the temperature of the engine coolant when the ignition switch is turned to the ON position.

Stop-start driving in heavy traffic, driving at high speed in warm weather or hill climbing may cause the temperature to increase. This is normal, and is no cause for concern.

WARNING:

Do not continue driving with the temperature gauge needle in the red area; the engine is too hot. Continued operation of an overheating engine will result in severe engine damage. Refer to Chapter 6 for overheating instructions.

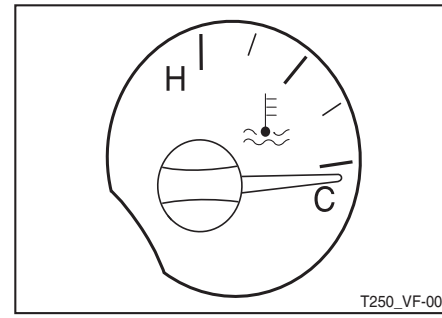

Fuel gauge

The fuel gauge **(4)** indicates the level of fuel within the fuel tank when the ignition switch is turned to the ON position. **F** represents full and **E** represents empty. The needle in the fuel gauge falls to **E** when the ignition switch is turned to the OFF position.

Refer to Chapter 5 for refuelling instructions.

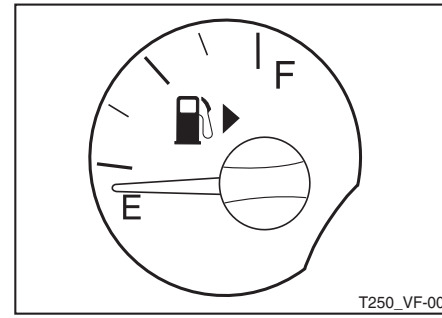

Tachometer

The tachometer **(1)** indicates the engine speed in revolutions per minute (rpm). The red zone of the tachometer indicates critical engine speed.

WARNING:

Never operate the vehicle with the tachometer needle in the red zone. Continued operation with the tachometer needle in the red zone will lead to serious engine damage.

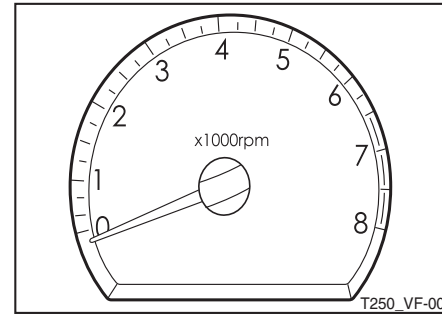

DIMMER, CLOCK AND SECURITY WARNING INDICATOR LAMP

Dimmer – instrument lighting

To adjust the instrument lighting brightness, ensure the headlamps or park lamps are switched on. Turn the dimmer thumb wheel to adjust the instrument lighting to the desired brightness.

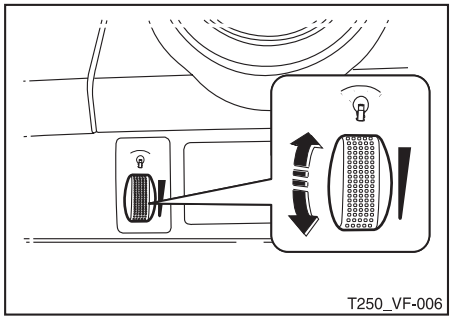

Clock

With the ignition in the ACC (accessory) or ON position, the digital clock displays the time. The digital clock has two adjusting buttons, H and M and a set button, S.

H: Hour button

- To advance 1 hour, press the H button.
- To advance more than 1 hour, press and hold the H button until the desired hour is reached.

M: Minute button

- To advance 1 minute, press the M button.
- To advance more than 1 minute, press and hold the M button until the desired minute is reached.

If the power supply to the clock is interrupted, the clock will need to be reset.

S: Set button

- To reset the time to the nearest hour, press the S button.

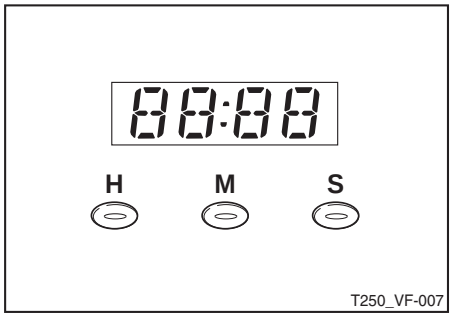

Security warning indicator lamp

(located in clock fascia)

When the doors are locked using the remote keyless entry transmitter, the security lamp comes on.

When the doors are unlocked using a key or the keyless entry transmitter, the security lamp switches off.

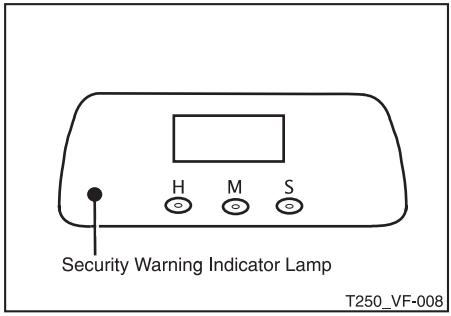

WARNING LAMPS

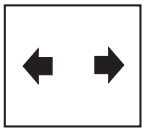

Turn signals

When the turn signal switch or hazard warning light switch are switched on, the turn signal indicator lamp (within the instrument panel) flashes to indicate operation of the turn signal lamps or hazard warning lamps.

High beam

This indicator lamp is illuminated when the headlamp high beams are in use.

Oil pressure

The oil pressure lamp illuminates when the ignition switch is turned to the ON position, and will remain illuminated until the engine is started.

If the oil pressure lamp illuminates while driving, this indicates the oil pressure is dangerously low. Stop immediately and check the engine oil level (refer to Chapter 7).

WARNING:

Do not drive the vehicle with the oil pressure indicator lamp illuminated, consult your Holden Dealer.

Low fuel

The low fuel indicator lamp displays when the fuel tank is approaching empty. It indicates there is approximately 6 litres of fuel remaining in the tank. When the low fuel lamp illuminates, add fuel as soon as possible.

Brake

The brake warning lamp will display when the ignition is in the ON position and the engine is not running, to indicate it is working properly.

If the brake warning lamp illuminates while driving and the park brake is fully released, you should stop the car as soon as possible and consult your Holden Dealer.

WARNING:

Driving with the brake warning lamp on can lead to an accident. If the brake warning lamp stays on, consult your Holden Dealer to have the brakes checked immediately.

WARNING LAMPS cont.

Anti-lock brake system (ABS) (if fitted)

The ABS warning lamp illuminates when the ignition switch is turned to the ON position, and goes out after a few seconds.

If the lamp illuminates while driving, carefully stop the vehicle and turn off the engine. If the lamp stays on or illuminates again while driving, you should have the system checked by your Holden Dealer.

Note: This lamp indicates the anti-lock braking system is not operating. Your vehicle's brake system will still operate conventionally (refer Chapter 4).

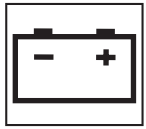

Battery

The battery warning lamp illuminates when the ignition switch is turned to the ON position, and remains on until the engine is started.

If the lamp illuminates while driving, this may indicate that the alternator is not charging the battery. If the alternator drive belt is intact, there is a problem in the charging system. Consult your Holden Dealer.

Door ajar lamp

The door ajar lamp illuminates if any door is not fully closed, when the ignition switch is turned to the ON or START position.

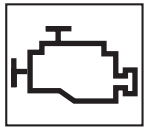

Malfunction indicator lamp

The malfunction indicator lamp monitors the emission control system. This lamp comes on when the ignition switch is in the ON position and the engine is not running. If it stays on or comes on while you are driving, there may be a problem with this system. Consult your Holden Dealer.

WARNING:

If you keep driving your vehicle with the malfunction indicator lamp on, after a while, your emission control may not work, your fuel economy may not be as good and your engine may not run as smoothly. This could lead to costly repairs. Consult your Holden Dealer.

WARNING LAMPS cont.

Hold mode indicator (automatic transmission)

The hold mode indicator lamp comes on and stays on whenever hold mode is active. For hold mode operation refer to Chapter 4, Automatic transmission. To return to automatic operation, press the hold switch again. If the hold mode indicator lamp flashes, have the vehicle serviced immediately.

Seat belt reminder

When the ignition switch is turned to the ON position, the seat belt reminder lamp illuminates to remind occupants to fasten their seat belts.

Airbag and seat belt pretensioners indicator

To check if the warning lamp is working, the SRS warning lamp illuminates for a short time when the ignition is first turned to the ON position.

If the SRS warning lamp illuminates while driving, this indicates the airbag system or seat belt pretensioner system may not function correctly, especially in an accident. Contact your Holden Dealer immediately.

WIPERS AND WASHERS

Windshield wipers

To operate the windshield wipers, turn the ignition switch to the ON position and move the windshield wiper / washer lever downward.

The windshield wipers operate in the following four positions:

- **OFF:** System off. Default position.
- **INT:** Intermittent operation. Lever down one level.
- **LO:** Continuous wipe, slow speed. Lever down two levels.
- **HI:** Continuous wipe, fast speed. Lever down three levels.
- **Single wipe:** To operate the wipers once in case of light rain gently move the wiper switch toward the INT position and release it.

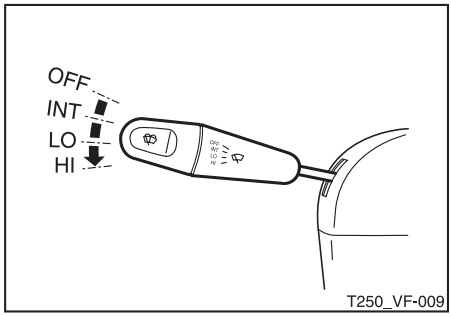

T250_VF-009

Never operate the wipers on dry glass, as this would damage the rubber and scratch the windshield. Ensure the wipers are clear of any snow or ice before switching them on.

Windshield washer

To spray washer fluid onto the windshield, pull the windshield wiper lever toward you. Even if the wipers setting is not selected, the washer will spray fluid and the wipers will operate for three cycles or until the lever is released.

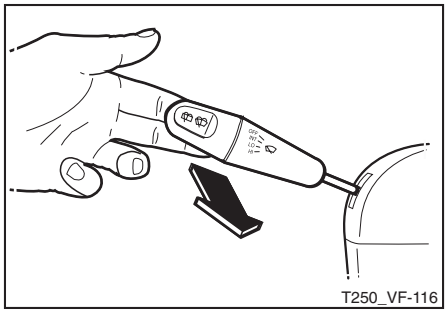
T250_VF-116

AUDIO SYSTEM AND HORN

Audio system

Refer to the operating handbook in the glovebox for all information relating to the operation of the audio system in the vehicle.

Steering wheel audio controls

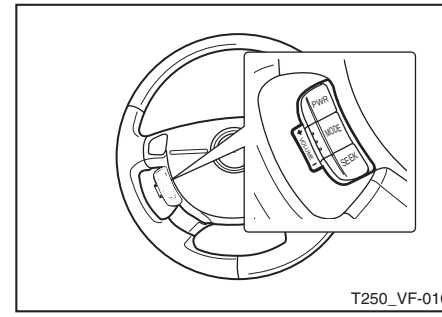

Pressing **PWR** will switch the system on. Pressing again will enable the **MUTE** function or disable the **MUTE** function. To switch the system off, hold down the **PWR** button.

Press **MODE** to switch between the available audio sources.

Press **+** or **−** on the **VOLUME** switch to increase or decrease the volume.

When the radio is active, press **SEEK** for less than half a second to find the next preset station.

When the radio is active, press and hold **SEEK** for more than half a second to find the next receivable station.

When the disc player is active, press **SEEK** for less than half a second to move quickly to the beginning of the next track.

When the disc player is active, press and hold **SEEK** for more than half a second to fast forward through the selected disc.

Horn

The horn is activated by pressing one of the horn symbols on either side of the steering wheel.

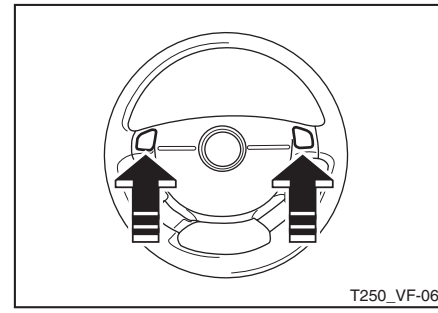

HEADLAMPS

Lamp switch

The lamp switch controls the following:

- Headlamps
- Tail lamps
- Parking lamps
- Number plate lamps
- Instrument panel lamps

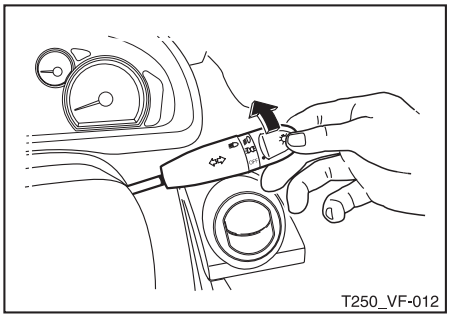

Rotate the end of the switch to ≡OO≡ to switch on parking and other operating lamps. The headlamps will not switch on.

Rotate the end of the switch to ≡D to switch on headlamps. The parking and other operating lamps will also switch on.

Battery saver

If the light switch is left in position ≡OO≡ or ≡D then the key is removed and the driver's door closed, the lamps will automatically switch off after approximately 5 seconds.

High / low beam

Switching between high and low beam requires the low beam lamps to be on. Push the lever toward the front of the vehicle to switch from low beam to high beam. Bring the lever back to the original position to return to low beam.

The headlamp high beam indicator lamp on the instrument panel illuminates when the headlamps are on high beam.

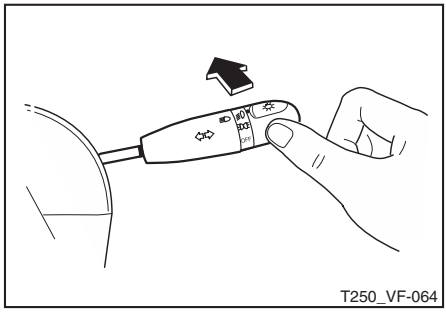

Flashing high beam

It is also possible to flash the high beams for signalling purposes by pulling the lever toward you (even with the headlamps switched off). The headlamps remain in high beam as long as the lever is held in this position.

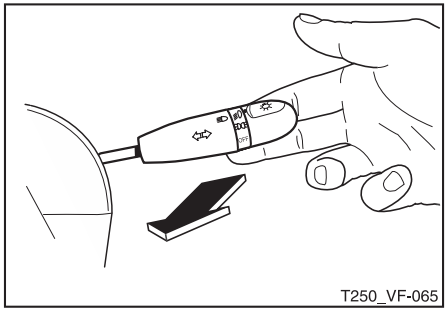

TURN SIGNALS AND IGNITION SWITCH

Turn signals

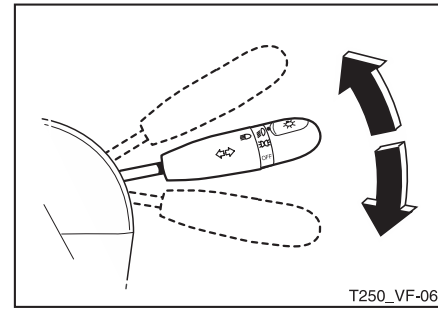

The turn signal lever is on the right-hand side of the steering column. Push the lever up to signal a left turn and down to signal a right turn.

In some turns (such as changing lanes), the steering wheel is not turned far enough to cancel the turn signal. So, to indicate a lane change, move the lever part way and hold it. The lever returns to the neutral position when you release it.

An arrow on the instrument panel flashes when the turn signals are in operation.

Ignition switch

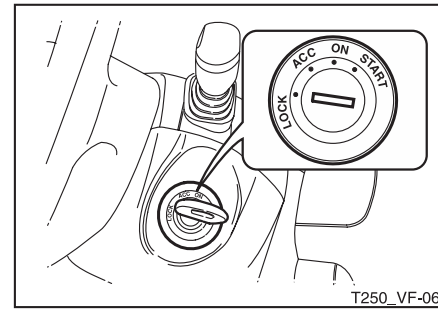

LOCK: This is the normal parking position for the ignition switch; the accessories and engine are off. The ignition key can only be removed from the ignition switch when it is in this position. When the key is removed the ignition and steering are locked. To release the steering lock, insert the key into the switch and turn the key to any other position. If having difficulties turning the ignition key to unlock the steering, turn the steering wheel slightly to the right or left whilst turning the key.

ACC: When the ignition key is in this position, the engine is off, but accessories such as the radio can still operate. To reduce risk of flattening the battery, avoid excessive use of accessories when the engine is not running.

ON: In this position, the engine is ready to start and all electrical systems are active. Do not leave the ignition switch in this position for a prolonged period unless the engine is running, otherwise the battery will discharge.

START: This is the position for starting the engine. The ignition key should be released from this position as soon as the engine starts.

Key reminder

If you leave the key in the ignition switch, and open the driver's door, you will hear a warning chime, reminding you to remove the key.

WARNING:

Do not switch the engine off while the vehicle is moving. Power assisted equipment, such as brakes or steering which are operated by the engine would be ineffective. Never remove the key while the vehicle is moving, as this would lock the steering.

IMMOBILISER AND HAZARD WARNING

Immobiliser

To provide additional security, the vehicle is fitted with a vehicle immobiliser. The engine will not start unless the correct key (correctly programmed) is used.

Note: Any additional or replacement keys must be purchased from and programmed by your Holden Dealer.

If the immobiliser system has developed a fault or an incorrectly programmed key is used in an attempt to start the vehicle, the Security warning indicator lamp (located inside clock fascia) begins to flash.

Hazard warning

Press the switch located to the left of the air outlet selector to switch the hazard warning on and off. The hazard warning works regardless of the ignition switch position.

When switched on all turn signals continuously flash.

Use the hazard warning switch to warn other drivers any time your vehicle becomes a traffic hazard.

The use of the hazard warning while the vehicle is moving may be illegal in some states.

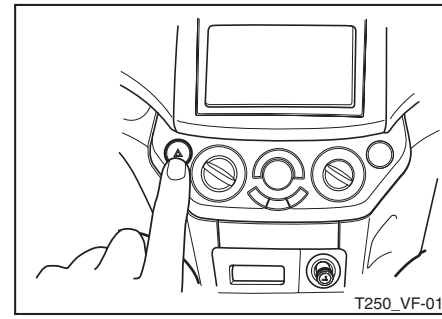
T250_VF-013

HEATING AND AIR CONDITIONING

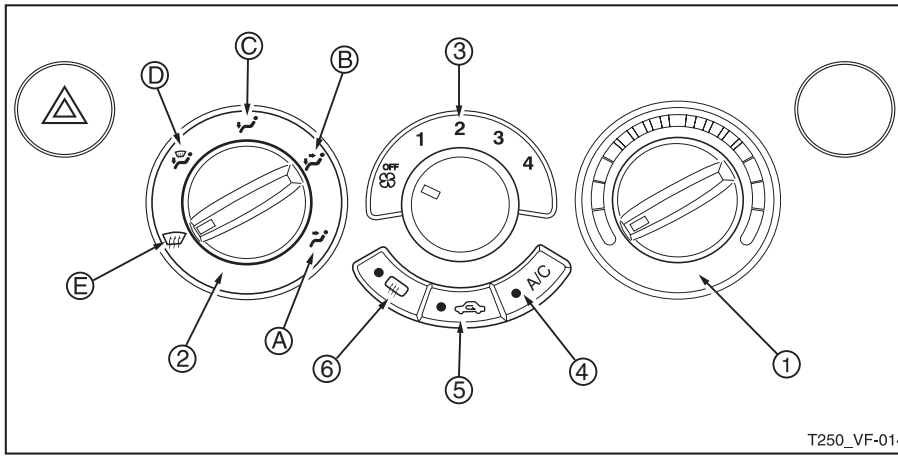

		Page			Page
1	Air temperature selector	1-14	**A**	Air from face level vents	1-16
2	Air outlet selector	1-14	**B**	Air from face and foot vents	1-16
3	Fan speed selector	1-14	**C**	Air from foot vents	1-16
4	Air conditioning switch	1-15	**D**	Air from demist and foot vents	1-16
5	Air recirculation switch	1-15	**E**	Air from demist	1-16
6	Rear window demister switch	1-17			

Air temperature selector ①

This knob controls the temperature. Turn the temperature knob to the red area for warmer air or to the blue area for cooler air.

Air outlet selector ②

This knob controls the air delivery mode. Turn the knob to direct airflow through the desired outlets.

Fan speed selector ③

This knob controls the fan speed. Turn the knob to the right to increase fan speed or to the left to decrease fan speed. There are five fan settings: **OFF, 1, 2, 3 and 4.**

HEATING AND AIR CONDITIONING cont.

Air conditioning switch ④

Press this button to switch the air conditioning on. The engine must be running for this feature to work. Set the fan position to **1**, **2**, **3** or **4** to begin air circulation. An indication light illuminates on the button when the air conditioning is in use.

Note: The fan must be switched on for the air conditioning to work.

Even when the air conditioning system is on, the vehicle will produce warm air if the temperature control knob is set to warm.

Press the air conditioning switch again to switch the air conditioning off.

You may notice water dripping from under the vehicle sometimes after driving with the air conditioning on. This is normal because your air conditioning system removes moisture from the air.

Because the compressor of the air conditioning system shares the engine power, you may notice a slight change in engine power and performance when the compressor operates.

Air recirculation switch ⑤

Press the recirculation switch to recirculate the air in your vehicle. This is useful for keeping dust and odours out or when quick heating or cooling is desired.

The indicator light in the switch illuminates.

Press the switch again to switch off the recirculation feature and allow outside air into your vehicle.

Using the recirculation setting for an extended period of time may cause the windows to fog up. If this happens, switch the recirculation feature off.

Fan off setting

When the fan speed selector is turned anti-clockwise to the OFF position, the air conditioning system switches off. However, if the recirculation switch is turned off, outside air still comes into the vehicle when it is moving.

Air vents

The direction of air flowing out of the dashboard vents can be changed by moving the airflow vents up and down or turning left and right.

HEATING AND AIR CONDITIONING cont.

Air outlet selector ②

Different vents are selected when the air selector is set in the following positions:

Air flows from the four face level outlets in the dash panel.

The blending mode directs airflow through both the dash panel outlets and the floor outlets.

This mode directs most of the airflow through the floor outlets, with some air going to the windshield and side window demister vents.

This mode divides airflow equally between the windshield demister outlets and the floor outlets. A small amount of air will also be directed towards the side windows.

Air flows from the window demist and windshield demist outlets with a small amount from the floor outlets.

Operating tips

- To conserve fuel, switch off the air conditioner when it is not required.
- Keep the area under the front seat clear of objects to help air circulate through the vehicle.
- In hot weather before using the air conditioning system, open the windows for a few minutes to permit hot air to escape if the vehicle has been parked in direct sunlight.
- For maximum cooling, open all the vents and select the highest fan speed. Make sure the air conditioning is turned on. Rotate the temperature control knob to select the coolest temperature and activate the recirculation mode.
- Switch on the air conditioning for a few minutes at least once a week, even in the winter or when the air conditioning system is not being used regularly. This maintains proper lubrication of the compressor and seals, prolonging the service life of the system.
- Driving in stop-and-go traffic may reduce the effectiveness of the air conditioning system.
- To quickly demist the front windshield, use the demister mode, set the temperature to warm, and set the fan at the highest speed.
- For improved demisting of the windows on rainy days or in high humidity, switch the air conditioning on.

HEATING AND AIR CONDITIONING cont.

- The windshield demister mode will operate with the air conditioner on or off.
- Do not use the heating / demisting mode or the demisting mode in extremely humid weather when the temperature control is set to cold.
- If occupants are smoking, it is recommended that recirculation is not used.
- When following another vehicle on dusty roads, or to prevent exhaust fumes o r odours entering your vehicle, select recirculation and close the windows.
- When driving on unsealed roads but where the dust is not airborne, select fresh air (with the windows closed) and set the fan on a high speed. Positive air pressure in the vehicle will prevent dust entry.

Rear window demister ⑥

WARNING:

Less than clear vision for the driver can lead to an accident resulting in personal injury and damage to your vehicle or other property.

The engine must be running for this feature to work.

Press this button to demist the rear window. To switch it off, press the button again.

The demister will automatically switch off 15 minutes after the button is pushed.

The outside mirrors are heated whenever the rear demister is activated.

The indicator lamp on the button illuminates when the system is on.

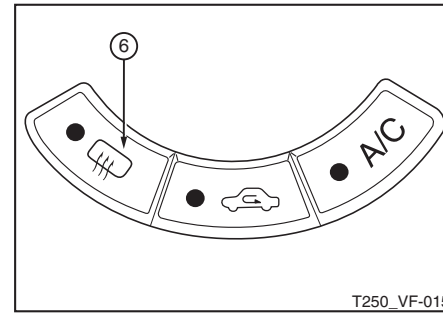

Note: Do not use the rear window demister under the following conditions:

- Engine is not running.
- You are just starting your vehicle.
- There is a buildup of snow or ice on the rear window.

Operating the rear window demister under these conditions could drain the battery. This can damage your vehicle, requiring the replacement of some parts.

Passenger compartment air filter

A passenger compartment air filter is fitted to filter outside air entering the vehicle.

The filter removes contaminants such as pollen and dust from the air entering the vehicle.

Proper maintenance of the passenger compartment air filter is required. Refer to Chapter 12, Servicing.

CIGARETTE LIGHTER , ASHTRAY AND GLOVEBOX

Cigarette lighter

To use the cigarette lighter, push it in and wait for it to pop out.

The ignition must be in the ON or ACC (accessory) position for this feature to work.

WARNING:

The barrel of an operating cigarette lighter can become very hot. It can cause personal injury and damage to your vehicle or other property.

Do not touch the barrel of the cigarette lighter and do not allow children to operate or play with the cigarette lighter.

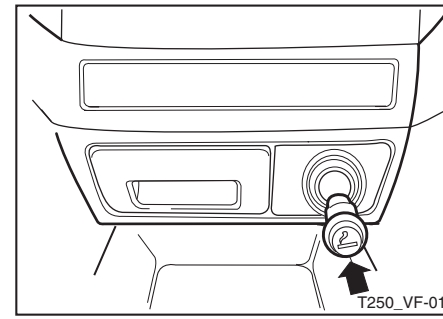

Ashtray

The ashtray should only be used for ash, not for combustible rubbish.

To empty the ashtray, pull the ashtray open.

Push down on the plastic tab at the back of the ashtray.

Pull the ashtray all the way out.

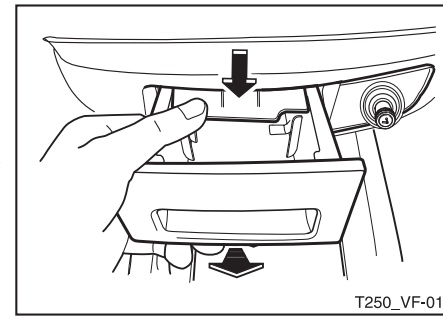

Glovebox

The glovebox is located on the passenger side of the dashboard.

The glovebox can be opened by pulling the handle. Push the lid shut to close the glovebox.

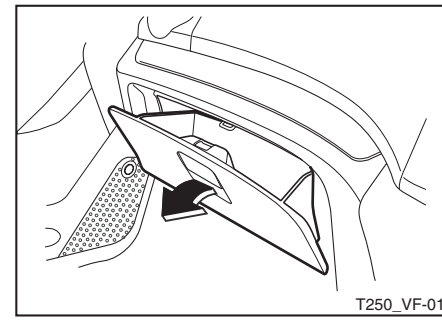

BONNET RELEASE

Bonnet release

The bonnet release lever is located inside the vehicle, under the driver's side of the dashboard. To release the bonnet, pull the lever toward you. The bonnet will release but is prevented from opening fully by a safety catch.

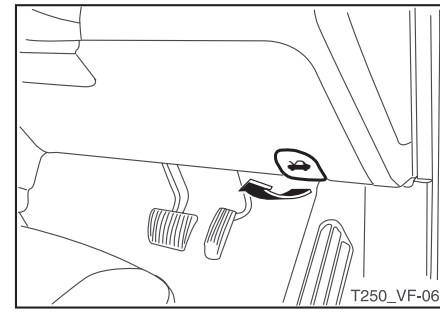
T250_VF-068

To open the bonnet completely, reach in under the centre of the bonnet and lift the safety catch, then raise the bonnet.

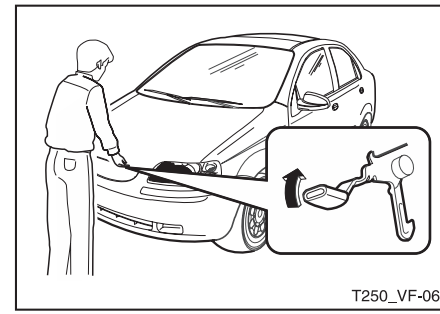
T250_VF-069

To hold the bonnet in the open position, insert the support rod into the slot provided.

WARNING:

To avoid injury and / or damage to the vehicle, check each time the bonnet is closed if the contact area is unobstructed.

While driving if you notice the bonnet has not been closed properly, pull the vehicle over to the side of the road at the earliest possible moment and close the bonnet correctly.

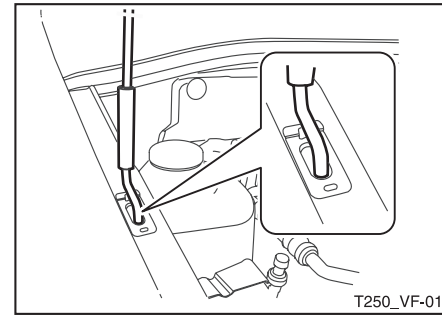
T250_VF-019

Before closing the bonnet, return the support rod to its clip, then lower the bonnet down. Lower the bonnet gradually until nearly closed, then drop it to close fully under its own weight.

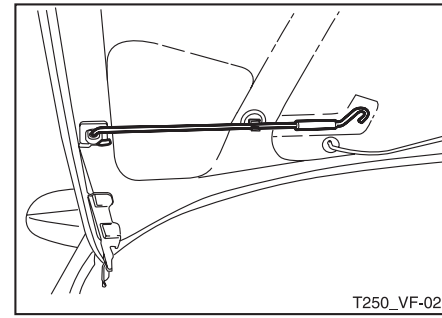
T250_VF-020

CHAPTER 2

Locks

Page

2-2 Keys and keyless entry

2-4 Manual operation

2-6 Child proof locks

KEYS AND KEYLESS ENTRY

Keys

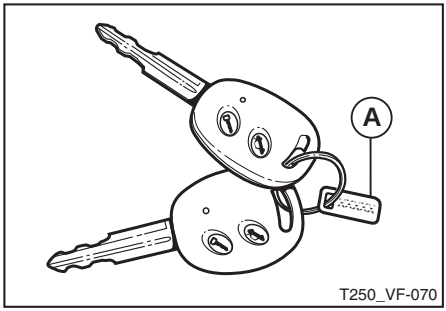

The code number for your keys is stamped on the key plate **(A) ,** which is attached to the key ring. Record the key number, remove the key plate and keep the number and the key plate in a safe place – not in the vehicle.

To protect your car from theft, an electronic immobilisation system has been installed in your vehicle. Only keys with the correct electronic code can be used to start the car. Even if a key has the same profile it will not start the engine if the electronic code is incorrect.

In the event of the original keys being lost, any additional or replacement keys must be purchased from and programmed by a Holden Dealer, using your key code number.

Keyless entry using remote control

The range of the remote control unit should be about 6 metres. This may be reduced due to shadowing and reflection of the radio waves. To operate the remote control unit, direct it at the vehicle and press the required button.

For your convenience, it is recommended the central locking system always be operated using the remote control unit.

Treat the remote control unit with care; it should be protected against moisture and should not be operated unnecessarily.

To unlock the vehicle: Press the button on the remote control unit. The indicator light **(A)** will flash on the remote control unit, the vehicle hazard lamps will flash twice and the doors unlock.

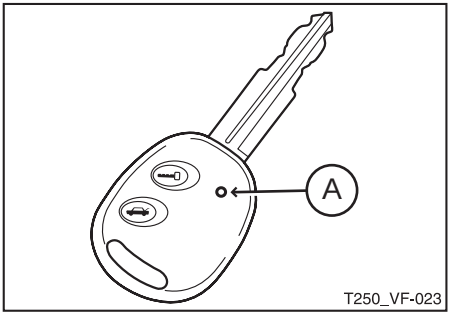

To lock the vehicle: Press the button on the remote control unit. The indicator light **(A)** will flash on the remote control unit, the vehicle hazard lamps will flash once and the doors lock. A single chirp noise will be heard.

To open boot: Press the button on the remote control unit for more than one second. Two chirps will sound as the boot opens.

Note: If you do not open a door or start the engine within 30 seconds, all doors will automatically re-lock.

KEYS AND KEYLESS ENTRY cont.

Security warning indicator lamp

The security warning indicator lamp is located adjacent to the clock.

When you lock the doors using the remote control unit, the security lamp comes on.

When you unlock the doors using a key or the remote control unit, the security lamp switches off.

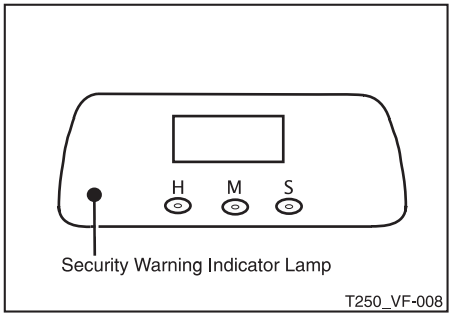

Alarm (if fitted)

Your vehicle is equipped with an alarm system. This is activated when the vehicle is locked by use of the remote control unit. All doors and the bonnet are monitored. If an unauthorised entry is detected the siren sounds and indicators flash for 30 seconds, then switch off for 5 seconds. This will repeat until reset with the remote control unit.

Note: If the remote control unit can not unlock the central locking system, this may be due to the following reasons:

- The voltage of the remote control battery is too low. Change the battery in the remote control unit.
- You may be too far from your vehicle.
- Interference from high-power radio waves from other sources.
- The vehicle's battery may be flat.

Replacing the battery in the remote control unit

Replace the battery if the indicator **(A)** fails to illuminate. The transmitter can still be used for a while, however, this indicates that a new battery is needed.

1. Remove the screw from the back cover.
2. Remove the back cover.
3. Pull the transmitter unit out of the cover and carefully detach the sticker from the unit. Keep the sticker in a clean place.
4. Remove the battery and replace it with the new one, making sure the positive (+) side of the battery is facing up. Refer to Chapter 8, Specifications for the correct battery to be used.
5. Attach the sticker and put the transmitter unit in the cover.
6. Reassemble the transmitter.
7. Test the operation of the transmitter with your vehicle.

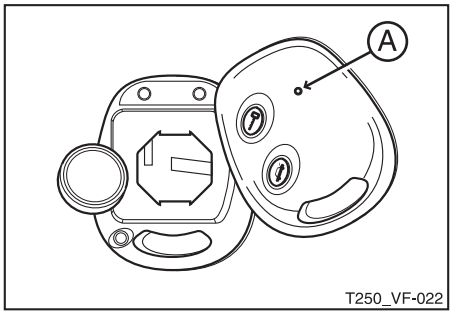

KEYS cont. AND MANUAL OPERATION

Matching the remote control

Matching transmitters to your vehicle may be necessary if you lose or replace a transmitter. Even if only one transmitter is being replaced, you must rematch all of your transmitters at the same time. Up to four transmitters can be matched to your vehicle. See your Holden Dealer to purchase a new transmitter and to have transmitters matched to your vehicle.

WARNING:

The remote control unit contains precision electronic parts. To help avoid transmitter trouble:

- **Do not leave the remote control unit in direct sunlight or on the instrument panel.**
- **Do not treat the remote control unit carelessly.**
- **Do not allow the remote control unit to get wet or ingress moisture.**

Note: If the system is overloaded as a result of repeated operation at short intervals, the power supply may cut off for a short amount of time.

Manual locking system

To lock:

Insert key in the driver's door lock. Turn the key counter clockwise. Allow the key to return to its vertical position for removal. This will lock all the doors.

To unlock:

Insert key in the driver's door lock. Turn the key clockwise. Allow the key to return to its vertical position for removal. This will unlock all the doors.

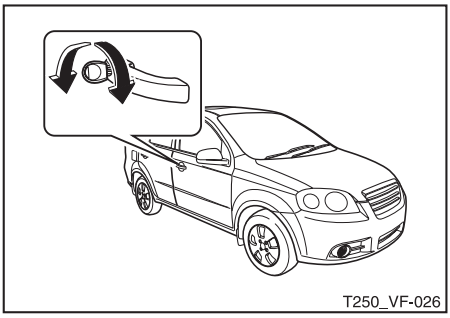
T250_VF-026

Boot lock from outside vehicle

To lock:

To lock the boot, push it down until it latches securely.

To unlock:

Use your key to unlock the boot, or press on your remote control unit for more than one second to unlock. The sound of two chirps will be heard as boot releases.

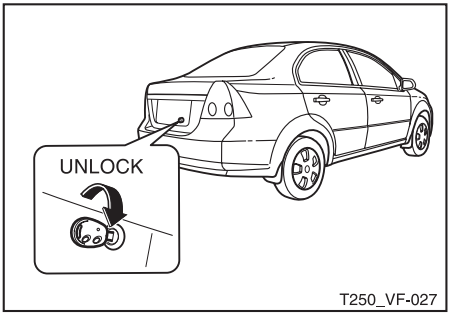

T250_VF-027

MANUAL OPERATION cont.

Boot lock from inside vehicle

To unlock:

You can unlock the boot using the release button located in the driver's door trim.

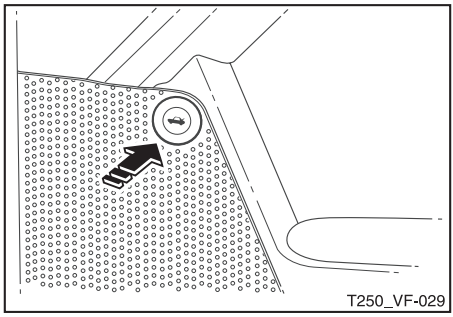

Boot lock from inside boot

To unlock:

If a person becomes trapped inside the boot, a release handle is located in the boot lid. To open pull on the handle and push up boot lid. The handle glows in the dark.

WARNING:

It can be very dangerous to drive with the boot open. Carbon monoxide (CO) gas can come into your vehicle. You can not see or smell CO. It can cause unconsciousness and even death.

If you must drive with it open, make sure all other windows are closed and turn the fan on to the highest speed using any setting that brings in outside air. Doing this will force outside air into the vehicle.

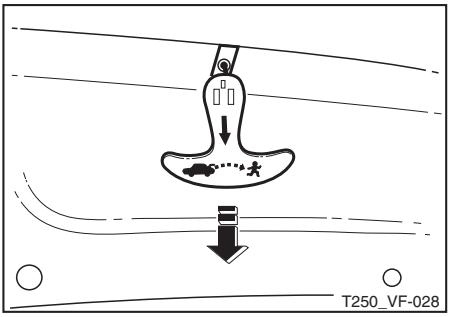

Door locks using knob

The door is unlocked when the knob is pulled up. The door is locked when the knob is pushed down.

The door may be locked behind you by pressing the knob down when the door is open, then shutting the door while the door handle is pulled outward.

The driver's door knob can not be pushed down when the door is open. This prevents locking the driver's door when you leave the keys inside your car by mistake.

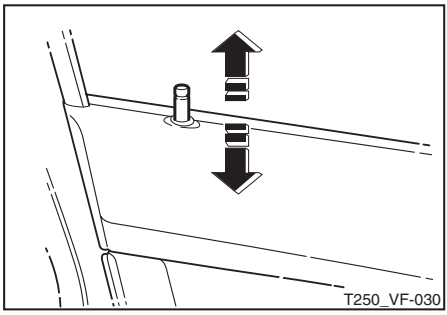

WARNING:

Before driving, ensure the doors are correctly closed , especially when young children are in the vehicle.

CHILD PROOF LOCKS

Child proof locks

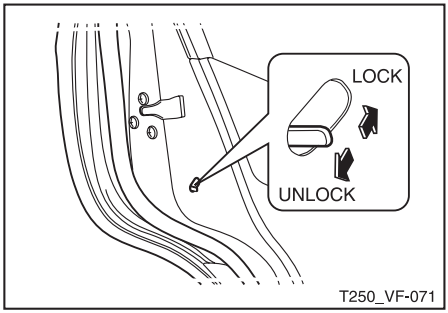

The rear doors on the vehicle can be locked to prevent children from opening them from the inside.

To engage the child lock, open the rear door and locate the child proof lock on the door's rear edge. Move the lever on each rear door to the lock position to lock the doors.

When engaged the door can not be opened from inside, regardless of the lock knob position. However, the door can be opened from the outside.

To disengage the child lock, open the rear door and push the lever in the opposite direction. Close the doors.

WARNING:

For safety, you should check if the lock is operating correctly by attempting to open the door from the inside after the lock has been engaged.

Notes

CHAPTER 3

Know your vehicle

Page	
3-2	Seat adjustment
3-4	Head restraint adjustment
3-5	Seat belts
3-9	Which type of child restraint for your child?
3-10	Child restraints
3-12	Mirrors
3-13	Tilt steering
3-14	Windows
3-15	Interior lamps and antenna
3-16	Sun visors, vanity mirror, assist grip and centre console
3-17	Park brake lever, cupholders and storage

SEAT ADJUSTMENT

Front seats

Lift the lever to unlatch the front seat. Slide the seat to the required position. Release the lever. Try to move the seat back and forth to check if the catch is fully engaged.

WARNING:

Do not adjust the driver's seat when the vehicle is moving, as the seat could move suddenly, causing the driver to lose control.

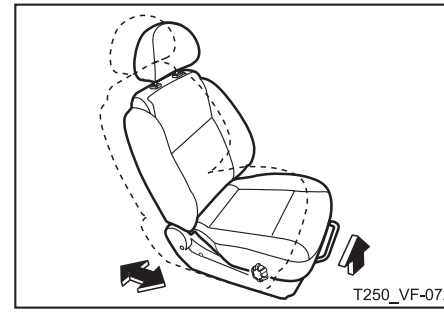

Seatback reclining

Rotate the knob on the inboard side of the seat until the seatback is in the desired position.

WARNING:

To avoid reducing the effectiveness of seat belts, seatback rests should only be semi-reclined when the vehicle is moving.

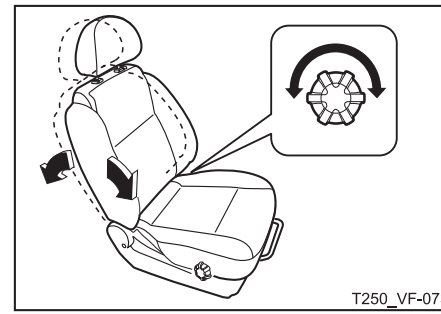

Driver's seat height adjustment

Turn the knob on the outboard side of the seat to raise or lower the seat cushion.

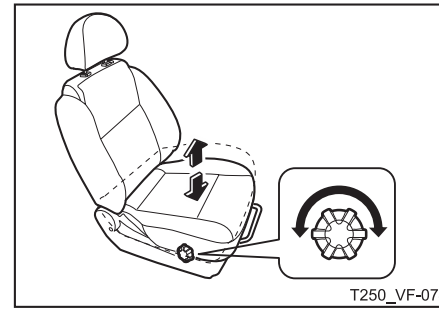

SEAT ADJUSTMENT cont.

Folding rear seatbacks

The seatbacks can be folded down, individually or together, for additional cargo space:

1. Remove seat belt from guide **(A).**

2. Lift the release button located at the top of the seatback and pull the seatback forward.

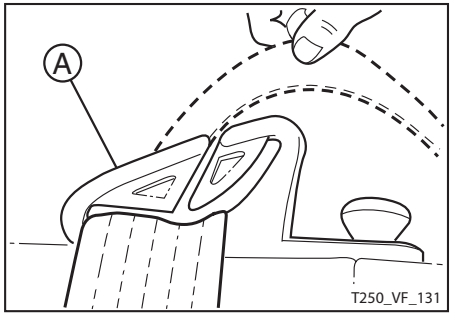

To return the seat to the passenger position:

1. Hook the seat belts to the retaining guide **(B)** to make sure the seat belts are not pinched by the latch.
2. Lift the seatback and push it rearward until it latches. Make sure the seat is locked into place.
3. Unhook the seat belts from the retaining guides **(B)**.
4. Replace the seat belt into guide **(A)** ensuring the seat belt is routed correctly.

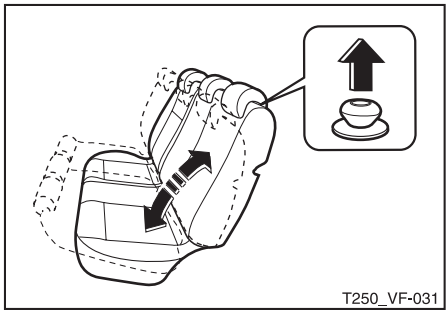

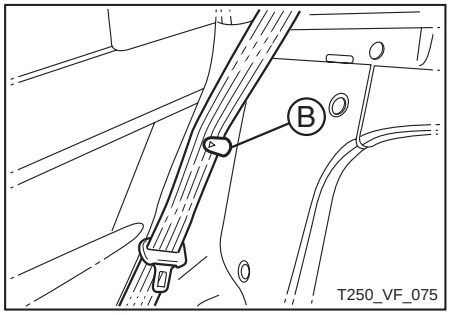

WARNING:

- **Do not press the release on the top of the seatback while the vehicle is moving. This can cause damage to the vehicle or injuries to the occupants.**
- **Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Unrestrained luggage or passengers on a folded seatback can be thrown within or ejected from the vehicle by a sudden stop or accident.**

HEAD RESTRAINT ADJUSTMENT

Adjusting the head restraints

To adjust the height of the head restraint, pull up or push down whilst pressing the lock button in.

The upper edge of the head restraint should be approximately at eye level and not at neck level.

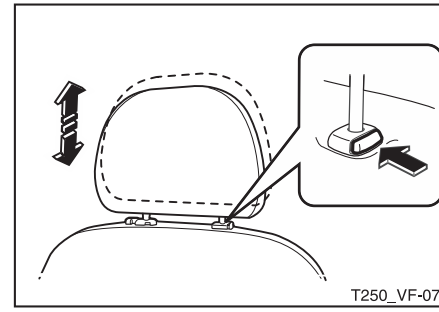
T250_VF-076

Front seat head restraints may also be tilted.

To tilt a head restraint all the way back, pull the top of the head restraint all the way forward, then release it.

To adjust the tilt, pull the head restraint forward to one of three positions.

Head restraints may be removed for maintenance. Replace the head restraint before driving.

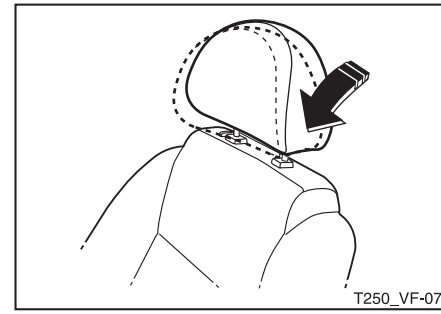
T250_VF-077

To remove a head restraint, pull it up as far as it will go, press and hold the release button located at the bottom of the restraint and then pull the head restraint out.

WARNING:

- **Do not drive the vehicle with the head restraints removed, as it would increase the risk of a neck injury in the event of an accident.**
- **Do not attempt to adjust the driver's head restraint whilst the vehicle is in motion. This could cause a loss of control of the vehicle.**
- **The head restraint safety feature is not intended as a headrest. It is solely for the reduction of whiplash neck movement in an accident involving your vehicle.**

SEAT BELTS

Seat belts

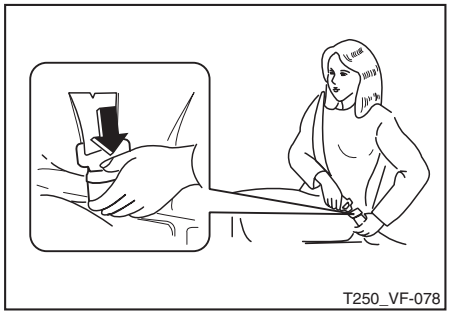
T250_VF-078

To put on the retractor seat belt, pull the metal tongue across your body and clip it into the buckle. When the metal tongue has locked safely into place you will hear a click. After fastening, settle the seat belt by running your hand under the seat belt. Starting at the hip, move your hand across to the buckle then up under the sash. Any extra seat belt length will retract automatically.

The lap section should be worn as low as possible across your hips, not on your waist. Ensure the sash and lap sections of the seat belt are free from twists and fit firmly.

The emergency-locking retractor allows you to move freely while the vehicle is travelling normally. The retractor locks the seat belt immediately on fast braking, impact with a solid object or any quick movement by the wearer.

To release the seat belt, press the release button on the buckle and allow the seat belt to retract. Check that it fully retracts without twisting or turning.

Seat belt height adjustment

WARNING:

Do not attempt to adjust the seat belt height while driving because it could cause loss of control of the vehicle.

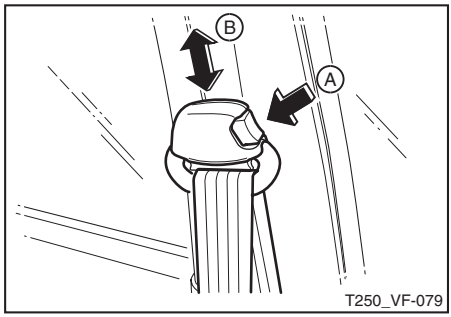

T250_VF-079

- Sitting in a comfortable position put the seat belt on, pull slightly on the seat belt to release tension, then press the release button **(A)** to move the adjuster **(B)** up or down to the proper height.
- Lock the seat belt anchor in position.
- To make sure it is locked in place, try to move the height adjuster without pressing the release button.

Adjust the height so the seat belt passes over the wearer's shoulder and rests against the shoulder. It must not pass over the neck or upper arm. Short people should select a low seat belt guide position and tall people a higher one.

SEAT BELTS cont.

Rear seat belts

To put on the seat belt, pull the shoulder portion of the seat belt down until the metal tongue reaches the buckle. Press the metal tongue into the buckle until it clicks into position.

To release the seat belt, press the release button on the buckle.

WARNING:

- **The tongue must engage fully and lock inside the buckle for the seat belt to function properly.**

Removable rear centre lap / shoulder seat belt

Your vehicle is equipped with a removable rear centre seat belt. The rear centre seat belt system includes a retractable seat belt, a buckle with a black release button and a buckle with a red release button marked CENTRE.

Note: The latch plate at the end of the centre seat belt strap only fits in the buckle with the black release button.

1. First, pull the seat belt from the retractor.
2. Push the latch plate at the end of the seat belt strap into the buckle with the black release button **(A)**. Make sure the mechanism clicks into place.

Also make sure the strap is not twisted and you can see the metal part of the latch plate **(B)**.

To use the seat belt, pull the belt across your body and push the second latch plate **(B)** into the buckle with the red release button **(C)**.

Make sure the belt strap is not twisted or turned and is sitting smoothly across your body.

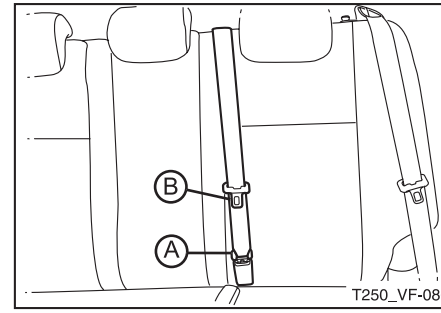

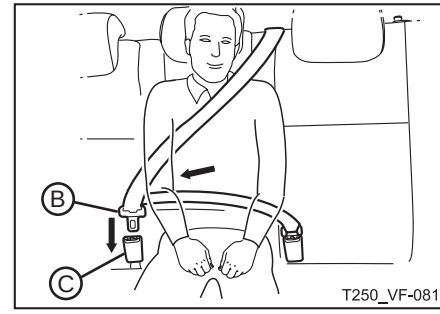

SEAT BELTS cont.

Seat belt pretensioners

The front seat belt system incorporates seat belt pretensioners. Seat belt pretensioners are part of the Supplemental Restraint System (SRS) and operate in conjunction with airbags. In the event of a severe frontal collision, the belt buckles are pulled downwards, tightening both the diagonal and lap sections of the seat belt.

If the belt pretensioners have been activated, the SRS warning lamp on the instrument panel will not go out after the usual few seconds. This is designed to remind you the pretensioner system has been used and therefore needs to be replaced by your Holden Dealer. The seat belts remain operational, apart from this safety feature.

If the SRS warning lamp illuminates at any other time, see your Holden Dealer immediately to have the system checked. Refer Chapter 1, Dashboard for further information about warning lamps and reminder indications.

The driver and all passengers should be properly restrained at all times with the seat belts provided in the vehicle. Failure to do so could increase the severity of injury in accidents.

Seat belt use during pregnancy

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear seat belts. A pregnant woman should wear a lap / shoulder belt with the lap portion worn as low as possible throughout the pregnancy.

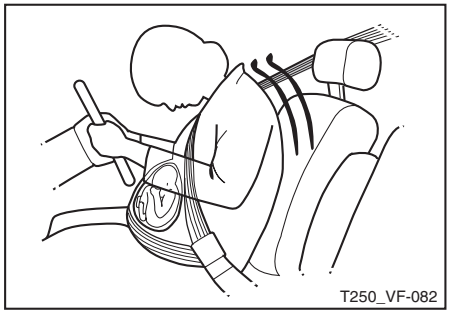
T250_VF-082

SEAT BELTS cont.

Maintenance of seat belts

Check the seat belts regularly. Replace the seat belts if they become frayed or damaged. The operation of the buckle and retractor mechanisms should also be checked. Your Holden Dealer will regularly do these things as part of the scheduled maintenance plan, refer to Chapter 12, Servicing.

The seat belts must be replaced if they have been in use during a severe impact, even if there is no obvious damage.

Clean the seat belts only with a solution of mild soap and lukewarm water. Never use bleach.

Child restraints

If you are travelling with children in the vehicle, child restraints are required. (Refer to 3.9 'Which type of child restraint for your child?' in this chapter).

WARNING:

- **Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.**
- **Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.**
- **Care should be taken to avoid contamination of the webbing with polishes, oil and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.**
- **It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious. Belts should not be worn with straps twisted.**
- **Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.**
- **No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.**

WHICH TYPE OF CHILD RESTRAINT FOR YOUR CHILD?

Children should be restrained at all times and fitted with a child restraint appropriate to their size when travelling in a vehicle. The following outlines guidelines about selecting the appropriate restraint.

Infants

Rearward facing infant capsule	
WEIGHT	HEIGHT
Less than 9kg (1)	Less than 70cm (1)

Designed so that in the event of a collision, impact forces will be evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.

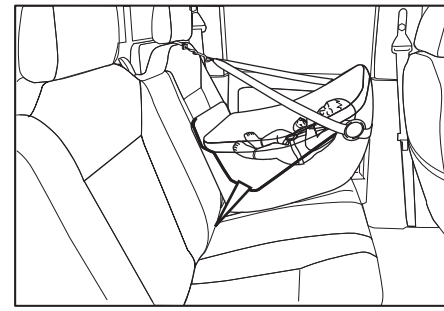

Rearward facing infant capsule

Young children

Forward facing child seat
WEIGHT
8 to 18kg (1)

For use when the child is able to sit and easily hold his or her head upright. It is also possible to purchase convertible seats which can be used as a rearward facing infant restraint or converted to a forward facing child seat.

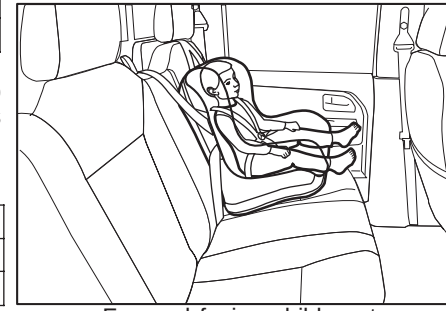

Forward facing child seat

Booster seat with lap / sash seat belt
WEIGHT
14-26 kg (1)

(1) According to AS/NZ 1754:2004

When children outgrow a typical forward-facing child seat but they are still too small for lap / sash seat belts. A booster seat raises the child so the knees bend comfortably, the lap / sash seat belt is correctly positioned and the child can see out the window. A rigid booster seat with a back, side wings and sash guide gives the best protection. In assessing the range of children who would benefit from booster seats, height is a better indicator than age or weight.

Booster seat with lap / sash seat belt

Older children

A child should use a normal lap / sash seat belt only when:

- he / she can sit against the back of the rear seat with knees bent comfortably at the edge of the seat,
- lap belt rests low and snug across the hips – not across the stomach,
- sash belt is centred on shoulder and chest,
- he / she is able to stay seated like this for the entire trip.

Adult lap / sash seat belt

CHILD RESTRAINTS

WARNING – EXTREME HAZARD:

- **Do not use a rearward facing child restraint on a seat protected by a front air bag. The child could be seriously injured if the air bag inflates, as the child's head would be very close to the inflating air bag.**
- **Never install a child restraint in the front seat of a vehicle fitted with Side Impact Air Bags (SIAB). Remember that it is safest for children to be seated in the rear seats.**

Children should be restrained at all times when travelling in a vehicle.

If a child can not see out of the window, do not raise the child by means of an ordinary cushion. The cushion will not stay in place in the event of a crash, and the child would slip out of the straps and become entangled. Ensure the seat belt fits firmly around the child restraint.

WARNING:

- **Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.**
- **Only child restraints that have clips to attach to the vehicle's anchorage fittings (as shown on page 3-11) are to be used. Earlier types of child restraints may not attach securely to this type of anchorage.**
- **Only Standards Australia approved child restraints and harnesses should be used. You should only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.**
- **Where legally allowable, you may install a forward-facing child restraint in the front seat (without side impact air bags), but always move the passenger's seat as far back as it will go.**

CHILD RESTRAINTS cont.

Top strap

Top strap anchor brackets are located behind the back seat on the parcel shelf.

There are three mounting points for left, right and centre seating positions. Anchor brackets are provided in all three positions.

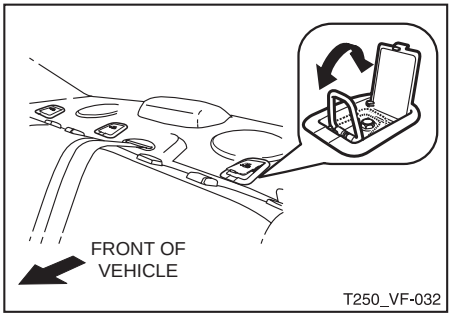

To attach top strap of child restraint:

1. Open up lid of anchor point (**A**).
2. Pull bracket (**B**) of anchor toward the front of the vehicle.
3. Attach top strap of child restraint.

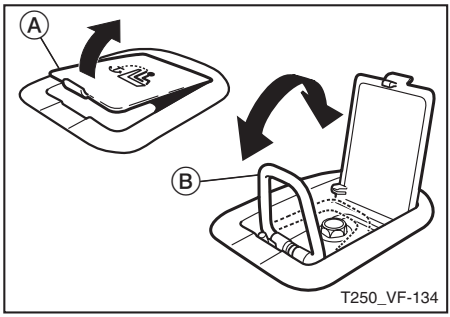

MIRRORS

Inside rear-view mirror

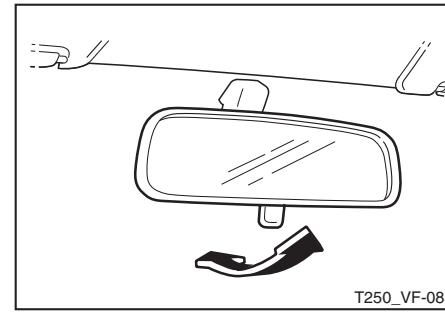
T250_VF-085

To adjust the rear-view mirror, move the mirror right or left, up or down to gain the required angle.

The anti-glare lever on the lower edge of the mirror enables the reflector to be used during night driving. This reduces the glare, at night from following vehicle's headlights.

During normal daylight operation, the lever should be set toward the windshield. To reduce glare at night, move the lever toward you.

Exterior rear-view mirrors

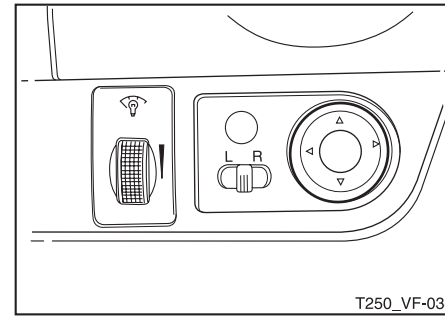

T250_VF-034

The adjustment switches for the electric mirrors are located on the dashboard to the right of the steering wheel and are operational when the ignition switch is turned to the **ON** or **ACC** (accessories) position. Using force to move the glass would damage the electric motor drive system.

Push the selector switch to the left to move the left mirror, or to the right to move the right mirror. Pushing the selector switch to the middle will disengage movement.

Push the arrow pointing in the direction you want to move the mirror. It is not advisable to adjust the mirrors while driving.

The exterior rear-view mirrors are heated whenever the rear demister is activated.

WARNING

The driver and passenger side exterior rear-view mirrors are convex shaped to provide a wider view. Objects seen in these mirrors appear further away than they actually are.

TILT STEERING

Tilt steering

The tilt steering lever is located on the underside of the steering column. To adjust the height of the steering wheel, push the lever away from you. This unlocks the steering column. Move the steering wheel to the desired height and then pull the lever toward you. Try moving the steering wheel up and down to ensure it is securely locked into position.

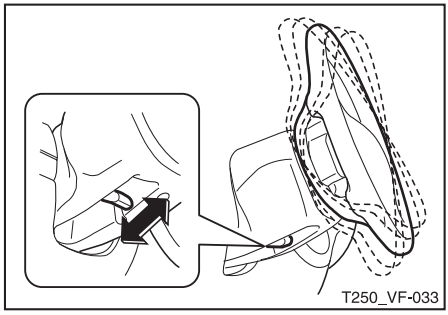

WARNING:

As with all the other driver position controls, do not attempt to adjust the steering wheel while driving.

WINDOWS

Power windows

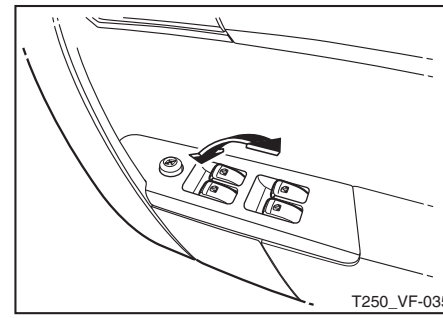

The main switches for the power windows are located on the driver's door. The front switches are for the front windows and the rear switches are for the rear windows.

Individual switches are located on the front passenger and rear doors.

The switches for the power windows are operational when the ignition switch is in the ON or ACC (accessories) position.

The windows can be operated for up to 30 seconds after the ignition switch has been, turned to the LOCK position with the driver's door closed.

- To open a window, push down on the switch and hold it down until the window reaches the desired position then release.
- To close a window, pull up on the switch and hold it up until the window reaches the desired position then release.
- The driver's window has an auto one touch up and down function.
- To open the window press down firmly on the switch and hold for more than half a second then release. The window will automatically open fully. To interrupt the 'auto down' operation, move the switch up or down again.
- To close the window pull back firmly on the switch and hold for more than half a second then release. The window will automatically close fully. To interrupt the 'auto up' operation, move the switch up or down again.
- The lock switch for the power windows is located on the driver's door armrest.
- When the lock switch is in the low position, the passengers are not able to operate their windows using the window switches fitted to their doors. Pressing the lock switch to high position will unlock the passengers power windows and allow operation from the individual window switches.

NOTE: If the window encounters resistance during closing, the window will stop its progress and immediately open again.

In the event of difficulty in opening the window due to frost, for example, press the relevant window switch several times until the window closes.

WARNING:

- **To assure the safety of children and others, ensure that all passengers have their hands, etc. clear of the windows at all times.**
- **Remove the key when leaving the vehicle, to avoid unintentional window operation by children.**
- **Ensure the window lock switch has been set to the activated position when children are in the vehicle.**

INTERIOR LAMPS AND ANTENNA

Interior lamp

The dome lamp is located on the roof above the rear view mirror and is operational regardless of the ignition switch position.

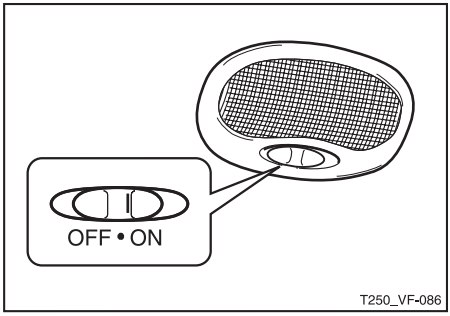

CENTRE: The lamp will switch on when a door is opened and will switch off when all the doors are closed.

ON: The lamp will switch on regardless of the door position.

OFF: The lamp remains off regardless of the door position.

The dome lamp will switch off immediately after all the doors are closed.

Antenna

The antenna is integrated with the rear window demister. Be careful when cleaning the inside of the rear window not to scratch or damage the lines. If the surface is damaged, this could interfere with radio reception. Do not place any stickers on the antenna pattern of the rear window, as this may affect radio reception.

SUN VISORS, VANITY MIRROR, ASSIST GRIP AND CENTRE CONSOLE

Sun visors

The sun visors are used to block out the sun. They can be pivoted to the side when unhooked.

Vanity mirror

The vanity mirror is located on the rear side of both the sun visors.

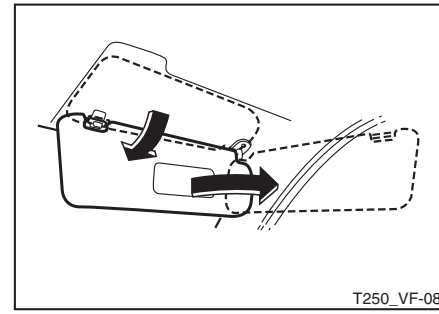

Assist grips

Assist grips are located above the passenger windows to help occupants when getting in and out of the vehicle.

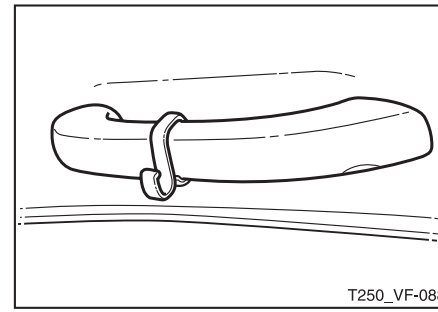

Centre console

The centre console is located between the two front seats.

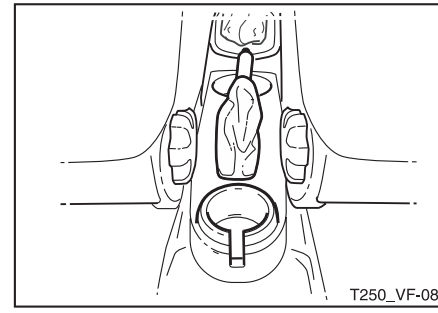

PARK BRAKE LEVER, CUPHOLDERS AND STORAGE

Park brake lever

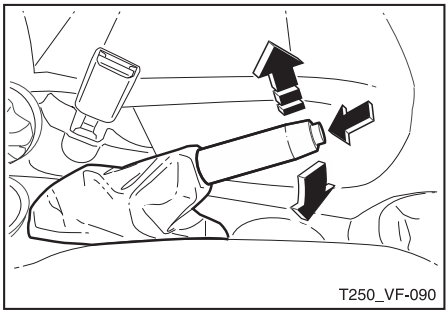
T250_VF-090

Never drive with the park brake applied, as this would overheat and damage the park brake.

The park brake lever is located between the front seats.

Make sure the vehicle is stationary before you apply the park brake.

To apply the park brake lever pull upward firmly.

To release the park brake, pull the park brake lever slightly upward, press the release button and lower the park brake lever all the way down.

A warning lamp on the instrument panel will display when the park brake is applied.

Cupholders

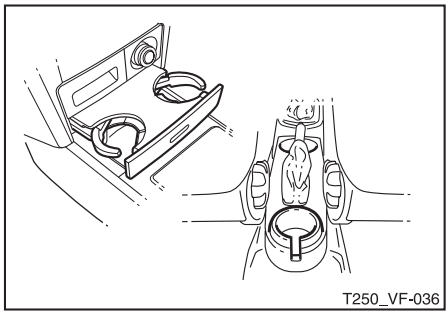
T250_VF-036

Your vehicle is equipped with a cupholder in the instrument panel. Push the lid and the cupholder will automatically slide out.

There is also a cupholder for the rear seat passengers located on the rear of the centre console.

Shopping hooks

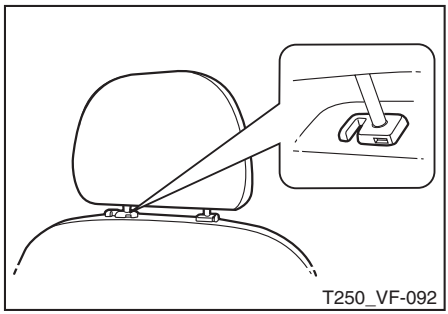
T250_VF-092

Your vehicle is equipped with seatback shopping hooks on each front seatback. Plastic grocery bags or other suitable objects can be attached to the hooks.

CHAPTER 4

Driving

Page

4-2 Safety

4-3 Engine starting

4-4 Driving precautions

4-7 Manual transmission

4-8 Automatic transmission

4-11 Anti-lock brake system (ABS) (if fitted)

SAFETY

Before entering the vehicle

1. Check that windows, mirrors and lights are clean.
2. Check if the tyres are correctly inflated.

Before driving off

1. Ensure that all doors are fully closed and secured.
2. Position your seat for a comfortable driving position, ensuring that all controls are within easy reach.
3. Adjust rear vision mirrors.
4. Fasten seat belts.
5. Check if the warning indicators light up when you turn the key to start the engine, refer to Chapter 1, Dashboard.

   Automatic only: Have the ignition on and press the brake pedal before moving the transmission selector away from the **P** (park) position.

Parking

1. Apply the park brake firmly.
2. Manual transmission: Place in reverse or first gear.

   Automatic transmission: Place in **P** (park) position.
3. Shut all windows.
4. Switch off all exterior lights.
5. Turn the ignition key to the **LOCK** position and remove the key.
6. Lock all doors.

WARNING:

- **To avoid the possibility of vehicle damage or personal injury, always apply the parking brake firmly before exiting the vehicle.**
- **Be careful where you park or drive. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with the hot exhaust system.**
- **Never leave the engine running in an area such as a closed garage or underground car park.**

ENGINE STARTING

1. Check if the park brake is firmly applied and release it only after you have started the engine and are ready to drive off.

2. **Manual:** Press the clutch pedal down fully and move the gear selector lever to the **N** (neutral) position. The clutch pedal can now be released.

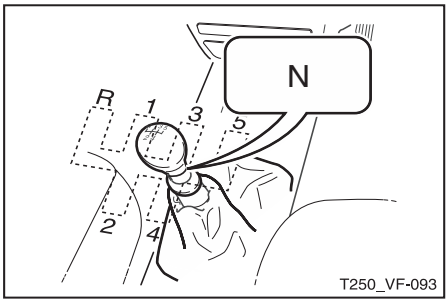

Automatic: Ensure the shift lever is in the **P** (park) or **N** (neutral) position. The engine will not start if it is in any other position. As a safety precaution, you must have your foot on the brake pedal in order to shift the transmission lever out of the **P** (park) position. Refer to 4-9 Shift lock control system.

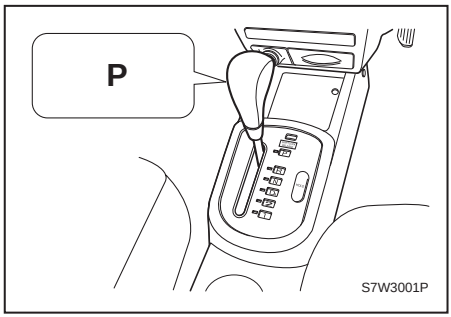

3. Start the engine as outlined below:

   For cold or hot starting, the procedure is the same. Do not touch the accelerator pedal. Simply turn the key to the start position and release when the engine has started.

   If the engine does not start within 10 seconds, wait at least 15 seconds to let the starter motor cool down and retry. If the engine still does not start, release the key and accelerator pedal. Wait another 15 seconds and then repeat the entire procedure. If the engine still fails to start after a maximum of three attempts, contact your Holden Dealer.

Engine will not crank or start

- Remove the key from the ignition switch, insert the key and try starting the engine again.

Note: If the 'Immobiliser Fault' animation illuminates while attempting to start the vehicle, a fault in the vehicle's immobiliser module is present. The vehicle will not start with an immobiliser fault. Contact your Holder Dealer to have the fault rectified.

PETROL ENGINE WARNING:

When trying to start the engine, do not hold the key in the start position for longer than 10 seconds. If unburnt fuel were to reach the catalytic converter and ignite, the catalytic converter could overheat or be destroyed by backfire.

Note: You should not subject the engine to high load conditions (for example full throttle acceleration or high speeds) until it has completely warmed up. Otherwise, you may cause premature engine wear or engine damage.

DRIVING PRECAUTIONS

Running-in

These days, there is no need to follow the historical running-in schedule. However, by observing a few simple precautions during the first few hundred kilometres of driving, you will greatly assist your vehicle's future performance and economy.

For the first 500 km, do not exceed 90 km/h. Up to 1500 km, avoid driving at any one speed, either slow or fast, for any length of time. Include some higher speeds during this period. Always drive at moderate speed until the engine has completely warmed up.

For the first 500 km, heavy braking should be avoided, except in an emergency, since brake misuse during this period could impair future braking efficiency.

Off-road

Following a period of off-road driving, particularly in wet weather, the front of the vehicle should be hosed down to clear any accumulation of mud. In particular, pay specific attention to both sides of the radiator.

Engine misfire warning

If the engine is misfiring, reduce the vehicle speed and do not attempt to tow a caravan or trailer, until the misfiring is corrected by the nearest Holden Dealer. Continued driving while the engine is misfiring could result in the catalytic converter and exhaust system overheating, resulting in vehicle damage.

Loose articles

Do not leave loose articles or luggage in the passenger compartment.

WARNING:

Gas cylinders can leak, creating a risk of fire or explosion. As a precaution, ensure adequate ventilation when carrying gas cylinders. They must be restrained from rolling around, and where possible, placed in the load area of the vehicle. It is recommended that if gas cylinders are frequently transported that a purpose built carrying compartment be used. Transportation of gas cylinders is regulated by legislation in some states.

DRIVING PRECAUTIONS cont.

Loading the vehicle

Loading the vehicle changes the mass distribution and therefore the handling of the vehicle when driving. After loading the vehicle, extra care should be taken to become familiar with the feel of the vehicle while driving. Refer to Chapter 10, Tow and load.

Tyre grip

When driving on wet or slushy roads, it is possible for a wedge of water to build up between the tyre and road surface. This phenomenon, known as aquaplaning, may cause partial or complete loss of grip, which will affect the steering and braking of the vehicle. To reduce the possibility of aquaplaning:

- Reduce speeds during rainstorms.
- Replace tyres when tread wear indicators are visible.
- Regularly check that tyres are properly inflated.

Brakes

Power assisted brakes, which are fitted to your vehicle, utilise vacuum from the engine when it is running. Never let the vehicle run down steep inclines without the engine running. Never coast with the engine switched off.

A decrease in driving, cornering and braking traction occurs when water, snow, ice, gravel or other materials are on the road surface. Driving practices and vehicle speed should be adjusted to suit the road conditions.

Driving through water may affect performance. Applying the brakes lightly will indicate whether they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with an assured clear distance ahead until brake performance returns to normal.

Brake pedal travel should not be obstructed by ill-fitting floor mats or any other material under the pedal which causes interference with normal pedal movement.

Your seat should be positioned so that you can push the brake pedal satisfactorily under all braking conditions.

Power steering

The steering system fitted to your vehicle is power assisted. It has been designed to reduce steering effort. Care should be taken not to hold a prolonged turning force on the steering wheel when the steering is at left or right lock when stationary (e.g. during parking manoeuvres) as this creates high operating temperatures and pressures within the system.

If the power assistance for the steering is not working, because a fault has developed, the vehicle can still be steered. However, due to the much greater effort required to steer, it is recommended that you contact your Holden Dealer immediately.

DRIVING PRECAUTIONS cont.

Snow chains

When driving or fitting snow chains, ensure the following are observed:

- Snow chains may only be used at speeds up to 50 km/h.
- Snow chains may only be fitted to the front wheels.
- When driving on roads that are free of snow, snow chains should only be used for brief periods, as they will wear quickly and may snap.
- The part of the snow chain that covers the tyre tread should not be thicker than 13 mm. The part of the snow chain that wraps around the side of the tyre should not be thicker than 15 mm (including the chain clasp). The use of thicker chains may cause damage to the body of the vehicle.

Mobile phones and CB radios

Mobile phones and CB radios, which use an integrated antenna, may temporarily affect the vehicle's electronics (permanent damage is unlikely) when used inside the vehicle, due to the interference created when transmitting.

Therefore, mobile phones and CB radios that use an antenna fitted to the outside of the vehicle, should be used whenever possible.

If mobile phones or CB radios with an integrated antenna must be used inside the vehicle, care should be taken not to operate them near the dashboard area.

MANUAL TRANSMISSION

Shift pattern

The manual transmission system has five fully synchronised forward gears and one reverse gear. The shift pattern as illustrated, is found on the top of the gear shift lever.

Never attempt to engage reverse gear until the vehicle has completely stopped. A slight pause between pressing the clutch pedal and moving into reverse gear is desirable to allow all the rotating components to stop and avoid gear clashing.

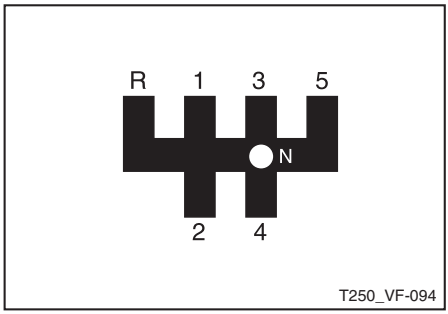

In order to shift into **R** (reverse), you must first lift up the ring on the shift lever and hold it until reverse gear is engaged.

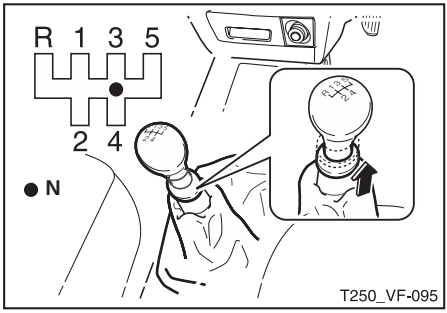

Operating notes

- When shifting from one gear to another, ensure you press the clutch pedal down fully to avoid clashing and possible chipping of the transmission gears.
- Change the gears with moderate effort to allow time for the transmission synchronisers to work properly.
- Whenever reverse is selected with the ignition on, the reversing lights will operate.
- Do not drive with your foot resting on the clutch pedal as damage to the clutch may result.
- When stopped on an incline do not hold the vehicle by slipping the clutch. Use the brakes.
- When climbing steep grades, change down to a lower gear before the engine starts to labour. To maintain safe speeds on a steep downgrade and to reduce brake wear and overheating, change into a lower gear before starting the decent.
- Do not over speed the engine when changing down to the next lowest gear.

Clutch pedal

If under normal vehicle operation, the clutch pedal develops abnormal behaviour, see your Holden Dealer.

AUTOMATIC TRANSMISSION

This system has a four-speed automatic transmission. Its shift indicators are arranged with **P** (park) at one end, followed in sequence by **R** (reverse), **N** (neutral) and then the forward driving ranges.

To prevent the vehicle from 'creeping', you should always have your foot on the brake pedal when shifting out of **P** (park) or **N** (neutral).

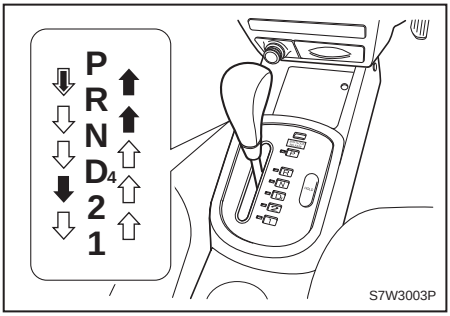

P (park)	This stops the front wheels from rotating and should be selected (together with the park brake) when leaving the vehicle. Never select **P** until your vehicle is fully stopped. The **P** position is one of only two positions (the other is **N**) in which your engine may be started.
R (reverse)	Never select **R** until your vehicle is fully stopped. The reversing lights operate when **R** is selected and the ignition is on. After reversing, make sure the vehicle has fully stopped before selecting a forward gear.
N (neutral)	This is the out-of-gear position. You may restart a stalled engine while the vehicle is still moving or stopped.
D4 (drive)	This is the normal forward driving position and allows the transmission to choose the appropriate gear (1st through to 4th) for the driving conditions and optimum fuel economy. Fourth gear is overdrive which reduces engine speed and noise levels while increasing fuel economy.
2 (second)	This position allows the transmission to shift between 1st and 2nd gear. Use this position when going down a moderate gradient where you want to slow down a little without using the brake or require more power when climbing hills. Shift back into the **D4** position to return to normal driving.
1 (first)	Use this position when a strong braking effect is needed on a steep gradient, below 60 km/h. Even though the transmission gear selector may be in **1**, the transmission does not select first gear until vehicle speed is less than 55 km/h. Even though the transmission gear selector may be in **1**, the transmission shifts up automatically to second gear above a specified engine speed. Move the lever back to **D4** position so the transmission again shifts up into higher gears.

AUTOMATIC TRANSMISSION cont.

Shifting between gear positions

Movement between certain gear positions requires pushing the release button on the front of the selector grip.

When the ignition is on, depress the brake pedal and push the release button on the front of the selector grip as indicated by the black / or white arrows as follows:

Depress the brake pedal and push the release button to shift.

Push the release button to shift.



Shift freely.

HOLD mode

Select **HOLD** mode to use the automatic transmission similar to a manual transmission. Press the **HOLD** button to activate this feature. A light on the instrument panel comes on when **HOLD** mode is selected. Press the **HOLD** button again to return to normal automatic transmission operation.

When **HOLD** mode is activated with the transmission in **D4** (automatic overdrive), the transmission may only shift from third to fourth gear.

When **HOLD** mode is activated with the transmission in **2** (second gear) or **1** (first gear), the transmission is fixed in the selected gear.

Select **HOLD** mode in **D4** (automatic overdrive) to have better traction when you are starting on ice, snow or other slippery surfaces.

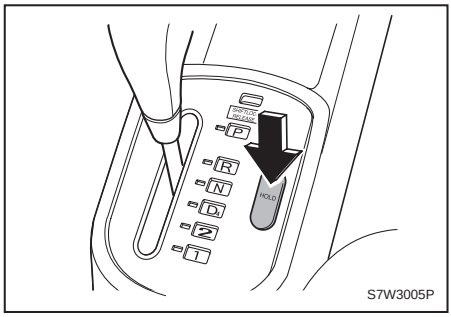

AUTOMATIC TRANSMISSION cont.

Shift lock control system

Your vehicle has an automatic transmission shift lock control system. With the ignition on, you have to apply the foot brake before you can shift out of **P** (park).

If you can not shift out of **P** (park).

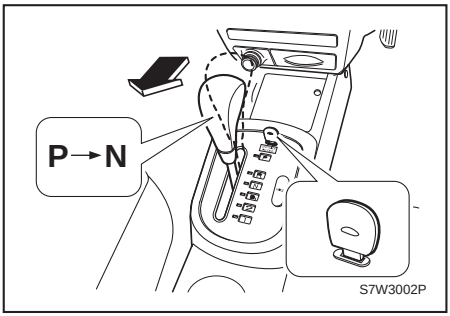

1. Switch off the ignition and remove the key.
2. Remove the shift lock slot cover.
3. Apply and hold the brake pedal.
4. Insert the ignition key into the transmission shift lock slot (located on the centre console in front of the shift position indicator). Press against the spring.
5. Shift the gear lever to **N** (neutral).
6. Remove the key from the slot.
7. Replace the shift lock slot cover.
8. Re-insert the key into the ignition, start the engine and shift the transmission into the desired position.
9. **Note:** If you re-select **P** (park) after this fault has occurred, the above procedure will need to be performed again.
10. Refer to your Holden Dealer as soon as possible.

Automatic transmission emergency operation

If a problem is detected with the automatic transmission, the Malfunction Indicator Lamp illuminates. In this situation, the transmission may not shift automatically or shifting may be much harsher than normal. Have the vehicle serviced as soon as possible by your Holden Dealer. If the Malfunction Indicator Lamp stays on after starting the engine and the transmission does not shift, see 'Shift lock control system', above for more information.

Operating notes:

- Do not go from **P** or **N** to **R** or **D$_4$** with the accelerator pedal depressed.
- When driving down a long hill, reduce your speed and select a lower range. The engine will provide a braking effect. Remember if you ride the brakes, they may overheat, resulting in reduced braking performance.
- Be careful when accelerating, shifting up, shifting down or braking on a slippery surface. The abrupt change in engine speed, such as sudden acceleration or engine braking, could cause the drive wheels to spin or skid.
- Do not depress the accelerator pedal with the brakes on in either **1**, **2**, **D$_4$** or **R**. This would overheat the transmission.
- Do not use the accelerator pedal to hold the vehicle on a slope, use the brakes.
- Do not coast the vehicle in **N** as this lessens your control and the engine braking effect.
- Always slow down in gusty crosswinds.
- For checking automatic transmission fluid level, refer to Chapter 7, Weekly checks.

ANTI-LOCK BRAKE SYSTEM (ABS) (if fitted)

Anti-lock Brake System (ABS) continuously monitors the vehicle's brake system and prevents the wheels from locking, irrespective of the road conditions and tyre grip. It starts to regulate the braking effect as soon as a wheel shows a tendency to lock. The vehicle remains steerable, even in the event of panic braking, for instance on bends or when swerving to avoid an obstacle.

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style.

In an emergency braking situation the driver should keep full force on the brake pedal, without pumping the brake pedal. Pumping the brake pedal when ABS is fitted will reduce the braking efficiency.

The ABS warning light is illuminated for a few seconds when the ignition switch is turned **ON**. If it does not go out, or if it comes on during driving, there is a defect in the ABS. The vehicle's brake system remains operational but without ABS assistance.
You should consult your Holden Dealer as soon as possible.

The braking effect is monitored by the ABS every millisecond during braking.

When your vehicle is in a critical braking condition, ABS will make itself noticeable through pulsing of the brake pedal and the noise of the regulation process, thereby reminding you to match your speed to the road conditions, even though it is keeping control of the braking.

Shortly after driving off, the system performs a self-check. The self-check may be audible.

Brake pedal

Where possible, avoid hard braking. Smooth operation of the brake pedal will increase the life of the brakes and reduce the wear on the braking system. When the vehicle is descending a steep slope, it is advisable to use the foot brake in combination with the engine braking effect.

Brake pedal free play

If under normal vehicle operation the brake pedal develops abnormal behaviour, see your Holden Dealer.

Disc brake wear indicators

The front disc brakes have built-in wear indicators which make a high pitched squealing or chirping sound when the brake lining is worn to where new linings are needed. This sound can come and go, or be heard all the time when the wheels are rolling. This noise may stop when the brake pedal is pushed down firmly. Consult your Holden Dealer and have your brakes checked if you hear this noise. Extensive damage can result if the linings are not replaced when needed.

CHAPTER 5

Fuel

Page

5-2 Fuel

5-3 Fuel filling

5-4 Petrol – emission control

5-5 Reducing fuel consumption

FUEL

EXHAUST WARNING:

CARBON MONOXIDE POISONING

- **Exhaust gases contain carbon monoxide, a dangerous gas, which can cause unconsciousness and even death to both humans and animals.**
- **You could inhale the gases if the exhaust system on your vehicle is faulty.**
- **To protect against exhaust gases entering the vehicle, the exhaust system and body should be inspected:**
  - **each time the vehicle is serviced**
  - **whenever a change is noticed in the sound of the exhaust system**
  - **whenever the exhaust system, underbody or rear of the vehicle is damaged.**
- **Take the vehicle to your Holden Dealer if you think your vehicle needs inspecting for any of the above reasons.**
- **Do not sit (or leave children or pets) in a parked vehicle for any extended period of time with the engine running. Turn the fan on using any setting that brings outside air into the vehicle. Do not run the engine in an enclosed area (such as a garage) any longer than needed to move the vehicle.**
- **Be sure to seal any unused top strap anchor location holes with the supplied plug or with a suitable bolt. Otherwise exhaust gas may enter the vehicle through these holes.**

PETROL WARNING:

- **Petrol is extremely flammable and highly explosive.**
- **Always switch off the engine and any mobile phones when refuelling.**
- **Do not smoke or allow open flames or sparks near the vehicle when refuelling.**
- **If petrol fumes are smelt while driving, the cause should be found and corrected without delay by a Holden Dealer.**
- **Static electricity can ignite fuel vapour. Only use pumps, hoses and containers that are properly grounded when filling up with fuel.**
- **To avoid injury, to you and to others, read and follow all instructions on the petrol station pump.**

ETHANOL WARNING :

- **Under no circumstances should you use fuel containing more than 10% ethanol. Use of such fuels may result in engine malfunction, starting and operating difficulties, and materials degradation. These adverse effects could result in permanent damage to your vehicle and personal injury. Purchasing your fuel from a reputable fuel retailer may reduce the risk of purchasing fuel with more than 10% ethanol or fuel which contains abnormal fuel properties.**
- **It is also important to note that when ethanol blends are used, fuel consumption can be expected to increase due to the lower energy content of ethanol.**

FUEL FILLING

To release the fuel filler door, pull up on the release lever. The release lever is located near the front corner of the driver's seat.

Remove the fuel cap by turning it anticlockwise.

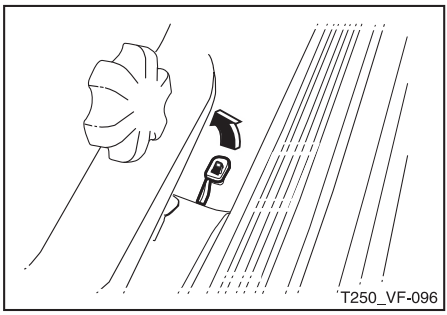

FUEL CAP WARNING:

If you open the cap rapidly while pressure in the tank is high, fuel may spray out from the tank. Before you fully open the cap, turn it slightly and pause before continuing to release the pressure from inside the tank.

After refuelling, turn the fuel cap clockwise until a clicking sound is heard, then push the fuel filler door closed. When closing the fuel filler door, make sure that it latches.

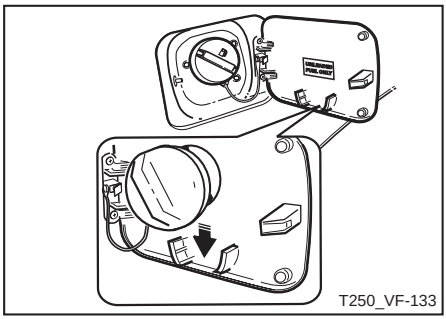

Note: Use UNLEADED PETROL of 91 octane rating or higher.

High octane unleaded petrol (premium etc.) may be used but is not required for your vehicle. The use of fuel with a lower octane rating than recommended may cause engine knock. Continued use of such fuel can cause engine damage and void the warranty. If you detect a heavy engine knock even when using fuel of the recommended octane rating, have the engine checked by your Holden Dealer.

Petrol tanks should always be filled at the intermediate or fast fill rate. Do not add any more petrol after the petrol filler first clicks off or petrol blows back - thereby allowing room for the petrol to expand inside the tank.

If you accidentally spill fuel on the vehicle's exterior surfaces, it can damage the paint. Wash it off as soon as possible.

Petrol filler nozzle restrictor

To help protect the atmosphere, your vehicle has been designed to operate on unleaded petrol. A petrol nozzle restrictor is fitted to ensure that only unleaded petrol is used. This allows the smaller diameter unleaded petrol nozzle to open the hinged flap inside the filler neck, so that petrol can be added to the tank. The leaded petrol nozzle is wider and therefore can not open the flap.

WARNING:

The use of fuel, other than the fuel specified, may cause serious damage to your vehicle and may void your warranty. Only clean fuel of good quality should be used.

PETROL – EMISSION CONTROL

Your vehicle is fitted with emission control systems which are designed to reduce the amount of hydrocarbons (HC), carbon monoxide (CO) and oxides of nitrogen (NOx) that are emitted from the engine and fuel system into the atmosphere. HC and NOx, when exposed to sunlight under certain conditions can contribute to smog. In addition, CO is toxic when it becomes highly concentrated in the air.

The three major emission control systems fitted to your vehicle are:

- **Evaporative Emission Control System**

  This system is designed to prevent the escape of fuel vapour from the fuel system; recycling it through the normal combustion process.
- **Crankcase Emission Control System**

  This system is designed to prevent blow-by gases from escaping into the atmosphere; recycling them through the combustion process.
- **Exhaust Emission Control System**

  The various components of this system operate collectively to limit HC, CO and NOx emissions in the exhaust gas. The exhaust emission control system consists of components including electronic control of spark, fuel and idle speed. In addition, Australian vehicles have a catalytic converter and closed loop mixture control system.

For detailed information on the operation, servicing and repair procedures for these systems, refer to your vehicle's service manual and / or the emission label inside the engine compartment (on the passenger side strut tower) of your vehicle.

Owner responsibility

Vehicles sold and serviced within Australia have been designed to comply with Australian Design Rules and State Regulation emission requirements.

The engine, engine control system and exhaust system of the vehicle must not be modified in any way. Any change to the design may increase the emissions or otherwise defeat the intent of the regulations.

WARNING:

Any person who removes, modifies or hinders any part of the emission control system may be contravening Australian Design Rules, refer to A.D.R. 28/01 (External Noise for Motor Vehicles), A.D.R. 37/01 (Emission Control for Light Vehicles) and A.D.R. 79/00 (Emission Control for Light Vehicles). It is also illegal to drive a vehicle modified in this way.

First drive

When the vehicle is driven for the first time, wax and oil on the exhaust system may evaporate, producing smoke-like emissions that should not be inhaled. Allow wax and oil to evaporate while the vehicle is in the open air.

Maintenance requirements

To ensure continuing compliance with the regulations, you must maintain your vehicle’s emission control system as per your vehicle's service manual, at the frequency shown in the maintenance schedule in Chapter 12, Servicing. It is recommended the necessary servicing be performed by your Holden Dealer who has the specialised servicing equipment and trained personnel available to ensure that the adjustments and services specified are carried out.

REDUCING FUEL CONSUMPTION

Engine

Maintain the engine in peak mechanical condition by having it serviced regularly in accordance with the maintenance schedule in Chapter 12, Servicing. This ensures items including the spark plugs and air cleaner are maintained for minimum fuel usage and peak engine performance.

Tyre pressure

Keep the tyres at the recommended pressures. Under-inflated tyres create extra rolling resistance and waste fuel. Refer to Chapter 7, Weekly checks.

Incorrect tyre pressures can also cause uneven and premature tyre wear.

Wheel alignment

Maintain correct front wheel alignment. Incorrect alignment causes the front wheels to drag which wastes fuel and causes uneven and premature tyre wear.

Warm ups and idling

Avoid long engine warm ups. They are unnecessary and waste fuel. An engine takes approximately five minutes to reach its efficient operating temperature and it does this most effectively when driving.

You should also avoid long engine idling. If you have to wait for more than a couple of minutes, switch off the engine to conserve fuel.

Accelerating, driving and braking

Accelerate gently and avoid rapid accelerating from lights or stop signs. Sudden bursts of speed, full throttle acceleration and hard braking are certain fuel wasters.

Drive the vehicle at steady speeds where possible (after run-in). It is desirable to reach top gear as soon as possible but under no circumstances should you force the engine to labour in top gear.

Riding the brake

Do not rest your foot on the brake pedal when you do not intend to brake, as this can overheat the brakes, increase brake pad wear, damage the brakes and waste fuel.

Air conditioning

Switch off the air conditioning when not required. However, once every two weeks, with the engine running, switch the air conditioner on for 5-10 minutes, even in winter, to lubricate the seals.

Loading

Unnecessary weight increases fuel consumption, especially when accelerating.

CHAPTER 6

Emergencies

Page

6-2 Flat tyre

6-5 Towing your disabled vehicle

6-6 Engine overheating

6-9 Flat battery

6-11 Airbags

6-15 Fuses

6-21 Bulb replacement

FLAT TYRE

If using a jack other than the one supplied with the vehicle, refer to Chapter 7, Weekly checks for lifting positions.

WARNING:

- **Use the jack only for lifting the vehicle when changing wheels.**
- **Do not get under a vehicle supported only by a jack: use vehicle support stands.**
- **Do not start or run the engine while the vehicle is only supported by the jack.**
- **All passengers should be out of the vehicle when it is being jacked.**
- **Use the jack only at the designated lifting points. Use in other locations can damage the vehicle.**
- **The vehicle should only be jacked on hard, level surfaces.**

1. Park on level surface, ensure the wheels are pointing straight ahead and set the park brake firmly.
2. Remove the ignition key (to lock the steering) and place manual transmissions in **R** (reverse) or automatic transmissions in **P** (park).

Removing the jack and tools:

The jack and tool bag are in a storage compartment in the floor of the luggage compartment area.

Remove the floor cover to access the compartment.

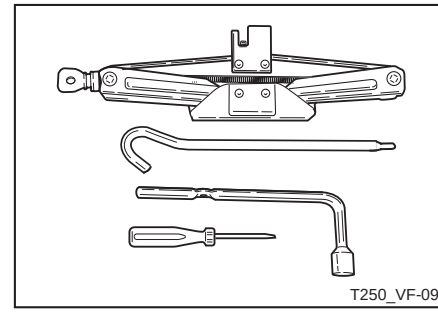
T250_VF-099

FLAT TYRE cont.

1. Remove the jack, jacking tools and spare wheel from the rear luggage compartment area.
2. Use the flat edge of the wheel wrench or a screwdriver to pry off the wheel cover (if fitted).
3. Use the wheel wrench to loosen the wheel nuts or bolts by one turn each.
4. Attach the jack handle and wheel wrench to the jack.
5. Turn the jack handle clockwise to raise the jack lift head slightly.
6. Place the jack under the jacking point nearest the tyre you want to change.

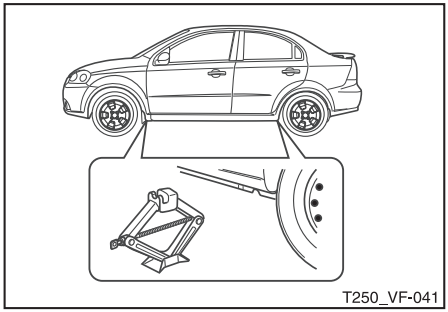
T250_VF-041

WARNING:

Failure to position the jack as described could result in serious personal injury or vehicle damage caused by the vehicle slipping off the jack.

7. Turn the jack handle clockwise to raise the jack, ensuring the base of the jack stays flat on the ground.
8. Raise the jack until the jack head fits firmly into the notch. Then raise the vehicle off the ground until there is room for the spare wheel to fit.

   Do not raise the vehicle off the ground more than is necessary to change the wheel.

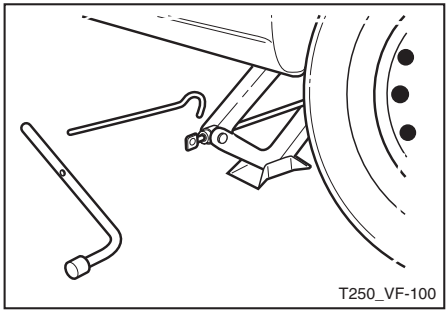
T250_VF-100

9. Remove the wheel nuts or bolts and take off the wheel.

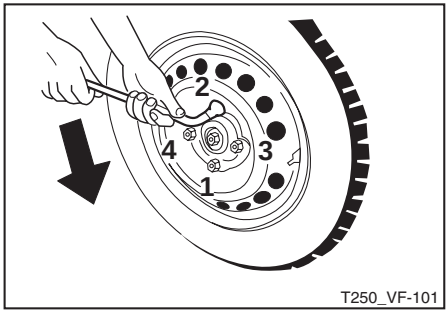

T250_VF-101

FLAT TYRE cont.

10. Remove any dirt or rust from the wheel nuts and studs, mounting surfaces and spare wheel.
11. Place the spare wheel on the wheel mounting surface.
12. Install the wheel nuts and tighten by hand.
13. Turn the jack handle counter clockwise to lower the vehicle.

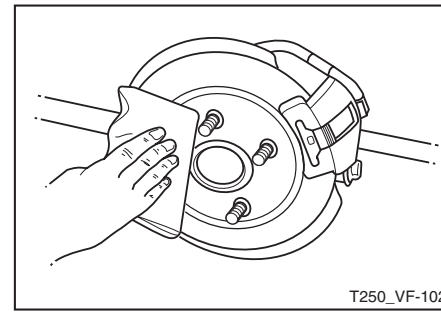
T250_VF-102

14. Tighten the nuts or bolts firmly with a wrench in the pattern shown. The proper torque is 120 Nm (Newton metres).
15. Reinstall the wheel cover (if fitted). When you install a bolt-on wheel cover, if equipped, tighten the plastic nut caps firstly by hand and then with the wheel wrench.
16. Place all the equipment in the proper storage area. To reduce rattling, stow the jack, jack handle and tools securely in the floor storage compartment.

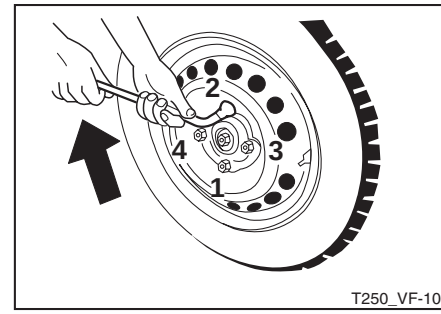

T250_VF-103

17. Store the flat tyre where the spare wheel was stored. Have the flat tyre fixed or replaced as soon as you can in case you need to use it again.

WARNING:

- **As soon as possible after changing a wheel, you should have the wheel nuts tightened with a torque wrench to 120 Nm (Newton metres) and have the new wheel balanced on the vehicle.**
- **Wheel nuts should be tightened evenly to the correct torque in the sequence shown, as wheel nuts which have not been properly tightened could eventually allow the wheel to come off while the vehicle is moving!**

Hazard warning

Use the hazard warning to warn other drivers any time your vehicle becomes a traffic hazard, day or night. Avoid stopping on the roadway if possible.

Switch the hazard warning on or off by pressing the hazard warning switch, which is located in the middle of the dashboard. Both indicator symbols on the instrument panel will flash simultaneously, and all four external signal lights will flash continuously.

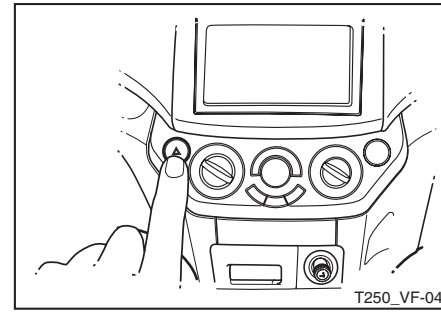
T250_VF-042

The hazard warning works with the ignition switch in any position.

TOWING YOUR DISABLED VEHICLE

Emergency towing

Proper lifting or towing equipment is necessary when lifting or towing the vehicle to prevent damage. State and local laws must be followed. In an emergency, the vehicle may be towed on all four wheels in the following manner:

1. Fit the towing equipment to the front towing eyes located under the front bumper. Use of two hooks with the load evenly spread, rather than one, is recommended. Do not attach towing equipment to the bumpers or brackets, suspension or cross members.
2. Place the transmission in **N** (neutral) and release the park brake.
3. Turn the ignition key to the **ACC** (accessories) position. This frees the steering lock and allows the correct operation of windshield wipers and turn signals.
4. For safety and to prevent damage to the vehicle, avoid jerky movements and drive slowly during towing operations.
5. Remember that power assist for brakes and power steering are not available when the engine is off. The brakes and steering still function but take greater effort.
6. To prevent exhaust fumes from the towing vehicle entering the towed vehicle, close the windows and move heating and ventilation controls to the 'recirculate' position.
7. Vehicles fitted with automatic transmissions must **not** be towed for more than 55 km or at over 55km/h.
8. Vehicles with damaged transmissions must not be towed.
9. Only the driver should be inside a towed vehicle.

Front towing eyes

The front towing eyes are provided under the front bumper. A driver must be in the vehicle to steer it and operate the brakes. Towing in this manner may be done only on hard-surfaced roads for a short distance and at low speeds. Also, the wheels, axles, drive train, steering and brakes must be in good condition.

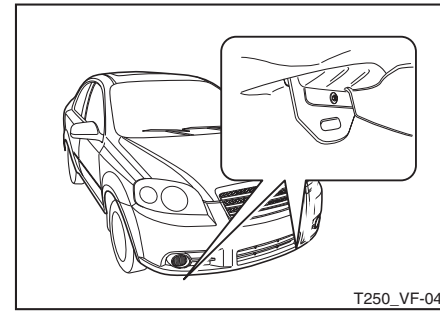
T250_VF-043

Rear towing hook

When towing another vehicle, use the rear towing hook. It should be used only in an emergency situation.

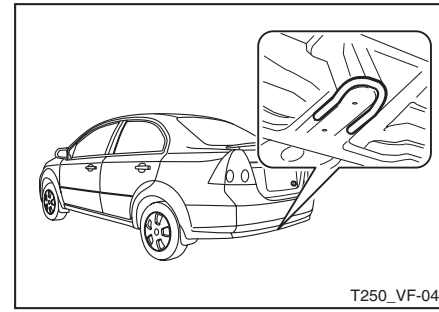
T250_VF-044

ENGINE OVERHEATING

WARNING:

Immediate action is required if the engine overheats. This can be indicated by the temperature gauge needle moving to the red zone, by steam escaping from under the bonnet, a loss of power or a loud knocking or pinging noise.

Continued driving even for a short time could result in a fire or vehicle damage.

If the coolant temperature gauge needle should move to the H position and remains there for more than 30 seconds, pull over to the side of the road. Leave the engine idling while you step out of the vehicle to check if the cooling fan is working.

WARNING:

Do not open the bonnet if you can see or hear steam or coolant escaping from the engine compartment. Wait until no steam or coolant can be seen or heard before opening the bonnet.

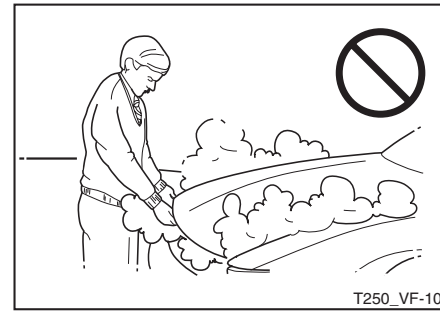

If the fan is working and the temperature gauge needle has not returned to its normal position within a few minutes, stop the engine and remove the ignition key.

Look for leaks from the radiator hoses and connections, heater hoses and connections, radiator and water pump and fan belt. Take care when checking all of these areas as they may still be hot.

If you find a major leak or other problems that may have caused the engine to overheat, do not run the engine until these problems have been corrected.

If you do not find anything wrong then you should check the engine coolant level in the radiator reservoir tank, refer to Chapter 7, Weekly checks for the location.

WARNING:

Do not remove the cooling system cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

ENGINE OVERHEATING cont.

If you see or hear steam coming from the engine, stop and switch the engine off. Do not open the bonnet until the engine has cooled down.

If the temperature gauge is high with no sign of steam:

1. Pull over and stop the vehicle as soon as it is safe to do so.
2. Switch off the air conditioning.
3. Run the engine at idle speed for about 3 minutes.

The engine cooling fan should be running.

If the fan is not operating and steam is visible:

1. Switch off the engine.
2. Move away from the vehicle without opening the bonnet.
3. Let the engine cool down.
4. When steam is no longer visible, carefully open the bonnet.
5. Have the vehicle serviced as soon as possible.

If the fan is operating with no sign of steam:

1. Open the bonnet.
2. Let the engine idle until it is cool.
3. Check the coolant level.

If the fan is operating but the engine temperature does not fall:

1. Switch off the engine.
2. Open the bonnet.
3. Let the engine cool down.
4. Check the coolant level.

If the coolant level is low, there may be a leak in the cooling system:

Check for leaks in the following areas:

1. Radiator
2. Radiator hoses
3. Radiator hose connections
4. Heater hoses
5. Heater hose connections
6. Water pump

ENGINE OVERHEATING cont.

WARNING:

The cooling system is pressurised, so to avoid injury please read all of the following instructions before attempting to add coolant.

Without undoing the coolant tank cap, look at the level of the coolant in the see-through coolant tank.

When the engine is hot the level should be above the MIN mark.

If the level is at or below the MIN mark when the engine is hot, coolant will need to be added as follows:

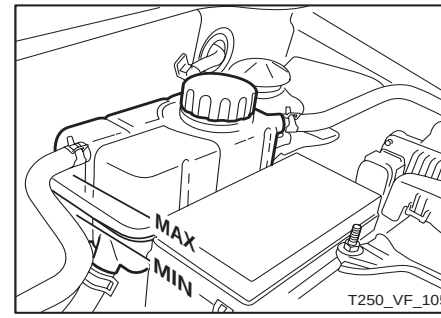

- Allow the engine to cool a little.
- The coolant tank is pressurised, so cover the cap with a thick cloth. Remove the cap very slowly to allow any pressure to escape.
- If water is added it should be clean.
- Top up the coolant tank to the MAX mark while the engine is idling.
- Replace the coolant tank cap.

If after taking one or more of the above actions, the temperature gauge no longer indicates an overheat condition, you can resume driving at a reduced speed. Return to normal driving after 10 minutes if the temperature gauge does not again show an overheat condition. If overheating occurs again you should have the vehicle attended to, as soon as possible, by a Holden Dealer.

The engine may temporarily operate at high temperatures during demanding operating conditions, especially on hot days, including:

- Climbing a long hill.
- Stopping immediately after high speed driving.
- Idling for long periods in traffic.

Note: It may help to switch off the air conditioning in these conditions.

Refer to Chapter 7, Weekly checks for instructions to help protect your cooling system from overheating.

FLAT BATTERY

WARNING:

- **Do not push start or tow start your vehicle. If unburnt fuel were to reach the catalytic converter and ignite, the converter could overheat or be destroyed by backfire. Therefore, if the battery is flat, you can jump start, but do not push start your vehicle.**
- **To protect your vehicle's electrical system, never disconnect the battery when the engine is running. Never try to start the engine while the battery is disconnected. Never charge the battery while it is still connected to the vehicle. First disconnect the negative cable then the positive cable. The polarity of the battery, i.e. the connections for the positive and negative cables, must not be interchanged when reconnecting. First connect the positive cable then the negative cable.**

If your vehicle will not start due to a discharged battery, it can often be started by using energy from another battery; a procedure called jump starting.

Please read the following procedure before attempting to jump start your vehicle.

However, if after reading the following procedure, you are still unsure about jump starting, we strongly recommend for your safety and that of your vehicle that you contact your Holden Dealer.

Jump starting

WARNING:

Batteries produce explosive gases, contain corrosive acids and supply levels of electrical current high enough to cause burns. Therefore, to lessen the chance of personal injury when working near a battery:

- **Do not expose the battery to open flames or sparks. Battery action generates hydrogen gas which is flammable and explosive.**
- **Do not smoke near a battery.**

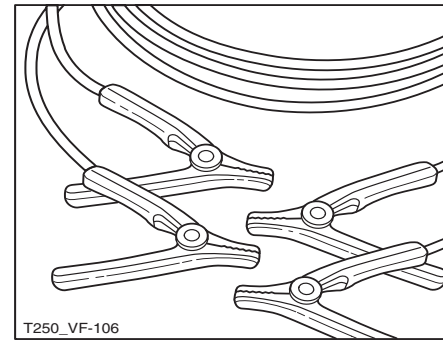
T250_VF-106

- **Wear eye protection such as industrial safety glasses and avoid leaning over the battery whenever possible.**
- **Do not allow battery acid to contact eyes or skin. Flush any contacted area with water immediately. In case of eye contact, you should get medical help. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.**
- **Remove rings, metal watch bands and other metal jewellery before working around the battery.**
- **Carefully follow each step in the jump starting procedure.**
- **Never use a quick charger to start your engine.**
- **Do not lean over the battery during jump starting.**

FLAT BATTERY cont.

1. The battery in your vehicle has a negative earth and a 12 volt rating. The battery in the other vehicle **must** also have a negative earth and a 12 volt rating.
2. Position the two vehicles so that they are not touching and apply the park brakes. If your vehicle is fitted with an automatic transmission, place in **P** (park) or for a manual transmission, place into **N** (neutral). Turn the ignition switch to the **LOCK** position and switch off all the lights and accessories in both vehicles, except the hazard warning and any lights needed for the work area.
3. Attach one end of the red jumper lead to the positive terminal of the charged battery (identified by a red colour, + or P) and the other end of the red jumper lead to the positive terminal of the flat battery.

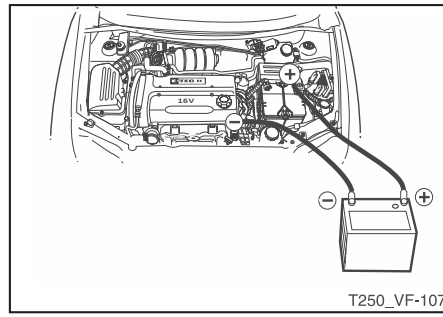

4. Attach one end of the black jumper lead to the negative terminal of the charged battery (identified by a black colour, - or N) and the other end of the black jumper lead to a solid stationary, metallic point on the engine of the vehicle with the flat battery. **Note:** Do not connect directly to the negative terminal of the battery, as this can cause sparks.
5. When making all connections ensure the jumper lead clamps do not touch each other. Also, ensure the jumper leads are not on or near pulleys, fans or other points that will move when the engine is started.
6. Start the engine in the assisting vehicle and run the engine at a moderate speed. Then start the engine with the flat battery. Attempts to start the engine with the flat battery should be made at one minute intervals and should not last longer than 10 seconds.
7. After starting, allow both engines to idle for approximately 3 minutes with the leads still connected.
8. Leave the engine running while removing the jumper leads - in the exact reverse order they were installed. While removing each clamp, take care that it does not touch any other metal while the other end remains attached.

AIRBAGS

Operation

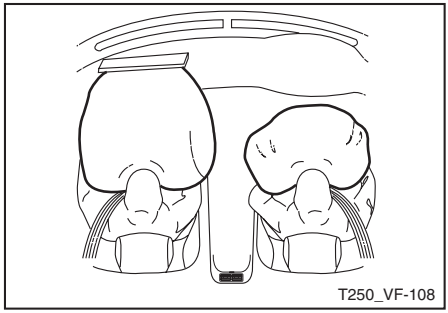
T250_VF-108

The vehicle is fitted with front airbags for both the driver and front passenger.

The driver's airbag is stored inside the steering wheel. AIRBAG is stamped on the steering wheel.

The front passenger's airbag is stored in the dashboard. The fitting of a passenger's airbag is recognised by the wording SRS AIRBAG above the glovebox and a label attached under the passenger's side sun visor.

The two front airbags operate as a pair and are triggered simultaneously in the event of certain severe frontal impacts.

In certain severe front end collisions, both front airbags inflate, assisting seat belts to restrain forward body movement.

When airbags inflate an operating noise may be heard and a small amount of smoke-like gas is released. The gas is harmless and does not indicate malfunction or fire. The airbag then deflates, with the whole process taking only a moment.

WARNING:

Airbags are part of the Supplemental Restraint System (SRS) as they assist but do not replace seat belts. Airbags are not designed to inflate if the vehicle is hit from the rear or is overturned. Seat belts must be worn by all passengers whenever the vehicle is moving.

An impact caused by dropping into a large pothole or depression in the road may or may not inflate the airbags. Seat belts (by law) should be worn by all passengers whenever the vehicle is moving.

Airbags inflate with great force. If you are too close to an inflating airbag it could seriously injure you. Seat belts help keep you in position for airbag inflation in a crash.

The airbag indicator in the warning lamp display illuminates for a few seconds when the ignition is switched on. This indicates the airbags are operational. If the light does not blink when the ignition is switched on, or if it illuminates when driving, this may indicate there is a fault in the airbag system. Consult your Holden Dealer as soon as possible.

AIRBAGS cont.

If the airbag system is handled incorrectly, it can be set off for up to 15 seconds after the ignition has been switched off and the battery disconnected, and cause injury. Follow proper service procedures and make sure the person performing the work for you is qualified to do so.

Once activated the, the whole airbag system will have to be replaced. This includes the steering wheel steering column, both front airbag assemblies, both front seat belt assemblies, passengers airbag cover, dash panel and the SRS control module. It is recommended that this work be done by a Holden Dealer.

WARNING:

- **Front passenger's airbag: The dashboard area must be kept clear. Do not place any objects over the dashboard or between an airbag and yourself. Nothing should hang from the sun visor or mirror and a passenger must not rest their feet on the dashboard.**
- **Drivers airbag: The horn pad must not be covered with adhesive or any other material. The driver should adjust the seat as far back as possible and sit back as far as possible while still maintaining control of the vehicle.**

The system should also be inspected if the steering wheel or dashboard area is scratched, cracked or damaged.

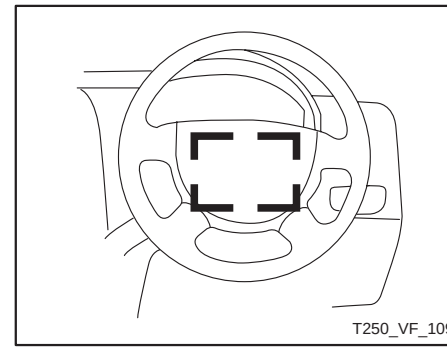

AIRBAGS cont.

WARNING:

The dashboard area must also be kept clear with nothing around this area, hanging from the sun visor or stuck to the dash.

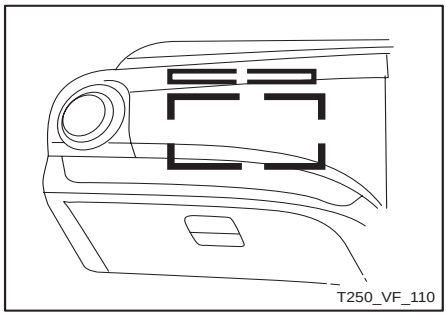

Extensive design and testing has gone into the airbag system. It should however, be treated with respect. Any careless or unskilled interference with the system could lead to its failure or to accidental inflation. It is recommended that any work to the electrical system, steering column, dashboard area, steering wheel or airbag system be carried out by a Holden Dealer.

Bull bar

Fitting a bull bar, or making other modifications to the front of the vehicle, may change the impact speed which would normally cause the airbag to inflate, reducing its effectiveness. Bull bars should not be fitted to vehicles operating in suburban areas, as they increase the risk of injury to a pedestrian in the event of a collision. Bull bars are only recommended for country or outback areas, where additional protection from straying animals is required. Please remember that defensive driving and limiting driving speed to the road conditions is always the best approach, particularly where road side signs indicate wildlife is abundant.

AIRBAGS cont.

Passenger airbag and child restraints

WARNING – EXTREME HAZARD:

- **Do not use a rearward facing child restraint on a seat protected by either a front or side airbag. The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.**
- **Where legally allowable, you may install a forward-facing child restraint in the front seat, but always move the passenger seat as far back as it will go.**
- **It is always better to install a child restraint in the rear seat.**

For information about fitting a child restraint, refer to Chapter 3, Know your vehicle.

Do not touch any airbag system components or wires. The wires can be identified by yellow tape wrapping or yellow tubing. The connectors are also yellow.

Scrapping a vehicle that has an uninflated airbag can be hazardous. Ask your Holden Dealer for assistance.

WARNING:

- **Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.**
- **Only child restraints that have clips to attach to the vehicle's anchorage fitting are to be used. Earlier types of child restraints may not attach securely to this type of anchor.**
- **Only Standards Australia approved child restraints and harnesses should be used. You should only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.**
- **Where legally allowable, you may install a forward-facing child restraint in the front seat (without side impact air bags), but always move the passenger's seat as far back as it will go.**

FUSES

Fuse boxes

There are two fuse boxes; one is on the driver's side wall of the instrument panel, visible when the door is open and the other is located in the engine compartment next to the coolant reservoir.

Spare fuses and a fuse extractor are located in the engine compartment fuse block.

To determine whether or not a fuse has blown, it is necessary to pull out the suspect fuse and examine the wire in the fuse. A blown fuse can be recognized by its melted wire. If a fuse blows twice in a row, a fault is indicated. The cause should be located and fixed by a Holden Dealer.

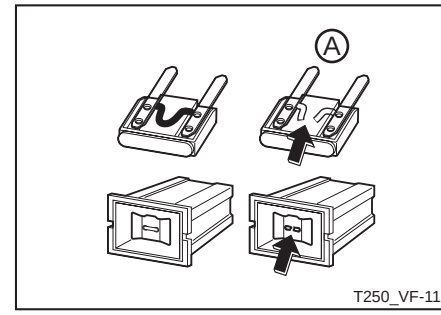

Instrument panel fuses

To open the fuse cover in the instrument panel, open the driver's side door, pull the side of the cover out.

Always ensure the cover is in place after use. The fuse amperage is shown on the inside of the fuse cover.

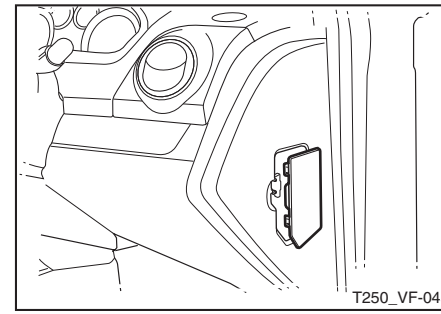

Fuse box in engine compartment

This fuse box is located on the passenger side of the engine compartment. It contains circuit fuses, main fuses and relays.

To remove the cover, release the catch on the side of the fuse box nearest the engine and release the two tabs on the opposite side.

Always ensure the cover is correctly fitted after replacing or inspecting fuses.

The fuses amperage are shown on the inside of the fuse cover.

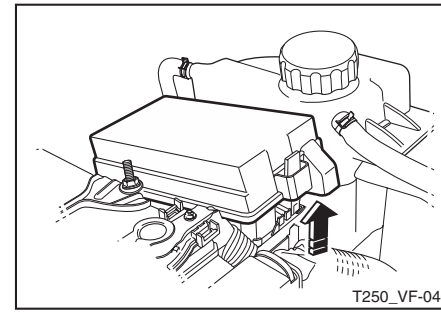

FUSES cont.

Instrument panel

NOTICE :

USE THE DESIGNED FUSE ONLY * OPTIONAL EQUIPMENT

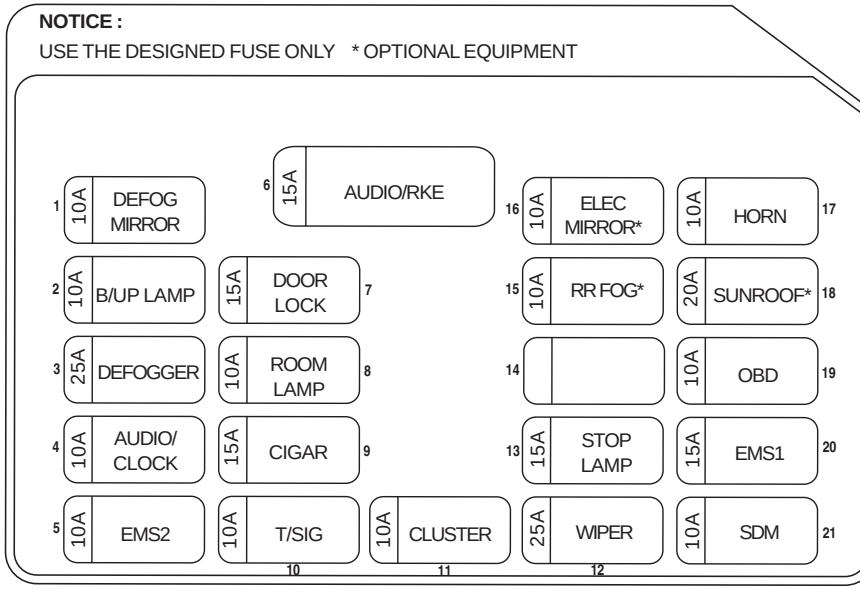

T250_VF-059

No.	Circuts protected
1	Outside mirror demister (10A)
2	Backup lamp (10A)
3	Rear window demister (25A)
4	Audio/clock (10A)
5	EMS2 (10A)
6	Audio/RKE (15A)
7	Door lock (15A)
8	Room lamp (10A)
9	Cigarette lighter (15A)
10	Turn signals (10A)
11	Cluster (10A)
12	Wipers (25A)
13	Stop lamps (15A)
14	Spare
15	RR Fog (if fitted) (10A)
16	Electric mirrors (10A)
17	Horn (10A)
18	Sunroof (if fitted) (20A)
19	OBD (10A)
20	EMS1 (15A)
21	SDM (10A)

FUSES cont.

Engine compartment

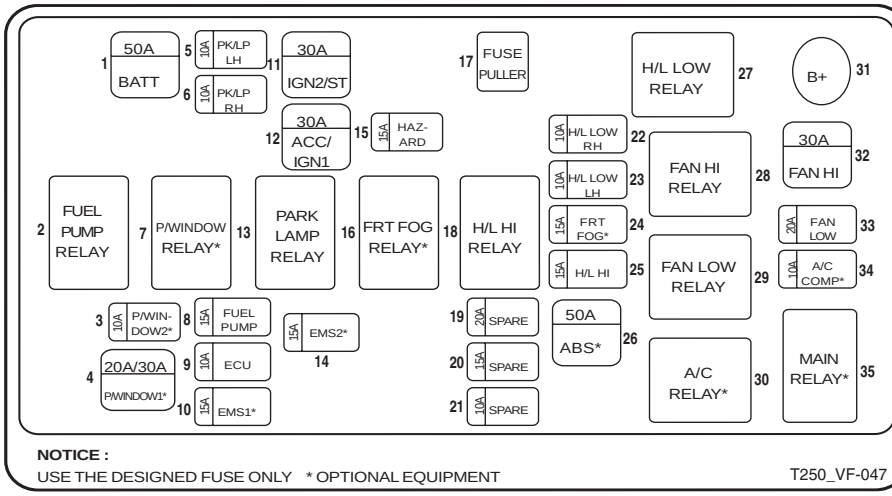

NOTICE :
USE THE DESIGNED FUSE ONLY * OPTIONAL EQUIPMENT

T250_VF-047

FUSES cont.

No.	Circuts protected
1	Battery (50A)
2	Fuel pump relay
3	Power window 2 (10A)
4	Power window 1 (20A/30A)
5	Park lamp L/H (10A)
6	Park lamp R/H (10A)
7	Power window relay
8	Fuel pump (15A)
9	ECU (10A)
10	EMS1 (15A)
11	Ignition2/ST (30A)
12	Ignition1/ACC (30A)
13	Park lamp relay
14	EMS2 (15A)
15	Hazard (15A)
16	Front fog lamps relay (if fitted)
17	Fuse puller
18	Headlight hi relay
19	Spare (20A)
20	Spare (15A)
21	Spare (10A)
22	Headlight low R/H (10A)

FUSES cont.

No.	Circuits protected
23	Headlight low L/H (10A)
24	Front fog lights (if fitted) (15A)
25	Head light hi (15A)
26	ABS (if fitted) (50A)
27	Head light low (relay)
28	Fan Hi (relay)
29	Fan low (relay)
30	A/C (relay)
31	Battery positive
32	Fan hi (30A)
33	Fan low (20A)
34	A/C compressor (10A)
35	Main (relay)

Relays

Relays are also contained in this fuse box; their location in the fuse box and their function is indicated on the inside of the fuse box cover.

WARNING:

When replacing a fuse ensure to use a fuse of the specified amperage. Never install a wire or similar as it could damage electrical components and cause a fire.

BULB REPLACEMENT

When replacing a bulb, switch off the related switch.

Do NOT touch new bulbs with bare hands. Greasy fingers cause stains, which evaporate, and result in a dull light. Grease spots on Halogen bulbs will, within a short time, lead to bulb failures. Inadvertently stained bulbs may be cleaned with tissue paper, or a clean, non-fuzzy cloth, using alcohol or white spirits.

When replacing bulbs, do not exceed the wattage given on the defective bulb base.

Detailed procedures for headlamp aiming are given in the relevant service manual for your vehicle. However, because headlamp aiming is a safety item, it is recommended that you have it carried out by your Holden Dealer.

To remove headlamp assemblies

1. Open the bonnet.
2. Remove the three bolts and the headlamp assembly.
3. Disconnect the three wiring harness connectors from the lamp.

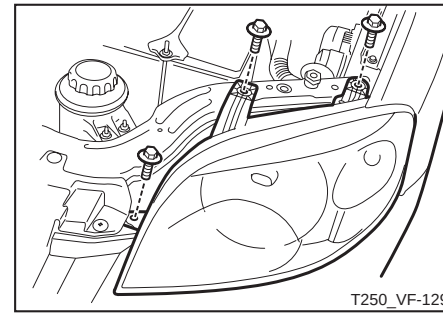
T250_VF-129

To remove the headlight bulbs

1. Remove wiring harness plug from bulb.
2. Remove the headlamp cap.
3. Release the spring that retains the bulb.
4. Remove the bulb.
5. Reverse the steps to install a new bulb.

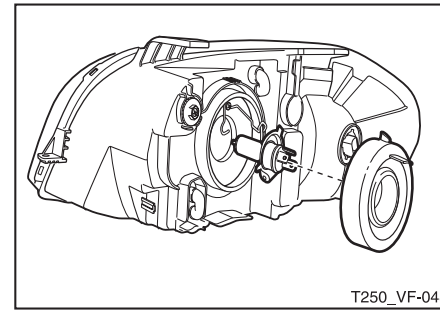
T250_VF-048

To replace parking lamp bulbs

1. Remove wiring harness.
2. Remove the headlamp cap.
3. Pull the bulb holder out of the lamp housing.
4. Pull the bulb straight out of the socket.
5. Reverse the steps to install a new bulb.

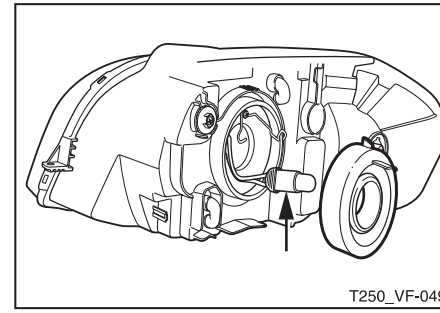
T250_VF-049

BULB REPLACEMENT cont.

To replace front turn signal bulbs

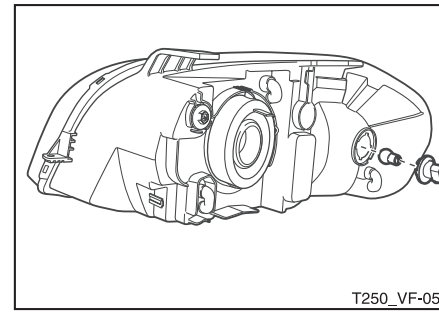

1. Remove the headlamp (refer page 6-23).
2. Disconnect the wiring harness connector from the bulb.
3. Turn the bulb socket counter clockwise to remove it.
4. Pull the bulb socket out of the lamp housing.
5. Gently push in and turn the bulb counter clockwise to remove it from the socket.
6. Reverse the steps to install a new bulb.

   When installing the new bulb into the socket, press it in while turning it clockwise.

   When installing the socket into the housing, rotate the socket clockwise.

To replace side turn signal bulbs

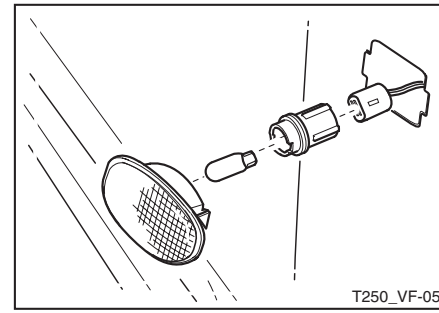

1. Slide and hold the lamp assembly forward toward the rear of vehicle then pull front edge outward to remove.
2. Turn the bulb socket counter clockwise.
3. Pull the bulb straight out to remove it from the socket.
4. Reverse the steps to install a new bulb.
5. To refit lamp assembly engage rear mounting lug into slot. Apply light pressure to the rear of lamp then push in until it clips into place.

BULB REPLACEMENT cont.

Tail lamps, stop lamps, reverse lamps and rear turn signals

1. Open the boot lid.
2. Remove the two screws holding the lamp assembly.
3. Turn the bulb socket counter clockwise to remove it.
4. Gently push in and turn the bulb counter clockwise to remove it from the socket.
5. Reverse the steps to install a new bulb

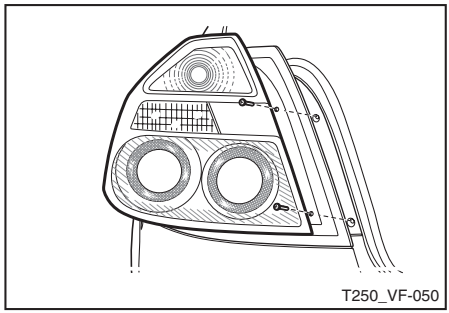
T250_VF-050

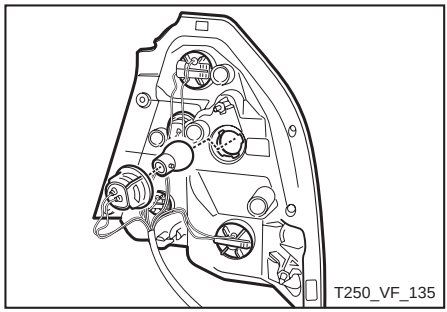
T250_VF_135

Centre high-mounted stop lamp

1. Open the boot lid.
2. From inside the boot under the parcel shelf, remove the two screws securing the lamp assembly and disconnect the wiring plug.
3. Remove the lamp assembly from inside the cabin.

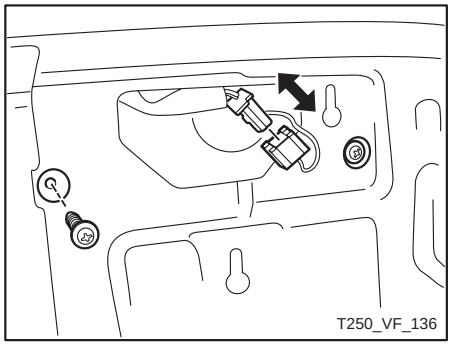
T250_VF_136

4. Remove the five screws holding the reflector to the housing.
5. Remove each bulb by pulling them straight out of bulb holder.
6. Reverse the steps to install a new bulb.
7. To install lamp assembly into the vehicle position the mounting lugs into parcel shelf and clip into place.
8. Refit mounting screws and wiring harness.

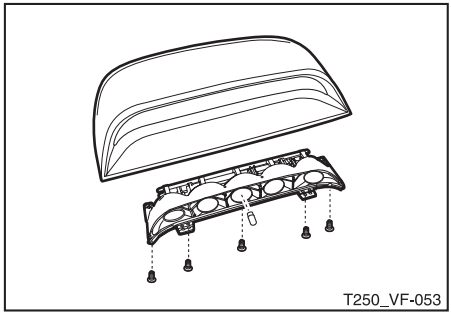
T250_VF-053

BULB REPLACEMENT cont.

Licence plate lamp

1. Remove the two screws and the lamp cover.
2. Turn the bulb socket counter clockwise to remove it.
3. Pull the bulb out of the socket.
4. Reverse the steps to install a new bulb.

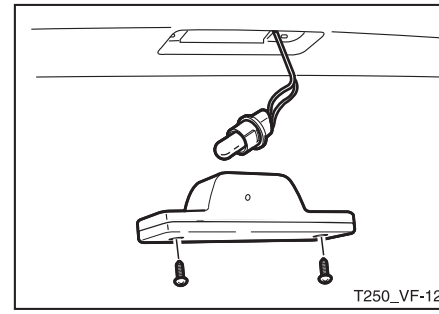

Dome lamp

1. Use the flat edge of the screwdriver to pry the lens away from the lamp assembly.
2. Remove the bulb.
3. Reverse the steps to install a new bulb.

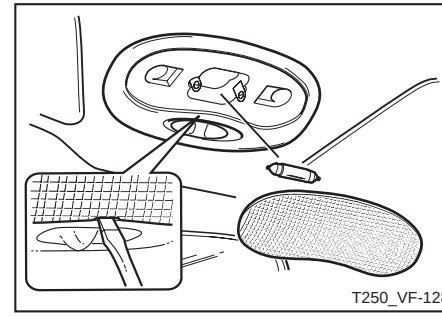

Luggage / rear compartment area lamp

1. Use a flat-head screwdriver to pry the lamp assembly from the housing.
2. Remove the bulb.
3. Reverse the steps to install a new bulb.

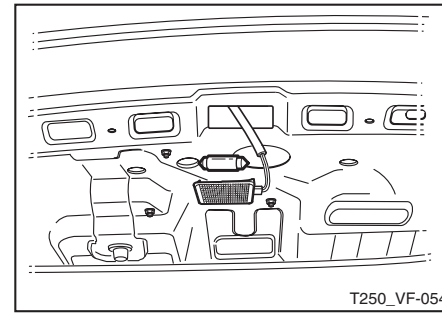

Notes

CHAPTER 7

Weekly checks

Page

7-2 Miscellaneous checks

7-3 Check locations

7-4 Engine coolant level

7-5 Engine oil level

7-6 Engine oil consumption

7-7 Automatic transmission, brake and clutch fluid level

7-8 Power steering and washer fluid level

7-9 Tyres

7-12 Battery

MISCELLANEOUS CHECKS

As well as taking your vehicle to be serviced (refer to chapter 12, Servicing) there are a few simple weekly checks the owner (or nominee) is recommended to make. These are shown on the following pages.

WARNING:

- **The engine cooling fan can start working unexpectedly, even when the engine is not running. To avoid injury from the fan, ensure the ignition switch is in the OFF position, so the fan can not start operating.**
- **Electronic ignition systems have high ignition power. Do not touch the ignition system; this is highly dangerous.**

The following checks should also be regularly done to ensure safety of your vehicle:

- All exterior lights are working and their appropriate interior indicators illuminate.
- Mirrors and glass are clean and not scratched.
- Aim of washer fluid on the windshield is satisfactory.
- Condition of the wipers is satisfactory.
- The demister operates.
- The horn works.
- Condition and operation of all the seat belts. Check if buckles are clean and operating correctly. Remember that seat belts must never be worn twisted.

CHECK LOCATIONS

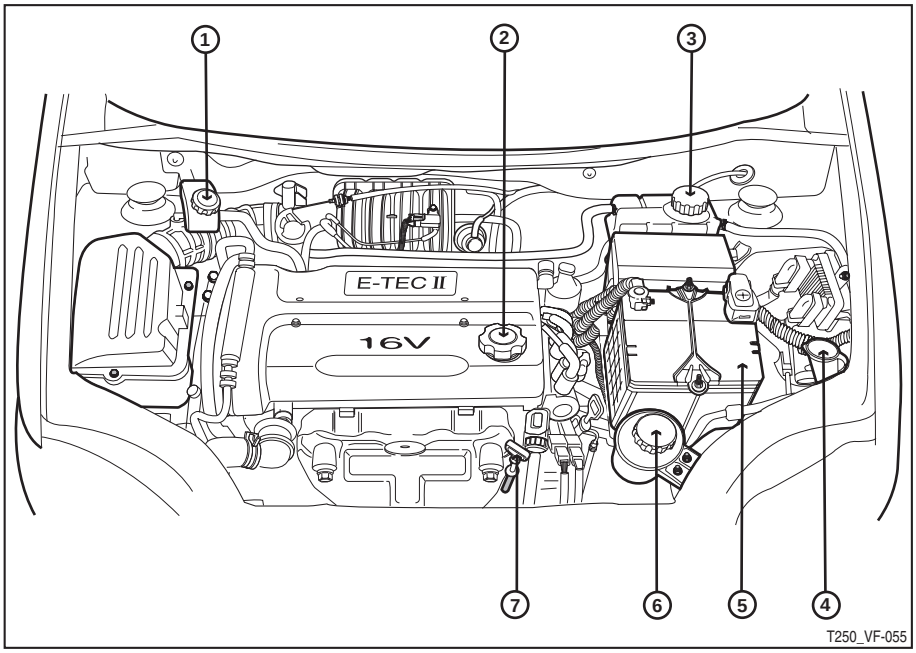

		Page			Page
1	Brake / clutch fluid	7-7	**5**	Battery	7-12
2	Engine oil cap	7-5	**6**	Power steering fluid	7-8
3	Engine coolant	7-4	**7**	Dipstick engine oil	7-5
4	Windshield washer fluid	7-8			

ENGINE COOLANT LEVEL

To check engine coolant level

The level of engine coolant should be checked weekly. This is simply a matter of looking at the level in the plastic container, called the radiator reservoir tank. Replenish the radiator reservoir tank as necessary.

When the engine is cool, if the level of the coolant in the radiator reservoir tank is found to be lower than the MIN line, check the cooling system for leaks, then replenish to bring the level up to the MAX line.

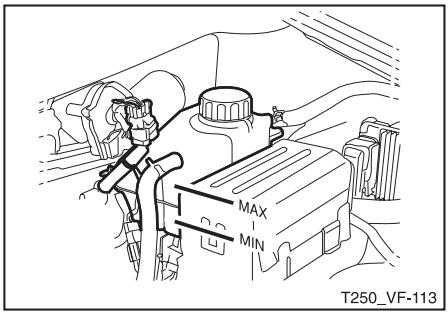

WARNING:

- **Only use specified coolant (refer to chapter 8). Do not mix different coolants as this may damage your engine cooling system.**
- **Always check the coolant level when the engine is cold. Steam and scalding liquids from a hot cooling system can blow out and cause serious burns.**
- **Do not over fill the radiator reservoir tank.**
- **Remove the radiator reservoir tank filler cap only.**

To add engine coolant

If the radiator reservoir tank requires topping up, first pre-mix a solution of 50% coolant (refer to chapter 8, Specifications) and 50% clean water.

Ensure the ignition is switched off.

Undo the cap on the top of the radiator reservoir tank, add the pre-mixed solution and secure the cap.

Failure to use the engine coolant meeting Holden's specification or maintaining the specified concentration may result in voiding of your warranty.

In emergency situations, plain water may be used temporarily until the correct engine coolant is obtained as soon as possible from the nearest Holden Dealer.

The specified engine coolant works in three ways: using special corrosion inhibitors helps the cooling system in hot weather by increasing the boiling point and protects against freezing down to -30°C providing the correct concentration is maintained.

If you regularly have to top up the cooling system, you should contact your Holden Dealer.

WARNING:

Corrosion inhibitors and antifreeze fluids are poisonous. Use extreme care when handling. If swallowed seek immediate medical attention.

If the engine overheats, refer to Chapter 6, Emergencies.

ENGINE OIL LEVEL

Engine oil must be kept at correct levels to help ensure proper lubrication of the vehicle's engine. Check the engine oil level at regular intervals, for example when refuelling. If the oil pressure warning light comes on, switch off the engine and check the oil level immediately or risk causing damage to the engine. Refer Chapter 1, Dashboard.

To check the engine oil level

Check the engine oil level while the vehicle is parked on level ground and the engine is switched off and at normal operating temperature.

Before checking the engine oil level, wait a few minutes after switching the engine off, to allow the oil to settle.

1. Remove the oil dipstick (yellow) from the oil level tube.
2. Wipe the dipstick clean.
3. Insert the dipstick back into the oil tube as far as it will go.
4. Wait for a few seconds before again removing the dipstick.

The oil level should be maintained between the two marks, neither going above the MAX mark nor under the MIN mark.

Note: Remember to insert the dipstick firmly after taking the reading.

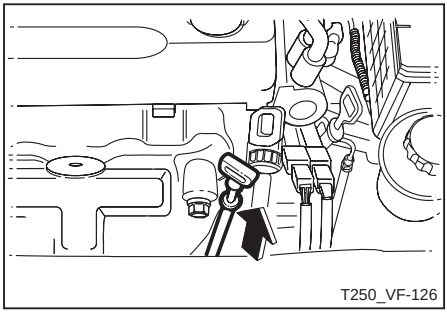
T250_VF-126

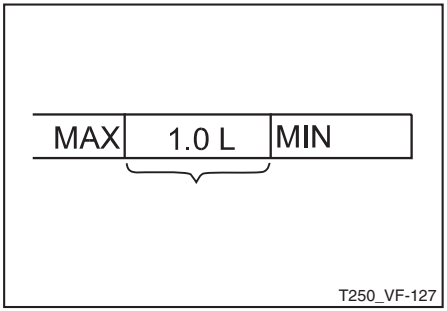

T250_VF-127

To add engine oil

Use the correct oil for your vehicle. Refer to Chapter 8, Specifications.

1. Remove the engine oil cap.
2. Add the required amount of oil.
3. Wait a few minutes for the oil to settle, then check the oil level again. When the oil level is correct, replace the oil cap and dipstick. Clean up any spilt oil.

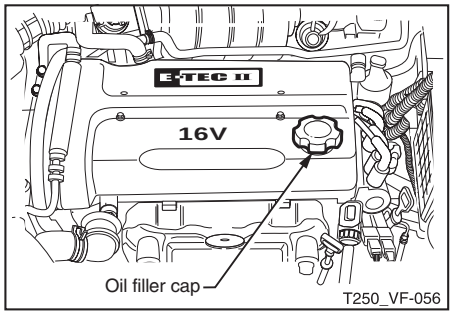

T250_VF-056

Note: Do NOT over fill engine oil. The oil should not exceed the MAX mark on the dipstick.

Note: Non-detergent and other low quality oils are specifically not recommended. The use of break-in oil, tune up compounds, friction reducing compounds and other supplemental additives are not recommended. Their use will increase costs, may be detrimental to the operation of your car and may void your warranty, to the extent that Holden considers the non-recommended fluid to have affected the specifications or quality of your vehicle.

ENGINE OIL CONSUMPTION

Every internal combustion engine uses a certain amount of oil, especially when running-in. The engine is dependant on oil for lubricating the cylinder walls, pistons, rings and valve stems. A thin film of oil is left on the cylinder walls, some of which is carried into the combustion chamber and burnt during the combustion process. This also applies to the film of oil on the valve stems which is drawn into the combustion chamber and burnt.

There are several other factors that contribute to the rate of oil consumption in your engine: worn pistons, rings, valve stems and guides; the way in which the vehicle is operated; the quality and grade of oil, the oil level and dilution of the oil.

Operation of the vehicle

High speed driving increases engine temperature, which lowers oil viscosity, causing more oil to reach the combustion chamber and get burnt away.

Quality and grade of oil

Oil viscosity is a significant factor in oil consumption. If you use an oil which is too thin (low viscosity) your oil consumption will increase. Use only the recommended grades of oil.

Oil level

Maintaining a proper oil level is also an important factor in controlling oil consumption. An over full engine will splash oil onto the cylinder walls in quantities greater than the piston rings can control. This excess oil will be drawn into the combustion chamber and burnt, or may result in aeration of oil in the sump causing damage to the engine.

Dilution

Probably the most prevalent complaint of oil consumption comes from the driver whose vehicle is frequently driven at below normal operating temperatures. The oil becomes diluted by fuel and moisture which settles in the sump and may even raise the oil level creating a false reading on the oil level dipstick. For example, in a vehicle that has accumulated 1,500 km of short distance or intermittent city operation and has consumed a normal amount of oil, the level may not have dropped from the full mark, due to dilution. If this vehicle is driven for some distance at highway speeds on a warm day, the dilution elements evaporate, lowering the oil level and the motorist assumes the oil lost has been consumed in the highway operation.

If, after taking into account the above factors, you are still concerned that your engine has excessive oil consumption then you should discuss the situation with a Holden Dealer. Remember that an engine's oil consumption should not be judged until it has run at least 7000 km.

AUTOMATIC TRANSMISSION , BRAKE AND CLUTCH FLUID LEVEL

Automatic transmission (if fitted) fluid level

The fluid level for automatic transmission will be checked for you when your vehicle is taken to your Holden Dealer for servicing, refer to Chapter 12, Servicing. The automatic transmission fluid level does not require checking by the driver in between these scheduled services.

Brake / clutch fluid level

WARNING:

Do not let brake / clutch fluid contact your skin or eyes. If you do get fluid in your eyes or on your skin, wash the affected area thoroughly with soap and water or hand cleaner.

Do not spill brake fluid on the vehicle's exterior surfaces. It can damage the paintwork. If you do, wash it off immediately.

The vehicle is fitted with one reservoir for both the brake fluid and the clutch fluid (on manual transmissions).

The fluid should be kept at the proper level between the MIN and MAX lines on the reservoir.

If the brake fluid level is low, the brake system warning lamp comes on, refer to Chapter 1, Dashboard.

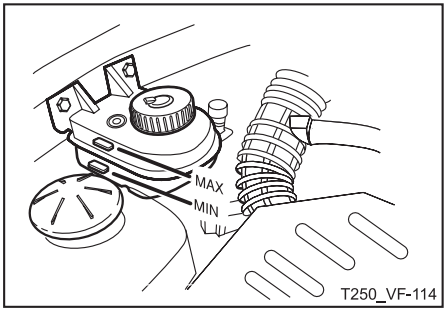

Note: If the reservoir requires constant topping up, it could indicate that a fault exists. Contact your Holden Dealer immediately.

To add brake / clutch fluid:

1. Wipe the cap and top of the reservoir clean to prevent contamination of the brake / clutch fluid. Contaminated fluid can affect the performance and lead to costly repairs.
2. Remove the cap.
3. Add enough fluid to bring the level up to between the MIN and MAX marks on the reservoir.
4. Reinstall the cap.

Use only recommended fluid as outlined in Chapter 8, Specifications.

POWER STEERING AND WASHER FLUID LEVEL

Note: Driving your vehicle without the proper amount of power steering fluid can result in system damage which may require costly repair.

Power steering fluid level

The power steering fluid level should be checked and the fluid replaced at the intervals shown in the Maintenance Schedule, refer to Chapter 12, Servicing.

The level should be checked with the ignition switched off.

Check the fluid in the reservoir. The level should be between the MIN and MAX marks.

If the fluid is below the MIN mark, you should add fluid.

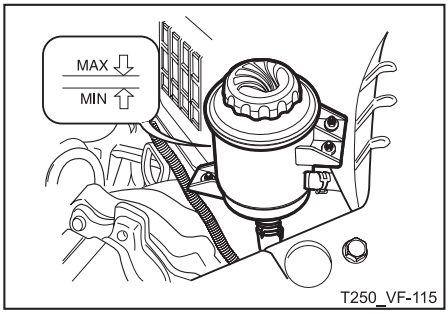

To add power steering fluid:

- Switch off the ignition.
- Wipe the cap and the top of the reservoir clean.
- Remove the cap.
- Add only enough fluid to bring the level up to between the MIN and MAX marks. Do not over fill.
- Replace the cap tightly.
- Clean up any spilt fluid.

If power steering fluid is required, refer to Chapter 8, Specifications. If you often need to add fluid, contact your Holden Dealer.

Washer fluid level

As washer fluid is regularly used, the level in the washer fluid reservoir should be checked and topped up weekly.

For a crystal clear windshield, use the correct amount of Holden Optikleen. Do not use ordinary soap or detergent as these not only froth up but would also damage the wiper rubbers.

Ensure the cap is secured.

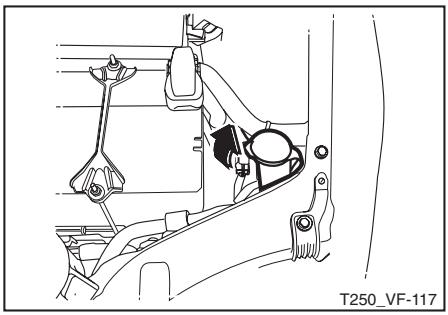

TYRES

Tyre air pressure

Weekly checking of the air pressure of your tyres (including the spare) ensures your safety, as well as reducing fuel consumption and increasing the life of your tyres. See tyre placard for the recommended tyre pressures. Refer to Chapter 8, Specifications.

For constant long distance or rough road driving, daily checking is recommended.

If the vehicle is heavily loaded, the recommended pressure for the tyres is increased. As the tyres are operating under greater load, the air pressure check becomes even more important.

Tyre inflation pressure increases when the tyres have been driven more than 2 km. Therefore, the pressure should be checked when the tyres have been stationary for over three hours. If they must be checked immediately after driving, increase the pressure shown on the placard by 10% relative to the cold tyre inflation pressure.

The inflation pressure in the tyres should be increased according to the load on the vehicle. Therefore, if the vehicle is loaded to half the maximum payload (as shown in Chapter 10, Tow and load) then the tyres should be inflated halfway between the minimum and maximum pressures given on the tyre placard. Vehicles driven for prolonged periods over rough roads, particularly in outback conditions, should use the cold tyre inflation pressure on the tyre placard for maximum load condition.

Always use a tyre pressure gauge to check the tyres inflation; simply looking at the tyres is not sufficient.

If the pressure is too low, this can result in considerable tyre warm-up and internal damage, leading to tread separation and even to tyre blowout at high speeds. If the pressure is too high, this can result in reduced traction, increased risk of tyre blowout and poor tyre wear.

Remember to replace any valve dust caps or extensions, as this prevents dirt and moisture from fouling the valves. When checking the tyre air pressure, take a look at the condition of the tyre tread and inspect for stones or abnormal wear.

Tyre condition, rim condition

Driving over sharp edges can lead to hidden tyre damage and rim damage, which can lead to tyre blowout. Drive over edges slowly and at right angles if possible.

When parking, ensure the tyres are not pressed against the edge of the curb.

Check the tyres and rims regularly for damage, stones, punctures, cuts, cracks, bulges etc. Check the rims for damage. Consult a Holden Dealer, if in doubt.

TYRES cont.

Alignment and balance

Improper wheel alignment can cause the tyres to wear faster and / or unevenly. It can also cause the vehicle to pull to the left or right.

Out-of-balance wheels and tyres can cause annoying vibration and uneven tyre wear. If you suspect either of the above problems exist, have a wheel alignment and balance check carried out by your Holden Dealer.

Tyre rotation

Front and rear tyres perform different jobs and can wear differently depending on the types of roads driven, your driving habits, wheel alignment, balance, tyre pressures, etc.

Check the tread depth regularly. If the front tyres have more wear than the rear tyres, have both front wheels rotated with the rear wheels so the tyres with the deeper tread are at the front.

Follow the diagram for the correct rotation pattern.

If the wheels are rotated it is recommended to check the balance at the same time.

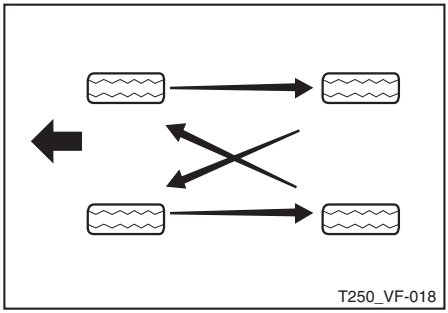

TYRES cont.

Replacement and repair

Replacing your factory fitted wheels and tyres with non-specified wheels and tyres may affect your warranty as well as your insurance policy. Refer to the tyre placard for tyre size and load rating. Using a different size or type of tyre may affect ride, handling, speedometer, vehicle ground clearance, tyre clearance and / or snow chain clearance.

Take care when using tyres with heavy treads, including tyres made for better grip in the wet. At sustained high speeds, this type of tyre will run at higher temperatures than standard tyres and consequently should only be operated within the limits recommended by the manufacturer. Any queries about the tyres on your vehicle should be referred to your Holden Dealer.

New tyres should be fitted in pairs to the front. If replacing only one tyre, it should be paired on the same axle with the least worn of the other three.

The tyres have tread wear indicators (A) which tell you when a tyre has 1.6mm or less of tread left.

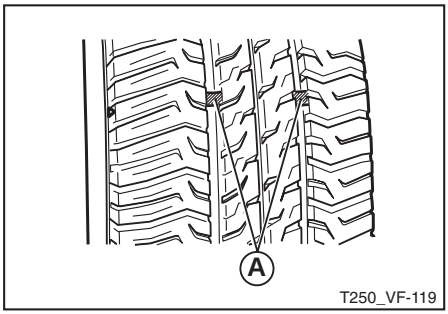

You should replace your tyres when:

- The tyres are worn to the point where the tread indicators appear, or the cord or fabric is showing. The tyres originally fitted to your vehicle have built-in tread indicators which show up when the tyres are worn.
- The tread or sidewall is cut, split, or cracked deep enough to expose the cord or fabric.
- The tyre has a bump or bulge in it, indicating some kind of internal damage.
- The tyre has a puncture, cut or other damage which can not be repaired because of the size or location of the damage.

Do not attempt to drive on the flat tyre more than is necessary to stop safely. Driving even a short distance can damage the tyre and wheel beyond repair. Also steering and braking will be seriously affected. Tyres which have been repaired or retreaded can not be driven safely at high speeds. Therefore, their use is not recommended.

BATTERY

Battery maintenance

Your vehicle is fitted with a maintenance free battery, which means the fluid level does not need to be checked.

To extend the life of your battery:

- Keep the battery mounted securely.
- Keep the top of the battery dry and clean.
- Keep the terminals and connections clean, tight and coated with petroleum jelly or terminal grease.
- Immediately rinse off any spilled electrolyte using a solution of water and baking soda.
- If the vehicle is not going to be driven for an extended period of time, disconnect the cable from the negative (-) terminal of the battery to prevent discharge, and charge the battery every six weeks.

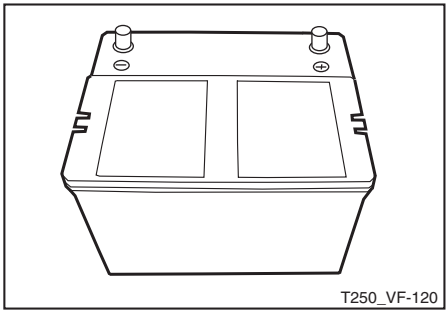

WARNING:

- **Batteries emit an explosive gas mixture which may be ignited by sparks or naked flames. You should therefore keep sparks and flames away from the battery at all times. Never smoke near a battery.**
- **Batteries contain sulphuric acid. If acid contacts skin or clothing, flush immediately with a lot of water. In case of eye contact, flush with a lot of water and contact a doctor. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.**
- **Take care with all metal objects and tools including items you may wear (e.g.: jewellery, ring and metal watch bands) near battery terminals. Metal objects that touch battery terminals can cause sparks and serious heat burns to the user or wearer.**
- **Never disconnect the battery when the engine is running.**
- **Always connect the red cable to the positive (+) battery terminal and the black cable to the negative (-) battery terminal. Connecting the battery cables to the wrong terminals can result in injury and damage to the vehicle.**

Notes

CHAPTER 8

Specifications

Page

8-2 Specifications

8-4 Identification labels

SPECIFICATIONS

Engine type	1.6 LITRE DOHC
Piston displacement	1598 cc
Compression ratio	9.5 : 1
Bore	79 mm
Stroke	81.5 mm
Power kW @ rpm	Refer to holden.com.au
Torque Nm@ rpm	
Oil specification	SAE 5W OR 10W/30 SL GF-3
Refill oil capacity (including filter)	3.75 litres
Fuel tank capacity	45 litres
Coolant capacity	6.0 litres
Coolant specification	50% Clean water and 50% Coolant conforming to Holden Spec GM 6277M (Orange / Red)
Brake fluid	DOT-3 or DOT-4 brake fluid
Power steering fluid	Dexron® III
Battery specification	12 volts, 55 amp hours
Battery for remote control	CR 16 20

***WARNING:**

Only use specified coolant. Do not mix different coolants as this may damage your engine cooling system.

SPECIFICATIONS

Transmission

Transmission	**5 speed manual transmission**	**4 speed automatic transmission**
Transmission Fluid type	SAE 75W/90	ESSO JWS 3309 or conforming to Holden Spec HN2414
Clutch fluid type	DOT-3 or DOT-4	–

Dimensions

Vehicle		**Sedan**
Overall length		4310 mm
Overall width		1710 mm
Overall height, at kerb weight		1505 mm
Track	Front	1450 mm
	Rear	1430 mm
Wheel base		2480 mm

IDENTIFICATION LABELS

Safety compliance plate

The safety compliance plate is located on the right-hand side of the spare wheel well.

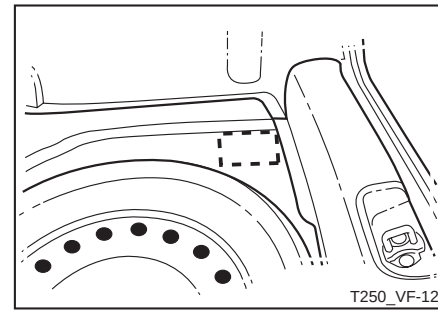

Breakdown of vehicle identification number

The Vehicle identification number is broken down the following way:

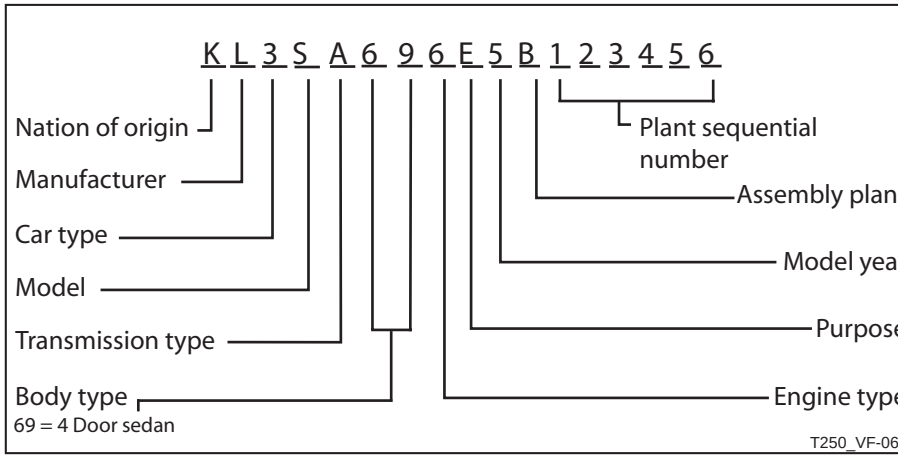

Engine number

Individual identification numbers are stamped onto the engine block.

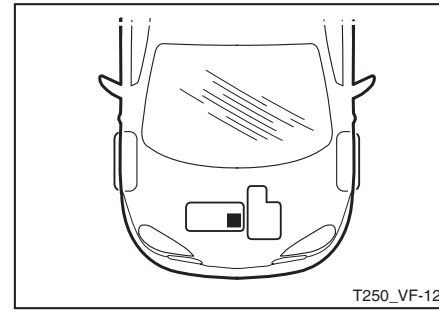

IDENTIFICATION LABELS cont.

Vehicle identification number (VIN)

This is the legal identifier for your vehicle, and is used for the identification of spare parts.

The vehicle identification plate is located inside the engine bay, on the bulkhead.

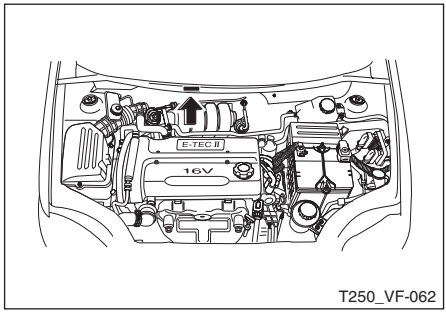

T250_VF-062

The VIN is also visible through the windshield on the top left-hand side of the instrument panel.

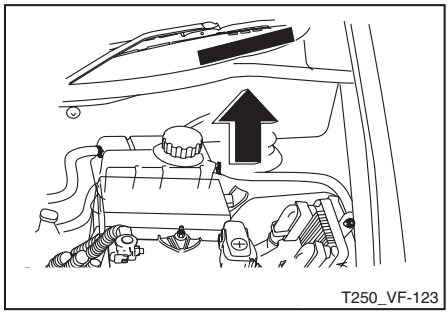
T250_VF-123

Tyre placard

The tyre placard is located in the glovebox.

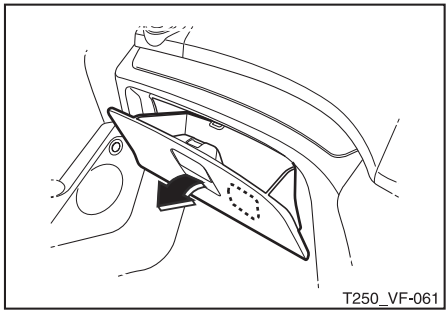
T250_VF-061

Fuel Placard

The fuel placard is located on the inside of the fuel filler door.

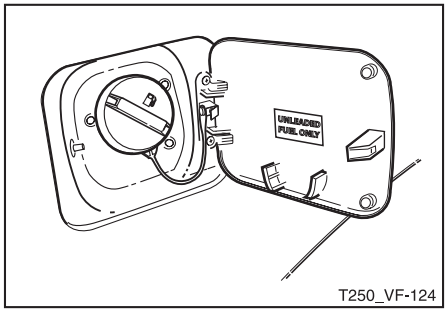

T250_VF-124

CHAPTER 9

Customer assistance

Page

9-2 Customer assistance

9-3 For New Zealand Holden owners

9-4 New vehicle warranty certificate

9-6 Parts and accessories warranty

9-7 Warranty questions and answers

CUSTOMER ASSISTANCE

We want you to be happy with your new vehicle, together with the people you deal with while you have the vehicle.

Normally, any problems with the sales, operation, servicing or the validity of original equipment supplied with your vehicle will be handled by your Holden Dealer's Sales and Service Department.

We realise however that, with the best intentions, misunderstandings do occur sometimes.

Therefore, we suggest you discuss any concern with one of the Holden Dealer's management staff. If you have not received satisfaction from the Sales Manager or Service Manager – go to the General Manager or to the Dealer Principal.

By now you should have satisfaction. If not, the Holden Customer Assistance office is at your disposal.

The Holden Customer Assistance representatives can be telephoned from anywhere within Australia for the cost of a local call within the Melbourne metropolitan area , the number is:

9646 5466

Outside the Melbourne metropolitan area, the number is:

1800 033 349

If your concern relates to parts / accessories and you have made contact with the Holden Dealer or Distributor without satisfaction, you may contact Holden Service Parts Operations on (03) 9797 7341.

Naturally, telephoning is the quickest and the best way to contact us. However, if you prefer to write, the address is:

The Manager
Holden Customer Assistance Centre
GPO Box 1714
Melbourne,
Australia 3001.

Your letter should clearly outline your concern or query and include the following:

- Your name and address.
- Telephone numbers, both private and business.
- Servicing Dealer's name and address.
- Vehicle model.
- Vehicle identification number (I.S.O.V.I.N.), refer to the inside front cover of the service booklet in your vehicle's glovebox.
- Date of purchase.
- Current odometer reading.

Most of this information will be found on the Vehicle Identification Certificate, located inside the front cover of the service booklet in your vehicle's glovebox.

Before you write however, remember that the telephone is the quicker and more efficient means of communication.

FOR NEW ZEALAND HOLDEN OWNERS

The information in this Owner's Handbook applies primarily to Australian Holden vehicles and there may be some differences to the Warranty and Owner Assistance provisions for New Zealand. Applicable details for New Zealand are set out in the Holden Warranty and Owner Assistance information booklet enclosed in the New Zealand glovebox wallet.

New Zealand Assistance can be reached on:

0800 HOLDEN (0800 465 336)

This number provides access to New Zealand Roadside Assistance as well as New Zealand Customer Assistance.

If you prefer to write the address is:

The Manager
Holden Customer Assistance Centre
GPO Box 1714
Melbourne,
Australia, 3001.

NEW VEHICLE WARRANTY CERTIFICATE

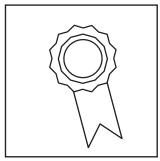

New Vehicle Warranty Application

This Warranty is given by GM Holden Ltd., ABN 84 006 893 232, ('Holden'). The Warranty applies to the vehicle identified on the inside front cover of the service booklet in your vehicle's glovebox. It is provided to the original and subsequent owners / operators driving the vehicle within Australia during the Warranty Period.
This Warranty is given in addition to all rights conferred by law on that person.

Australian vehicles

This Warranty is only applicable to vehicles purchased and operated in Australia.

Owners of vehicles purchased in Australia but operated overseas should consult their local Holden Dealer in the country of operation about any warranty applicable to their vehicle. This Warranty does not apply for Holden vehicles exported overseas. Similarly, this Warranty is not provided for vehicles purchased overseas and imported into Australia.

Repairs covered

Subject to the exclusions shown on the following page, this Warranty covers the correction, during the Warranty Period, of any vehicle defect related to materials or workmanship and advised to a Holden Dealer or Authorised Service Outlet, by repair or at Holden's option by replacement.

Warranty period

The coverage commences from the date of delivery (or in the case of a demonstrator vehicle the date when the vehicle was first placed into service by the Holden Dealer). The coverage expires at the end of the period of 3 years after the commencement date or after the vehicle has travelled 100,000 kilometres, whichever occurs first.

No charge

Warranty work undertaken (including parts and labour) will be carried out at no cost to the vehicle owner. However, this work should not be confused with servicing specified in the Maintenance Schedule in the service booklet for which a charge is payable.

NEW VEHICLE WARRANTY CERTIFICATE cont.

Warranty exclusions

- **Damage**

  Your Warranty does not extend to a
  Damage caused by an accident, fire, theft or moving objects striking the vehicle.
  Damage caused by industrial fallout, chemicals or sealants.
  Damage caused by atmospheric fallout or flood, hail, salt, etc.

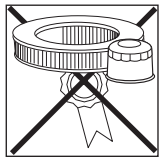

- **Maintenance items**

  Services such as brake adjustment, replacement of filters, wiper rubbers etc., which are required as part of normal vehicle maintenance (refer to the service booklet in your vehicle's glovebox).

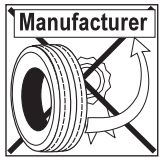

- **Tyres**

  The tyres (and tubes where applicable) fitted to your vehicle are not covered by this Warranty. However, they may be covered by the tyre manufacturer.

- **Batteries**

  Batteries are warranted for 12 months.

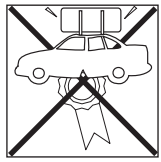

- **Misuse**

  This Warranty does not cover damage caused by:

  (a) Neglect, misuse or abuse of the vehicle such as by racing, rallying, overloading etc.
  (b) Operation of the vehicle after the defect is known.
  (c) Failure to carry out proper maintenance services (refer to the service booklet in your vehicle's glovebox).
  (d) Use of incorrect types and grades of fuel, oil or lubricants.
  (e) Alteration of the vehicle by anyone not authorised by Holden.
  (f) Fitting of parts or accessories not approved by Holden.
  (g) Any work carried out on the vehicle by anyone except an authorised Holden Dealer or authorised Service Outlet.

PARTS AND ACCESSORIES WARRANTY

Holden warrants Holden Approved Parts and Accessories ('Parts' and 'Accessories') for the periods and on the conditions set out below. The Warranty covers the correction, during the relevant Warranty Period, of defects in any such Parts and Accessories, by repair or at Holden's option by replacement.

- **Accessories installed to the new vehicle**

  Holden Approved Accessories installed by a Holden Dealer or authorised Service Outlet to the new vehicle at the time of purchase are covered together with the New Vehicle Warranty for the period of 3 years or 100 000 km, whichever occurs first.

- **Parts and Accessories installed after new vehicle delivery by a Holden Dealer or authorised Service Outlet**

  Parts and Accessories installed after new vehicle delivery by a Holden Dealer or authorised Service Outlet are covered for 2 years or 50 000 km (whichever occurs first). If the vehicle is still within the New Vehicle Warranty, the Parts and Accessories are covered by the longer of:

  2 years / 50,000 km (whichever occurs first)

  or

  the end of the New Vehicle Warranty.

  As an example, an Accessory installed in a 7 month old vehicle would be covered until the end of the New Vehicle Warranty; an Accessory installed in a 2½ year old vehicle would be covered until the end of 4½ years or a further 50 000 km from when the Accessory was installed.

- **Purchased at retail or trade**

  Holden genuine Parts and Accessories purchased at trade or retail and installed by other than a Holden Dealer or authorised Service Outlet are warranted for 1 year from the date of purchase. Please keep a receipt to support warranty claims.

  The Warranty does not cover the labour costs of removal / reinstallation of Parts and Accessories when installed or rectified by other than a Holden Dealer or authorised Service Outlet.

- **Parts and Accessories warranty exclusions**

  The tyres (and tubes where applicable) are not covered by this Warranty. However, they may be covered by the tyre manufacturer.

  Batteries are warranted for 12 months from date of purchase.

  Parts which are required as part of normal vehicle maintenance are warranted against manufacturing defect at the time of installation. Consult your Holden Dealer to confirm the period of this Warranty.

WARRANTY QUESTIONS AND ANSWERS

This section is designed to assist you in understanding the Holden Warranty provided with your new vehicle.

The following are some of the most frequently asked questions for which detailed answers are provided:

Q 1. How do I go about obtaining Holden Warranty service?

It is the responsibility of the Selling Holden Dealer to provide Holden Warranty service. Therefore, you should take your vehicle to the Selling Holden Dealer whenever Holden Warranty service is needed. However, if this is not possible, you may go to any other Authorised Holden Dealer. The details recorded inside the front cover of the service booklet will be required by the Holden Dealer.

Q 2. What should I do if my vehicle becomes unsafe or inoperative as a result of a defect which is covered by the Holden New Vehicle Warranty?

You should contact the nearest Authorised Holden Dealer or Holden Customer Assistance as soon as possible, and arrange for the Holden Dealer to carry out the required Holden Warranty service.

Q 3. What should I do if, in an emergency, Holden Warranty service is required and an Authorised Holden Dealer is not available to provide such service at the time?

If, in an emergency, a repair, replacement or adjustment (covered by the Holden New Vehicle Warranty) is required to enable your vehicle to be operated safely and it is not practical for you to go to an Authorised Holden Dealer, the service (to the extent that it is necessary to enable your vehicle to be operated safely) may be performed by any other qualified mechanic or repairer. A claim for the reasonable cost may be made through the Authorised Holden Dealer who would normally provide you with Holden Warranty service. You must also take your vehicle to the Authorised Holden Dealer for inspection of the service and / or completion of any required Holden Warranty service, as soon as possible.

Note: During normal business hours you should seek authorisation from your nearest Authorised Holden Dealer or Holden Customer Assistance, prior to commencement of repairs.

Q 4. Are damage or injury, loss of time, inconvenience, commercial or other direct or indirect loss covered by the Holden Warranty?

No, these items are not covered. Holden Warranty only covers the repair, replacement or adjustment of those parts of your vehicle which are found to be defective in materials or workmanship. No other types of claim for compensation of any kind, even if the same resulted from a consequence of a defect in materials or workmanship in your vehicle, will be recognised under the Holden New Vehicle Warranty.

You may have rights under the law to claim compensation outside of the Holden New Vehicle Warranty, but any claim based on those rights should be separately pursued.

WARRANTY QUESTIONS AND ANSWERS cont.

Q 5. Will I have to pay for maintenance costs during the Warranty Period?

Maintenance costs are not covered by the Holden New Vehicle Warranty. The Maintenance Schedule in the service booklet (in your vehicle's glovebox) specify the *minimum* maintenance required for your vehicle operating under normal conditions.

The maintenance items (except where they are required as a result of defects in materials or workmanship) for which you will have to pay include:

- Engine tune-up, including spark plugs replacement.
- Replacement of all filters, engine and other belts, hoses, wiper blades and clutch linings.
- Cleaning or flushing of fuel, coolant, brake, engine, transmission, differential, power steering etc., after 3000 km.
- Carbon and sludge removal.
- Maintenance servicing of emission control system devices.
- Adding to (or replacing) lubricants.
- Adding to (or replacing) air conditioning refrigerant after 3000 km.
- Any necessary adjustments to drive belts, transmissions, clutch, park brake etc.
- Wheel balancing after 3000 km.
- Wheel alignment.
- De-dusting or de-glazing of brake linings or pads after 3000 km.
- Brake lining wear or damaged brake components due to lining wear.
- Clutch lining wear or damaged clutch components due to lining wear.
- Brake disc pad or disc wear.
- Battery recharging.
- Paint, bright metal finish and trim, due to normal deterioration.
- Body panel adjustment after 3000 km.
- Door or bonnet lock adjustments.
- Glass or channel adjustments after 3000 km.
- Body rattle, squeaks and general tightening of bolts, fasteners and fittings – after 3000 km.
- Chipped glass or breakage.
- Torn or damaged floor mats or carpets.
- Normal wear and tear to trim components.

Q 6. Are my tyres covered by the Holden New Vehicle Warranty?

No. The tyres fitted to your vehicle are covered by a separate warranty provided by the tyre manufacturer. Any Authorised Holden Dealer will assist you by discussing any queries which you might have with respect to the tyre manufacturer's warranty with the tyre manufacturer's representative.

WARRANTY QUESTIONS AND ANSWERS cont.

Q 7. Will I have to pay for any costs or expenses in connection with the provision of Holden Warranty service?

All parts and labour used in carrying out Holden Warranty service at the premises of the servicing Holden Dealer are free of charge. Whenever Holden Warranty service is to be carried out by the servicing Holden Dealer it is your responsibility to deliver your vehicle to the servicing Holden Dealer's premises.

If, as a result of a defect which is covered by the Holden New Vehicle Warranty, your vehicle can not be driven safely and you arrange for the nearest Authorised Holden Dealer to carry out the required Holden Warranty service, Holden will accept reasonable towing costs to move your vehicle to the nearest Holden Dealer's premises. Before employing a towing company, contact the nearest Holden Dealer and / or Holden Customer Assistance to obtain guidance.

Q 8. Would my vehicle's engine benefit from fuel additives, oil additives or coolant additives not marketed by Holden?

The use of break-in oil, tune-up compounds, friction-reducing compounds and other supplemental additives is not recommended; their use will not only increase operating costs but may also be detrimental to the operation of your vehicle and may affect the validity of your Holden New Vehicle Warranty.

Only the fluids and lubricants referred to in this handbook should be used.

UNAUTHORISED STATEMENTS IN RELATION TO HOLDEN PRODUCTS

No Holden Dealer or other person is authorised or permitted to give or make any statement, assertion or undertaking in relation to the quality, performance, characteristics, descriptions or fitness for any purpose of any Holden product or in connection with the supply of any Holden product, which is at variance with any written statement, assertion or undertaking on any of these subjects given or made by Holden in its published sales literature, and Holden does not accept any responsibility for such unauthorised action.

CHAPTER 10

Tow and load

Page

10-2 Loading and weights
10-3 Towing and accessories

LOADING AND WEIGHTS

Overloading

Overloading is a safety hazard and could also shorten the life of your vehicle. Never exceed the loads specified for your vehicle or trailer, as specified below.

Vehicle capacities

Unladen Mass – the mass of the vehicle in running order, unoccupied and unladen with all fluid reservoirs filled to capacity (including fuel) and with all standard equipment fitted.

Gross Vehicle Mass Rating (GVMR) – the maximum allowable laden mass of the vehicle.

Front Axle Capacity and Rear Axle Capacity – the maximum allowable loads on the ground at the front and rear axles.

		SEDAN	
		M/T	A/T
Unladen Mass	(kg)	1145	1150
GVMR	(kg)	1575	1580
Front Axle Capacity	(kg)	810	810
Rear Axle Capacity	(kg)	820	820

M/T - Manual Transmission A/T - Automatic Transmission

TOWING AND ACCESSORIES

Towing

WARNING:

Your vehicle is designed primarily to carry passengers. It is not designed or intended to be used for towing. Towing may affect handling, durability and economy.

Roof racks

For occupant safety, and to avoid damaging the vehicle's roof, refer to your Holden Dealer for the approved rack system for your vehicle.

Fitting accessories (bull bars, driving lamps, insect screens etc)

When fitting accessories, take care not to restrict airflow through the air conditioning condenser and the radiator, otherwise engine overheating and / or poor air conditioning performance may result.

The mass of all accessories must be considered when evaluating the vehicle's overall loaded condition.

Remember that bull bars may affect airbag operation. Refer to chapter 6 for details.

Carrying gas cylinders in vehicles

WARNING:

Gas cylinders can leak, creating a risk of fire or explosion. As a precaution, ensure adequate ventilation when carrying gas cylinders. They must be restrained from rolling around, and where possible, placed in the load area of the vehicle. It is recommended that if gas cylinders are frequently transported that a purpose built carrying compartment be used. Transportation of gas cylinders is regulated by legislation in some states.

CHAPTER 11

Cleaning

Page

11-2 Interior cleaning

11-5 Caring for paint

11-7 Paint polishing, wheels and tyres

11-8 Exterior glass cleaning

11-9 Cleaning products

INTERIOR CLEANING

WARNING:

Many cleaners may be toxic, flammable or may damage the interior. When cleaning the interior, avoid volatile cleaners such as: acetone, lacquer thinners, enamel reducers, nail polish removers, or cleaners such as: laundry soaps, bleaches or reducing agents. Never use carbon tetrachloride, petrol or naphtha for any cleaning purpose. Be sure the vehicle is well ventilated while using any cleaners and always follow the cleaning manufacturer's recommendations.

Care and cleaning of upholstery

Dust and dirt which accumulates on upholstery should be removed every few weeks; more often with constant driving. This can be done readily with a vacuum cleaner. Before attempting to remove spots and stains, it is necessary to determine as accurately as possible:

- The type of fabric.
- The nature and age of the stain.
- The effect of the stain removal agent upon the colour, structure and general appearance of the upholstery.

It is essential that stains be removed as soon as possible after they have been made. If they are allowed to remain on the fabric for any length of time they may become oxidised or set, and removal becomes difficult, if not impossible.

Cleaning PVC coated fabrics

Vinyl (PVC) coated fabrics are used for seating, head linings and auxiliary trimming. The grades used vary according to their function. PVC fabrics are generally made by coating fabric with synthetic resins. Care of PVC fabrics is a relatively simple but important matter. The surface should be wiped over with a dry cloth during the regular cleaning of the vehicle.

Should dirt accumulate and become embedded in the material pattern, the following procedure is recommended:

1. Using lukewarm water and soap, work up thick suds on a piece of cheesecloth, and apply to the surface. A soft bristle brush can be used to remove stubborn stains or dirt embedded in the grain of the material.
2. Repeat using only a damp cloth and no soap.
3. Wipe dry with a soft cloth. The above cleaning instructions also apply to the rubber floor mats.

INTERIOR CLEANING cont.

Cleaning cloth trim

Where the seats in your vehicle are upholstered with cloth, the following instructions should be observed:

- Most loose dirt and dust can be removed by a vacuum cleaner or soft brush.
- Do not use a whisk broom or a coarse hair brush.
- If normal soiling should take place it is recommended to sponge the fabric lightly with warm water containing a detergent and a small amount of ammonia. The fabric should then be rubbed lightly, and if necessary, sponged again to remove anything stubborn. Soak up excess fluid with a dry cloth.

Vehicles with air bags

Use only a dry cloth or mild cleaner to clean the steering wheel and instrument panel. Do not use any aggressive cleaning agents.

Cleaning carpet

Thoroughly brush or vacuum the carpet. In many instances the carpet may require no further cleaning. If the carpet is extremely soiled, thoroughly vacuum it to remove loose dirt then, using a good quality carpet cleaner, clean approximately one square foot at a time. After each area is cleaned, remove as much of the cleaner as possible with a vacuum cleaner.

INTERIOR CLEANING cont.

Cleaning seat belts

Cleaning of seat belts can be carried out by using a mild non-abrasive soap and lukewarm water. After washing be sure to thoroughly sponge the washing solution out of the belts.

WARNING:

Do not bleach or dye seat belts since this may severely weaken them.

Cleaning interior glass

The interior glass area of the vehicle should be cleaned using Holden Glass Cleaner with a clean soft cloth. Care must be taken when cleaning inside the rear window so as not to damage the demister or radio antenna.

Never use abrasive cleaners on any vehicle glass, as they may cause scratches.

CARING FOR PAINT

To help preserve the shiny new vehicle finish, special attention should be given to correctly treat those conditions that can damage the paint.

Road bloom: If, over a long period of time, oils, dirt, exhaust and other pollutants are allowed to build up, they may combine to affect the paint finish.

Etching: Tree sap, bird droppings, salt water and other natural deposits can, if allowed to stay on the paint, leave an etching or scarring.

Pitting: Tar spots and some industrial fallout can react chemically and may cause pitting to the surface of the paint.

Paint inspection

Regular inspection of the vehicle should be made for scratch marks, cracks or damaged areas, all of which could develop rust. Any deep scratches, cracks or break-down in the finish should be repaired without delay. Care should be taken to ensure that any rusting is counteracted immediately, otherwise rust 'creep' will extend beyond the damaged area, particularly in tropical or coastal areas, where the moist, or salt-laden air accelerates rusting. The paint finish of the vehicle gives a very high degree of protection against the weather, but it should be realised that wear and deterioration occur when the vehicle is exposed to corroding elements for prolonged periods. The vehicle therefore should be garaged whenever possible.

To prevent damage of the paint surface, foreign matter should always be removed as soon as possible. Due to the acidic content, it is recommended that foreign matter such as bird droppings be removed within 24 hours.

The way the paint keeps its condition over time can be assisted by you. The easiest way to keep the paint looking bright and shiny is to keep it clean. A wash once a week will do wonders. However, it must be done correctly.

Washing your vehicle

- Never use an automatic wash that has anything that touches the paint other than water.
- Wash your vehicle once a week to remove any build up of road grime that may have been deposited on your paint.
- Find a cool, shady spot to wash it. Do not wash it in direct sunlight.
- Hose the vehicle down from top to bottom with lots of cold water. This removes any grit or other loose particles and substances. Do not use a sponge or cloth yet.
- Fill a bucket with lukewarm water and add no more than 2 capfuls of gentle detergent. Do not use hot water, strong soap or chemical detergents.
- To remove bird droppings on paint, soak with a wet sponge for several minutes before washing off. If still evident, use a solution of one litre of water and 110 grams of dissolved baking soda (Bicarbonate of Soda). Flush the washed parts with clean water.
- Starting with the roof, use a clean sponge to clean a small section at a time. Do not allow liquid to dry before rinsing off that section with clean water. When you have completed each section, rinse the whole vehicle again with cold water.
- Dry the clean vehicle thoroughly with a good quality chamois.

CARING FOR PAINT cont.

WARNING:

Care should be taken when moving the vehicle after washing, in case water has affected the brakes. Applying the brakes lightly will indicate if they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with a clear area ahead, until brake performance returns to normal.

Removing stains, such as grease, oil and tar spots

Just washing your vehicle regularly means that most of the harmful substances deposited on the paint will be removed before they can cause permanent damage. However, some substances are not easy to remove. So if you notice stains on the paint, make sure that you remove them at the earliest possible opportunity.

Grease and oil, and even tar if it is fresh, can be removed from the paint with a little kerosene or turpentine. As a precaution against staining, wash and polish the area as soon as possible after the stain has been removed.

A rubbing or cutting compound can be used after a normal wash. However this should never be done on a regular basis because it removes paint.

WARNING:

- **Some chemical cleaners used for removing road oils and tars from painted surfaces have been found to be detrimental to automotive paint.**
- **If petrol is spilt on the paint when refilling, flush off immediately with clean water, as petrol has a tendency to stain or soften the new paint finish during the weathering out period, particularly when the vehicle is exposed to high temperatures.**
- **Petrol must not be used to clean any painted or plastic surfaces.**

Ventilation system intake

The intake area between the bonnet and the windshield may collect leaves, which will impair air flow into the vehicle.

It is recommended to clear this area of debris whenever you wash your vehicle.

Under vehicle washing

Your vehicle has a factory-applied PVC undercoating in the wheel arches (including longitudinal members) which provides permanent protection and needs no special maintenance. The surfaces of the vehicle underside not covered by PVC are provided with a durable protective wax coating. Once a year, preferably before the start of the cold season the wax coating and PVC coating should be checked and, if necessary, restored to perfect condition. Commercial bitumen and rubber materials can damage PVC coating. Have all work on the underbody performed by your Holden Dealer, as it requires knowledge of the specified materials and experience concerning their application.

The underbody should be washed following the end of the cold weather season to remove any dirt adhering to the underbody, as this may also contain salt.

PAINT POLISHING, WHEELS AND TYRES

Polishing

Under normal circumstances the paint does not need polishing to retain its shine. A weekly wash is sufficient. However, the use of a Polymer Glaze about every three months will reduce the effects of road bloom by removing natural contaminants which can build up on the paint.

Do not attempt to apply a polish without first washing. This will ensure that all the loose grit, surface dirt, dust or grease etc, is removed.

Tyres

Sponging with cold water is all that is necessary for normal cleaning. Oil and grease should be removed with soap and water or detergent. For tar or other substances, a mild abrasive, such as mechanic's hand soap or kitchen cleaning powder, may be used if necessary. Thoroughly wash the tyres with water to finish. Petrol must not be used for cleaning tyres.

Alloy wheels

To preserve the original appearance of alloy wheels, keep them clean and free from build up of road dirt. Do not use abrasive cleaners on alloy wheels.

EXTERIOR GLASS CLEANING

Glass cleaning – general

Special care should be taken to avoid scratching the glass. If it is cleaned at the same time as the rest of the vehicle, there is a possibility that particles of grit will cause fine scratches. Flush off any mud on the glass when washing the body, but leave the final cleaning and polishing until afterwards. Use Holden Glass Cleaner and wash each section of glass in turn, making sure the water, its container and the sponge are quite clean and free from grit. Clean old linen cloth is better than new material for polishing glass.

Windshield

It is important to keep the windshield clean so the wiper blades may be as effective as possible. Old wiper blades can cause windshield scratching and so should be regularly inspected and replaced.

Abrasive cleaners should never be used to clean glass as they can cause scratches, impairing night vision. After the windshield has been cleaned with a wet sponge it should be wiped over with a soft, lint free cloth or chamois.

It is recommended that Holden Optikleen be added to the windshield washer reservoir.

Wiper blades

Oil and road scum thrown up on the windshield causes smearing when the wipers are switched on, as the dirt is transferred onto the wiper blades. Many owners, while methodically cleaning the windshield glass, omit to clean the wiper blades and consequently smearing of the glass reappears immediately after the wiper blades are used. The blades can be cleaned by lifting them off the windshield and cleaning with Holden Optikleen and a clean cloth.

Do not operate the wiper blades by hand as this may damage the wiper drive mechanism.

If the wiper blades are used to clean dust and dirt from the windshield in dry conditions always use the washer system first to wet the windshield. Ensure the windshield washer reservoir is not empty.

Should the wiper blades be frozen to the windshield, they must be lifted off and freed by hand before switching on the wipers.

CLEANING PRODUCTS

Part number	Size	Description	Usage
92145132	237 ml	Quick and Easy Speed Finish	Seals in a deep, lustrous glazed finish. Long life protection from oxidation, salt and weather damage.
92145418	437 ml	Quick and Easy Speed Finish	Seals in a deep, lustrous glazed finish. Long life protection from oxidation, salt and weather damage.
92145130	237 ml	All Purpose Cleaner	Cleans and deodorises velour, most vinyl upholstery, hood linings, mats and carpets.
92145416	437 ml	All Purpose Cleaner	Cleans and deodorises velour, most vinyl upholstery, hood linings, mats and carpets.
92145133	237 ml	Glass Cleaner	Cleans all glass surfaces.
92145419	437 ml	Glass Cleaner	Cleans all glass surfaces.
92140005	500 ml	Optikleen	Windscreen washer solvent.
92140004	5 ml	Optikleen Sachet	Windscreen washer solvent; 1 sachet per washer bottle refill.
92145129	237 ml	Hi Suds Car Wash	Cleans vehicle exterior.
92145415	437 ml	Hi Suds Car Wash	Cleans vehicle exterior.
92145131	237 ml	Vinyl and Trim Dressing	Seals and protects vinyl upholstery and plastic trim.
92145417	437 ml	Vinyl and Trim Dressing	Seals and protects vinyl upholstery and plastic trim.
92145135		Chamois	Cloth for wiping off excess water from the vehicle's exterior after washing and rinsing.
92145134		Handle Grip Sponge	Sponge for washing the vehicle.
92145136		Micro fibre Glass Cleaning Cloth	Cloth for cleaning all glass surfaces.
92145137		Micro fibre General Purpose Cleaning/ Polishing Cloth	Cloth for general purpose cleaning/ polishing.

CHAPTER 12

Servicing

Page

12-2 Determining service intervals

12-3 Service intervals

12-4 Servicing

12-6 Maintenance schedule

12-16 Service charges

12-17 Service coupons

DETERMINING SERVICE INTERVALS

Determining the proper service interval

The operating conditions of your vehicle determine the service interval as shown below. Use the odometer reading or the time interval, whichever occurs first, to determine when the service is due.

Under certain operating conditions, not only does your Holden vehicle require more regular servicing, it also requires additional servicing to ensure maximum safety, performance and longevity.

The additional service requirements typically include more frequent replacement of lubricating oils for example, engine transmission fluids and the more frequent inspection of steering, suspension and brake system components.

Brake fluid deteriorates with time and should normally be replaced every two years.

Your Holden Dealer will be able to determine the appropriate service requirements for your vehicle according to your operating conditions.

If you drive less than 15 000 km in a 12 month period and your driving patterns are similar to those listed in the 7,500km (or 6 month) service criteria, then some engine oils can deteriorate faster than normal, requiring changing more frequently.

7,500 km or 6 months intervals (Intermediate service)

Use 7,500 km or 6 months intervals if you regularly operate your vehicle under any or all of the following conditions:

- Operating on rough, dusty or loose surfaced roads.
- Repeated short trips less than 5 km in cold weather, or where the engine does not reach normal operating temperature.
- Extensive idling and / or low-speed driving for a long distance for example police cars, taxis or door-to-door calls.
- Extended high-speed driving under heavy load in high temperatures.

15 000 km or 12 month intervals (regular service)

If any of the above conditions are not relevant to your driving patterns, you need only perform maintenance every 15 000 km or 12 months.

60 000 km interval

Change the automatic transmission fluid every 60,000 km if the vehicle is mainly driven under severe conditions:

- In heavy city traffic where the outside temperature regularly reaches 32°C or higher.
- In hilly or mountainous terrain.
- Commercial use.

SERVICE INTERVALS

Distance / time based service intervals

The first inspection is due at 3000km or 3 months (whichever occurs first). The first service is due at 15 000 km or 12 months (whichever occurs first). Thereafter, at every 15 000 km or 12 months after the last service (whichever occurs first). Additional services are required under certain driving conditions, for example when towing. (Refer to page 2) of this chapter.

SERVICING

The free first inspection

The 3 000 km inspection is performed free of charge by the Selling Dealer. A different Holden Dealer may perform this inspection if provided with a Letter of Authority or similar.

The Selling Dealer may supply this authorisation upon request.

Service coupons

Service coupons are provided at the end of this booklet. When each service is performed, the appropriate coupon is removed. This reveals the next coupon to remind you when the next service is due.

After each service, check if the service has been validated with the Holden Dealer's stamp and signature on the coupon stub. This is important as it not only assists in the determination of Warranty Claims, but enhances the value of the vehicle when selling.

Service coupons are provided for each service up to the 210 000 km service. After that time, the Maintenance schedule on pages 12-6 to 12-15 should be followed, commencing with the 15 000 km service.

If you are driving your vehicle outside of the normal driving operations you may need to conduct intermediate servicing. Service coupons for these intermediate services can be found between each of the major services.

Your Holden Dealer

When it comes to service, remember that your Holden Dealer has the trained personnel and specialised equipment to correctly service your vehicle. Your Holden Dealer invites you to return for all your service needs both during and after the Warranty Period.

The safety, economy, emission control, performance and reliability of your vehicle can not be assured unless regular maintenance is performed, preferably by factory-trained technicians at Holden Dealers.

Warranty and service

All maintenance services listed in this Handbook, and replacement of service items, are the responsibility of the owner and as such are NOT considered under the provisions of the New Vehicle Warranty to be rectification of defective material and workmanship. Items such as wheel alignment, necessary adjustments to drive belts, transmission, clutch and parking brake or any other items which may require servicing due to fair wear and tear are carried out at the owner’s cost.

Damage caused by failure to have proper maintenance services carried out by an authorised Holden Dealer or authorised Service Outlet, or in accordance with Holden's specifications, may void your New Vehicle Warranty. It is strongly recommended that you read the 'New Vehicle Warranty' in Chapter 9 of your Owner's Handbook so that you are aware of your Warranty exclusions.

Notes

MAINTENANCE SCHEDULE

x 1000 km or cumulative months **(whichever occurs first)**	3 3	15 +12	30 +12	45 +12	60 +12	75 +12	90 +12	105 +12
Under bonnet								
*Change engine oil and engine oil filter.	-	X	X	X	X	X	X	X
*Check fluid levels: brake, power steering, clutch, auto transmission and washer. Check coolant % with tester and check level (pressure test if level is low).	X	X	X	X	X	X	X	X
Check battery terminal security.	X	X	X	X	X	X	X	X
Check accessory drive belt adjustment and condition.	-	-	X	X	X	X	X	X
Check for signs of deterioration and / or leaks from the engine, fluid reservoirs, air ducts, all hoses and clamps.	X	X	X	X	X	X	X	X
Drain and refill cooling system with recommended coolant and clean fresh water. Clean the outside of the radiator and A/C condenser.	-	-	-	X	-	-	X	-
*Replace air cleaner element.	-	-	-	X	-	-	X	-
Replace spark plugs.	-	-	X	-	X	-	X	-
Replace timing belt. Inspect tensioner, idler, roller and crank drive gear.	-	-	-	-	X	-	-	-

Maintenance schedule continued next page.

*Items requiring additional servicing under some driving conditions.

Refer to page 12-2.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	120 +12	135 +12	150 +12	165 +12	180 +12	195 +12	210 +12
Under bonnet							
*Change engine oil and engine oil filter.	X	X	X	X	X	X	X
*Check fluid levels: brake, power steering, clutch, auto transmission and washer. Check coolant % with tester and check level (pressure test if level is low).	X	X	X	X	X	X	X
Check battery terminal security.	X	X	X	X	X	X	X
Check accessory drive belt adjustment and condition.	X	X	X	X	X	X	X
Check for signs of deterioration and / or leaks from the engine, fluid reservoirs, air ducts, all hoses and clamps.	X	X	X	X	X	X	X
Drain and refill cooling system with recommended coolant and clean fresh water. Clean the outside of the radiator and A/C condenser.	-	X	-	-	X	-	-
*Replace air cleaner element.	-	X	-	-	X	-	-
Replace spark plugs.	X	-	X	-	X	-	X
Replace timing belt. Inspect tensioner, idler, roller and crank drive gear.	X	-	-	-	X	-	-

Maintenance schedule continued next page.

*Items requiring additional servicing under some driving conditions.

Refer to page 12-2.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	3 3	15 +12	30 +12	45 +12	60 +12	75 +12	90 +12	105 +12
Under bonnet								
Spark plug leads.	-	-	-	-	-	-	X	-
Check EVAP canister and vapour lines.	-	-	-	X	-	-	X	-
Check PCV system.	-	-	X	-	X	-	X	-

Maintenance schedule continued next page.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	120 +12	135 +12	150 +12	165 +12	180 +12	195 +12	210 +12
Under bonnet							
Spark plug leads.	-	-	-	-	X	-	-
Check EVAP canister and vapour lines.	-	X	-	-	X	-	-
Check PCV system.	X	-	X	-	X	-	X

Maintenance schedule continued next page.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	3 3	15 +12	30 +12	45 +12	60 +12	75 +12	90 +12	105 +12
Under vehicle								
Check engine & transmission for leaks.	X	X	X	X	X	X	X	X
Inspect front disc pads for wear and discs for surface condition.	-	X	X	X	X	X	X	X
Inspect rear brake drums and linings	-	X	X	X	X	X	X	X
Check and adjust park brake.	X	X	X	X	X	X	X	X
Check wheel nut torque, tyre wear and tyre pressures.	X	X	X	X	X	X	X	X
*Drain, refill and bleed brake system. Check brake performance during road test.			Change every 24 months (regardless of km)					
Drain, refill and bleed clutch system.			Change every 24 months (regardless of km)					
Check all brake and fuel lines and hoses for condition, attachment and routing.	X	X	X	X	X	X	X	X
*Inspect front and rear suspension and steering for damaged, loose or missing parts, wear or lack of lubrication. Inspect power steering lines and hoses for condition, attachment, routing and leaks.	X	X	X	X	X	X	X	X
Inspect exhaust and adjacent underbody for damaged, missing or misaligned parts, open seams, holes or loose connections. Run the vehicle and check for exhaust leaks.	X	X	X	X	X	X	X	X
Inspect all constant velocity joints for damage or torn boots and rubber couplings for tears or splits.	X	X	X	X	X	X	X	X

Maintenance schedule continued next page.

*Items requiring additional servicing under some driving conditions.

Refer to page 12-2.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	120 +12	135 +12	150 +12	165 +12	180 +12	195 +12	210 +12
Under vehicle							
Check engine & transmission for leaks.	X	X	X	X	X	X	X
Inspect front disc pads for wear and discs for surface condition.	X	X	X	X	X	X	X
Inspect rear brake drums and linings	X	X	X	X	X	X	X
Check and adjust park brake.	X	X	X	X	X	X	X
Check wheel nut torque, tyre wear and tyre pressures.	X	X	X	X	X	X	X
*Drain, refill and bleed brake system. Check brake performance during road test.			Change every 24 months (regardless of km)				
Drain, refill and bleed clutch system.			Change every 24 months (regardless of km)				
Check all brake and fuel lines and hoses for condition, attachment and routing.	X	X	X	X	X	X	X
*Inspect front and rear suspension and steering for damaged, loose or missing parts, wear or lack of lubrication. Inspect power steering lines and hoses for condition, attachment, routing and leaks.	X	X	X	X	X	X	X
Inspect exhaust and adjacent underbody for damaged, missing or misaligned parts, open seams, holes or loose connections. Run the vehicle and check for exhaust leaks.	X	X	X	X	X	X	X
Inspect all constant velocity joints for damage or torn boots and rubber couplings for tears or splits.	X	X	X	X	X	X	X

Maintenance schedule continued next page.

*Items requiring additional servicing under some driving conditions.

Refer to page 12-2.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	3 3	15 +12	30 +12	45 +12	60 +12	75 +12	90 +12	105 +12
Under vehicle								
Check manual transmission oil level.	X	X	X	X	X	X	X	X
Wheel alignment.	Inspect when abnormal condition is noted							
Inspect steering wheel and linkage.	X	X	X	X	X	X	X	X
Check drive shaft boots.	X	X	X	X	X	X	X	X

Maintenance schedule continued next page.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	120 +12	135 +12	150 +12	165 +12	180 +12	195 +12	210 +12
Under vehicle							
Check manual transmission oil level.	X	X	X	X	X	X	X
Wheel alignment.	Inspect when abnormal condition is noted						
Inspect steering wheel and linkage.	X	X	X	X	X	X	X
Check drive shaft boots.	X	X	X	X	X	X	X

Maintenance schedule continued next page.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	3 3	15 +12	30 +12	45 +12	60 +12	75 +12	90 +12	105 +12
Vehicle interior								
*Check park brake operation.	X	X	X	X	X	X	X	X
Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.	X	X	X	X	X	X	X	X
Replace remote control batteries.	-	-	X	-	X	-	X	-
*Replace Pollen Filter. **Note:** It is recommended to change the pollen filter every 15 000 kms if vehicle occupants suffer from respiratory complaints.	-	-	-	X	-	-	X	-
Vehicle exterior								
Check operation of all exterior lights.	X	X	X	X	X	X	X	X
Lubricate bonnet catch, hinges and all lock cylinders.	X	X	X	X	X	X	X	X
Check transmitter range of remote control.	X	X	X	X	X	X	X	X
Road test								
Check braking, steering, engine response & transmission operation. Check park pawl operation. Check air conditioner performance. Check neutral start switch.	X	X	X	X	X	X	X	X
Check for and complete, all relevant outstanding service campaigns and manufacturer recalls.	X	X	X	X	X	X	X	X

Maintenance schedule continued next page.

*Items requiring additional servicing under some driving conditions.

Refer to page 12-2.

MAINTENANCE SCHEDULE cont.

x 1000 km or cumulative months **(whichever occurs first)**	120 +12	135 +12	150 +12	165 +12	180 +12	195 +12	210 +12
Vehicle interior							
*Check park brake operation.	X	X	X	X	X	X	X
Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.	X	X	X	X	X	X	X
Replace remote control batteries.	X	-	X	-	X	-	X
*Replace Pollen Filter. **Note:** It is recommended to change the pollen filter every 15 000 kms if vehicle occupants suffer from respiratory complaints.	-	X	-	-	X	-	-
Vehicle exterior							
Check operation of all exterior lights.	X	X	X	X	X	X	X
Lubricate bonnet catch, hinges and all lock cylinders.	X	X	X	X	X	X	X
Check transmitter range of remote control.	X	X	X	X	X	X	X
Road test							
Check braking, steering, engine response & transmission operation. Check park pawl operation. Check air conditioner performance. Check neutral start switch.	X	X	X	X	X	X	X
Check for and complete, all relevant outstanding service campaigns and manufacturer recalls.	X	X	X	X	X	X	X

*Items requiring additional servicing under some driving conditions.

Refer to page 12-2.

SERVICE CHARGES

Lubricants and materials

The owner is charged for all lubricants and materials used.

Brake fluid

Must be changed every 24 months (charge added for brake fluid and 0.4 hour labour).

Clutch fluid

Must be changed every 24 months (charge added for clutch fluid and 0.2 hour labour).

Engine coolant

Must be changed every 36 months (charge added for engine coolant, and 0.4 hour labour).

Fault repairs

The owner is charged for the repair or replacement of any part found faulty during a service check and not covered by Holden new Warranty.

Where any deficiencies are noted, such items should be reported to the owner / operator and the extra work authorised.

Additives not recommended

The use of break-in oil, tune-up compounds, friction reducing compounds and other supplemental additives are not recommended; their use not only increases operating costs but may indeed be harmful to your vehicle.

Free inspection Coupon: 3 000 km or 3 months

This coupon should not be removed until the vehicle is presented for service.

Owner's Name Mr / Mrs / Miss / Other .....

Address .....

Town .....

State ..... Postcode .....

Registration ..... Engine no .....

ISOVIN ..... Model .....

Selling Dealer's Stamp and Signature .....

Date of Acquisition .....

This vehicle has been thoroughly checked in accordance with the schedule on the reverse side of this coupon.

Servicing Dealer's Stamp and Signature .....

Servicing Dealer .....

Town ..... State .....

Owner's signature .....

This inspection is provided free of charge.

3 000 km / 3 months Free inspection validation

This vehicle has been thoroughly checked in accordance with the 3 000 km / 3 month free inspection.

Dealer .....

Service Manager's signature .....

Date ..... Odometer reading .....

Under bonnet

- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect drive shaft boots.
- ❑ Inspect steering wheel and linkage.

Vehicle interior

- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

***Service Coupon*: 15 000 km or 12 months**

from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.3 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check air cleaner element.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
15 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 15 000 km / 12 month service.
Servicing Dealer .....
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Inspect brake and clutch system.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

***Service Coupon*: 22 500 km or 6 months**

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
22 500 kms or 6 months since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 22 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Service Coupon: 30 000 km or 12 months
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.7 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- remote control batteries
- spark plugs
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Check PCV system.
- ❑ Replace spark plugs.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
30 000 kms or 12 months since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 30 000 km / 12 month service.
Servicing Dealer .....
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Replace remote control batteries.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 37 500 km or 6 months

from the last major service (whichever occurs first)
*Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
37 500 kms or 6 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 37 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Service Coupon: 45 000 km or 12 months

from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 2 hours labour
- engine oil and engine oil filter
- air cleaner element
- pollen filter
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Drain and refill cooling system with recommended coolant and clean fresh water. Clean the outside of the radiator and A/C condenser.
- ❑ Replace air cleaner element.
- ❑ Check EVAP canister and vapour lines.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
45 000 kms or 12 months since last service (whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 45 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 52 500 km or 6 months

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
52 500 kms or 6 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 52 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Service Validation
60 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 60 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....
Additional services performed:
.....
.....
.....
.....

Service Coupon: 60 000 km or 12 months
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 2.5 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- spark plugs
- remote control batteries
- timing belt
- tensioner, idler and roller if required
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant
- if automatic transmission fluid changed add 0.4 hour plus fluid

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Replace timing belt. Inspect tensioner, idler, roller and crank drive gear.
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Replace automatic transmission fluid if vehicle is driven under severe conditions, see page 12-2.
- ❑ Check PCV system.
- ❑ Replace spark plugs.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Replace remote control batteries.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

***Service Coupon*: 67 500 km or 6 months**

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
67 500 kms or 6 months since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 67 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

***Service Coupon*: 75 000 km or 12 months**

from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.3 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.

- ❑ Brake Fluid Change every 2 years (regardless of km).
- ❑ Clutch Fluid Change every 2 years (regardless of km).
- ❑ Coolant Change every 3 years (regardless of km).

Service items continue next page.

Service Validation
75 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 75 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....
Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check and adjust park brake.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

***Service Coupon*: 82 500 km or 6 months**

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
82 500 kms or 6 months since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 82 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

***Service Coupon*: 90 000 km or 12 months**
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 2.1 hours labour
- engine oil and engine oil filter
- pollen filter
- air cleaner element
- spark plug leads
- spark plugs
- remote control batteries
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Drain and refill cooling system with recommended coolant and clean fresh water. Clean the outside of the radiator and A/C condenser.
- ❑ Replace air cleaner element.
- ❑ Replace spark plug leads.
- ❑ Check EVAP canister and vapour lines.
- ❑ Check PCV system.
- ❑ Replace spark plugs.

- ❑ Brake Fluid Change every 2 years (regardless of km).
- ❑ Clutch Fluid Change every 2 years (regardless of km).
- ❑ Coolant Change every 3 years (regardless of km).

Service items continue next page.

Service Validation
90 000 kms or 12 months since last service (whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 90 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter.
- ❑ Replace remote control batteries.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

***Service Coupon*: 97 500 km or 6 months**

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
97 500 kms or 6 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 97 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Service Coupon: 105 000 km or 12 months

from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.3 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses, and clamps.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
105 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 105 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Check and adjust park brake.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 112 500 km or 6 months

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
112 500 kms or 6 months since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 112 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Service Coupon: 120 000 km or 12 months
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 2.5 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- timing belt
- remote control batteries
- tensioner, idler and roller if required
- spark plugs
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant
- if automatic transmission fluid changed add 0.4 hour plus fluid

There will also be a charge for additional services as requested:
.....
.....
.....

Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Replace timing belt. Inspect tensioner, idler, roller and crank drive gear.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Replace automatic transmission fluid if vehicle is driven under severe conditions, see page 12-2.
- ❑ Replace spark plugs.
- ❑ Check PCV system.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
120 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 120 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Replace remote control batteries.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 127 500 km or 6 months

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
127 500 kms or 6 months since last service (whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 127 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....

Service Coupon: 135 000 km or 12 months
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 2 hours labour
- engine oil and engine oil filter
- air cleaner element
- pollen filter
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Replace air cleaner element.
- ❑ Drain and refill cooling system with recommended coolant and clean fresh water. Clean the outside of the radiator and A/C condenser.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Check EVAP canister and vapour lines.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
135 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 135 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Check and adjust park brake.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 142 500 km or 6 months

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
142 500 kms or 6 months since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 142 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Service Coupon: 150 000 km or 12 months
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.7 hours labour
- engine oil and engine oil filter
- remote control batteries
- pollen filter (if required)
- spark plugs
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check PCV system.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Replace spark plugs.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
150 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 150 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Replace remote control batteries.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 157 500 km or 6 months

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....

Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
157 500 kms or 6 months since last service (whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 157 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....

Service Coupon: 165 000 km or 12 months

from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.3 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Service items continue next page.

Service Validation
165 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 165 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....
Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 172 500 km or 6 months

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
172 500 kms or 6 months since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 172 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....

Service Coupon: 180 000 km or 12 months

from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 3.1 hours labour
- engine oil and engine oil filter
- pollen filter
- spark plugs
- spark plug leads
- air cleaner element
- timing belt
- remote control batteries
- tensioner, idler and roller if required
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant
- if automatic transmission fluid changed add 0.4 hour plus fluid

There will also be a charge for additional services as requested:
.....
.....
.....

Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Replace timing belt. Inspect tensioner, idler, roller and crank drive gear.
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Drain and refill cooling system with recommended coolant and clean fresh water. Clean the outside of the radiator and A/C condenser.
- ❑ Replace automatic transmission fluid if vehicle is driven under severe conditions, see page 12-2.

Service items continue next page.

Service Validation
180 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 180 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under bonnet cont.

- ❑ Check PCV system.
- ❑ Check EVAP canister and vapour lines.
- ❑ Replace air cleaner element.
- ❑ Replace spark plugs and leads

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter.
- ❑ Replace remote control batteries.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Service Coupon: 187 500 km or 6 months

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation 187 500 kms or 6 months since last service (whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 187 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....

Service Coupon: 195 000 km or 12 months
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.3 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.

- ❑ Brake Fluid Change every 2 years (regardless of km).
- ❑ Clutch Fluid Change every 2 years (regardless of km).
- ❑ Coolant Change every 3 years (regardless of km).

Service items continue next page.

Service Validation
195 000 kms or
12 months
since last service
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 190 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check and adjust park brake.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

***Service Coupon*: 202 500 km or 6 months**

*from the last major service (whichever occurs first) Only required for vehicles that are operated in extreme conditions.**

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 0.4 hours labour

There will also be a charge for additional services as requested:
.....
.....
.....

Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under vehicle

- ❑ Inspect front and rear disc pads for wear.
- ❑ Check all brake hoses and pipes for condition, attachment and routing.
- ❑ Inspect steering system for damaged, loose or missing parts, signs of wear or lack of lubrication.
- ❑ Inspect ball joints and dust covers.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect light operation.

- ❑ Brake Fluid Change every 2 years (regardless of km)
- ❑ Clutch Fluid Change every 2 years (regardless of km)
- ❑ Coolant Change every 3 years (regardless of km)

*For applicable operating conditions, refer to page 12-2.

Service Validation
202 500 kms or 6 months since last service (whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 202 500 km / 6 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

***Service Coupon*: 210 000 km or 12 months**
from the last service (whichever occurs first)

I authorise performance of the services specified on this coupon. I understand that I will be charged for the time, parts and lubricants as listed:

- 1.7 hours labour
- engine oil and engine oil filter
- pollen filter (if required)
- remote control batteries
- spark plugs
- if brake fluid changed add 0.4 hour plus brake fluid
- if clutch fluid changed add 0.2 hour plus clutch fluid
- if engine coolant changed add 0.4 hour plus coolant

There will also be a charge for additional services as requested:
.....
.....
.....
Signature ..... Date .....

Note: If the owner of this vehicle has changed since the last service, refer to the change form in the introduction of your Owner's Handbook.

Under bonnet

- ❑ Change engine oil and engine oil filter.
- ❑ Check fluid levels: brake, power steering, clutch, automatic transmission and washer. Check coolant inhibitor % with tester and check level (pressure test if level low).
- ❑ Check battery terminal security.
- ❑ Check accessory drive belt adjustment and condition.
- ❑ Check for signs of deterioration and/or leaks from engine, fluid reservoirs, air ducts, all hoses and clamps.
- ❑ Check PCV system.
- ❑ Replace spark plugs.

- ❑ Brake Fluid Change every 2 years (regardless of km).
- ❑ Clutch Fluid Change every 2 years (regardless of km).
- ❑ Coolant Change every 3 years (regardless of km).

Service items continue next page.

Service Validation
210 000 kms or 12 months since last service (whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 210 000 km / 12 month service.
Servicing Dealer .....
Brake fluid changed: YES / NO Coolant changed: YES / NO
Clutch fluid changed YES / NO / N/A (Not Applicable)
Date of Service ..... Odometer .....
Signed .....

Additional services performed:
.....
.....
.....
.....

Under vehicle

- ❑ Check engine and transmission for leaks.
- ❑ Inspect front disc pads for wear. Disc surface condition.
- ❑ Inspect rear brake drums and linings.
- ❑ Check and adjust park brake.
- ❑ Check wheel nut torque, tyre wear and tyre pressures.
- ❑ Check all brake and fuel pipes and hoses for condition, attachment and routing.
- ❑ Inspect front and rear suspension and steering system for damaged, loose or missing parts, signs of wear or lack of lubrication. Inspect power steering pipes and hoses for condition, attachment and routing and leaks.
- ❑ Inspect exhaust system and adjacent underbody. Look for damaged, missing or misaligned parts, open seams, holes or loose connections. Run vehicle and check for exhaust leaks.
- ❑ Inspect all constant velocity joints for damaged or torn boots and rubber couplings for tears and splits.
- ❑ Inspect manual transmission oil level.
- ❑ Inspect steering wheel and linkage.
- ❑ Inspect drive shaft boots.

Vehicle interior

- ❑ Replace pollen filter (if required).
- ❑ Replace remote control batteries.
- ❑ Check park brake operation.
- ❑ Seat belt inspection. Check webbing condition, buckle operation and retractor mechanism operation.

Vehicle exterior

- ❑ Check operation of all exterior lights.
- ❑ Lubricate bonnet catch, door hinges and all lock cylinders.
- ❑ Check transmitter range of remote control.

Road Test

- ❑ Check for braking, steering, engine response and transmission operation.
- ❑ Check park pawl operation.
- ❑ Check air conditioner performance.
- ❑ Check neutral start switch.
- ❑ Check for, and complete, all relevant outstanding service campaigns and manufacturer recalls.

Notes

INDEX

After sales service 9-8
Airbags 6-11
Airbag indicator 1-8
Air conditioning 1-14
Air pressures (tyres) 7-9
Alarm 2-3
Antenna 3-15
Ashtray
  Front 1-18
Assist grip 3-16
Automatic transmission
  Operation 4-8
  Fluid level 7-7
ABS 4-11

Battery (when flat) 6-9
  Maintenance 7-12
Battery specifications 8-2
Battery warning lamp 1-7
Bonnet release 1-19
Boot lock 2-4
Brakes 4-5
  Fluid level 7-7
  Warning lamp 1-6
Bulbs (replacement) 6-21

Capacities (fluid) 8-2
Carbon monoxide warning 5-2
Centre console 3-16
Child restraints 3-10
Cigarette lighter 1-18
Cleaning 11-2
Clock 1-5
Clutch fluid level 7-7
Cooling system
  Fluid level 7-4
  Overheating 6-6
  Temperature gauge 1-4
Cupholders 3-17
Customer assistance 9-2

Dashboard layout 1-2
Demister 1-17
Dimmer 1-5
Dipstick 7-5
Dome lamp
  Bulb replacement 6-22
  Operation 3-15
Door locks 2-6
Door ajar lamp 1-7
Driving precautions 4-4

INDEX cont.

Emission control system 5-4
Engine
- Cooling system 7-4
- Identification number 8-4
- Overheating 6-8
- Specifications 8-2
- Starting (petrol) 4-3
- Warning lamp 1-7

Engine oil
- Capacity 8-2
- Checking levels 7-5
- Consumption notes 7-6
- Pressure light 1-6

Exhaust gas warning 5-2

Flashers
- Hazard warning 1-13
- Turn signal 1-12

Flat battery 6-11
Flat tyre 6-2
Fluid capacities 8-2
Fluid levels
- Automatic transmission 7-7
- Brake 7-7
- Clutch 7-7
- Coolant 7-4
- Oil 7-5
- Power Steering 7-8
- Windshield washer 7-8

Fuel 5-2
- Economy tips 5-5
- Gauge 1-4
- Refilling 5-3
- Warning light 1-6

Fuel tank specifications 8-2
Fumes (petrol) caution 5-2
Fuses 6-15

Gauges 1-3
Gear oil 8-3
Glovebox 1-18
G.V.M.R. 10-2

Hand brake (warning lamp) 1-6
Hazard warning flashers 1-13
Head restraint 3-4
Heater controls 1-14
Headlamp switch 1-11
High beam indicator lamp 1-6
Hold indicator lamp 1-8
Hold mode 4-9
Horn 1-10

INDEX cont.

Identification numbers 8-4
Ignition switch 1-12
Immobiliser 1-13
Indicators (turn signals) 1-12
Indicator/warning lamps 1-6
Infant & child restraints 3-10
Inflation (tyres) 7-9
Instrument panel 1-3
Interior (dome) lamp 3-15

Jack 6-2
Jump starting 6-9

Keys 2-2
Keyless entry 2-2

License plate lamp 6-24
Lamps
- Bulb replacement 6-21
- Instrument panel 1-6
- Headlamp switch 1-11
- Interior (dome) lamp 3-15

Loading information 4-5,10-2
Locks 2-4
- Bonnet 1-19
- Childproof 2-6
- Door 2-4
- Electric door 2-2
- Fuel filler 5-3
- Glovebox 1-18
- Ignition 1-12
- Boot 2-4

Lubricants 8-3

Maintenance schedule 12-6
Malfunction indicator lamp 1-7
Manual transmission
- Fluid type 8-3
- Operation 4-7

Mirrors 3-12
Miscellaneous checks 7-2
Model identifications 8-4

New vehicle running-in 4-4

Octane rating (fuel) 5-3
Odometer 1-3
Oil
- Capacity 8-2
- Level 7-5
- Low pressure warning 1-6

Overheating 6-6
Owner responsibility
- Emission controls 5-4
- Weekly checks 7-2
- Maintenance service 12-2

Paintwork cleaning 11-5
Park brake
- Lever 3-17

Parking 4-2
Petrol 5-3
Power steering 4-5
- Fluid level 7-8
- Precaution 4-5

Power windows 3-14

INDEX cont.

Radiator ..... - See 'Cooling system'
Radio 1-10
Rear seats 3-3
Rear vision mirrors 3-12
Remote control
  Door locks 2-2
  Matching transmitter 2-4
  Transmitter 2-3
Restraints 3-8
Roadside Assistance 9-4
Running-in 4-4

Safer Driving precautions 4-4
Safety 4-2
Seat adjustment 3-2
Seat belts 3-5
Seat belt reminder lamp 1-8
Security indicator warning lamp 2-3
Serial number 8-4
Service 12-2
Shift lock control system 4-9
Snow chains 4-6
Spare wheel 6-2
Specifications 8-2
Speedometer 1-3
Starting
  Flat Battery 6-9
  Normal engine 4-3
Steering (power) 4-5, 7-5
Steering (tilt) 3-13
Stop/tail bulb replacement 6-23
Storage 3-17
Sun visors 3-16

Tachometer 1-4
Temperature gauge 1-4
Tilt steering 3-13
Towing 10-3
  Disabled vehicle 6-5
  Precautions 10-3
Transmission
  Automatic 4-8
  Manual 4-7
  Shift lock control system 4-10
Tripmeter 1-3
Turn signal
  Bulb replacement 6-22
  Operation 1-12
Tyres
  General 7-9
  Grip 4-5

Vanity mirror 3-16
Vehicle identification number 8-4
Vehicle loading 10-2
Vehicle weights 10-2
Ventilation system 1-16

Warning lamps 1-6
Warranty 9-6
Warranty (parts & accessories) 9-8
Washing 11-5
Weekly checks 7-2
Wheel changing 6-2
Wheel replacement 7-11
Windows 3-14
Windshield
  Wiper/washer control lever 1-9
  Fluid level 7-8